



# **Graphic Simulation Generation Tool (GSGT)**

## **User Reference Guide**

September 2, 2020

JVN Tool Suite v12.3.3 Volume 2

Copyright © 2020

JVN Communications Inc.  
2511 Fire Rd.  
Suite A4  
Egg Harbor Township, NJ 08234  
609-569-1477  
[www.jvncomm.com](http://www.jvncomm.com)

## TABLE OF CONTENTS

<b>1. GSGT Overview</b> .....	<b>9</b>
<b>2. Getting Started</b> .....	<b>10</b>
<b>3. System Configuration</b> .....	<b>12</b>
3.1. Environment Variables .....	12
3.2. Starting GSGT .....	12
3.2.1. Command Line Options .....	13
3.2.2. GSGT Modes .....	14
3.3. Graphical User Interface.....	15
3.3.1. Menu Bar .....	15
3.3.2. Toolbar .....	16
3.3.3. Map Display .....	17
3.3.4. Status Bar .....	27
3.3.5. Context Boxes.....	28
<b>4. GSGT Scenarios</b> .....	<b>29</b>
4.1. Creating a New Scenario .....	29
4.1.1. Adaptation Selection .....	29
4.1.1.1. Single Adaptation .....	30
4.1.1.2. Multiple Adaptations.....	30
4.1.1.3. Adding Child Adaptation or Customization File .....	31
4.1.1.3.1. Adding STARS Terminal Adaptation .....	31
4.1.1.3.2. Adding TBFM Adaptation.....	34
4.1.1.3.3. Removing Child Adaptation .....	38
4.1.2. Scenario Location and Name .....	39
4.1.3. Weather Selection .....	40
4.1.4. Scenario Overwrite Warning .....	41
4.2. Open an Existing Scenario .....	41
4.2.1. Load Progression Display.....	43
4.2.2. Scenario File Loading Errors .....	43
4.3. Edit Scenario.....	44
4.3.1. Create a New Object.....	45
4.3.2. Delete Object.....	45
4.3.3. Edit Object.....	46
4.3.4. Replicate Object .....	47
4.4. Save Scenario .....	50
4.4.1. Scenario Overwrite Warning .....	51
4.4.2. Save Scenario Before Exit .....	51
<b>5. Scenario Editor</b> .....	<b>52</b>
5.1. Preferences .....	52

5.1.1.	Edit Preferences .....	52
5.2.	Sensors .....	55
5.3.	RSIs .....	56
5.3.1.	Create and Edit RSI .....	56
5.3.2.	Edit Objects Associated with Specific RSI .....	57
5.4.	Adaptation Equipment and DS .....	58
5.5.	System Commands .....	59
5.5.1.	Create and Edit System Command .....	59
5.5.1.1.	Message Editor .....	60
5.6.	Targets .....	62
5.6.1.	Create and Edit Target .....	63
5.6.1.1.	Target - Main .....	63
5.6.1.2.	Target - Dynamics .....	67
5.6.1.3.	Target - Messages .....	76
5.6.1.3.1.	Auto Deriving Target Messages .....	78
5.6.1.3.2.	Edit Prefs .....	79
5.6.1.3.3.	FP Overrides .....	81
5.6.1.3.4.	FPL/CPL Overrides .....	82
5.6.1.3.5.	Manually Creating Messages .....	83
5.6.1.3.6.	Validating Messages (RTCS & TTP) .....	83
5.6.1.4.	Target Dysim Definitions .....	84
5.6.2.	Target List Context Menu .....	86
5.6.3.	Target Conflict Message .....	87
5.7.	Script Definitions .....	88
<b>6.</b>	<b>Preview .....</b>	<b>90</b>
6.1.	Scenario Preview .....	91
6.2.	Show Flight Path .....	93
6.3.	Clone a Flight .....	95
<b>7.</b>	<b>Import Functions .....</b>	<b>97</b>
7.1.	Import GSGT Scenario .....	97
<b>8.</b>	<b>Reports and Tools .....</b>	<b>104</b>
8.1.	GSGT Session Log .....	105
8.2.	Sorted Scenario Listing .....	106
8.3.	Message Injection Report .....	107
8.4.	Paired Target Display .....	108
8.5.	Simulated Target Position .....	109
8.6.	FAV Traversal Report .....	111
8.7.	Simulated Radar Target Count .....	113
<b>9.</b>	<b>Weather Editor .....</b>	<b>115</b>
9.1.	Starting the Weather Editor .....	116
9.1.1.	Command Line Options .....	116
9.1.2.	Loading Adaptation .....	117

---

9.2. Weather Editor GUI .....	120
9.2.1. Weather Time Slice Windows.....	120
9.2.2. Weather Editor Menus .....	120
9.2.3. Weather Information.....	125
9.2.4. Viewer Configuration.....	125
9.3. Creating a New Weather Scenario .....	126
9.3.1. Location and Name.....	127
9.3.2. Weather Time Slices .....	128
9.4. Open an Existing Weather Scenario .....	130
9.5. Edit weather scenario.....	131
9.5.1. RUC Editor .....	131
9.5.1.1. Temperature .....	133
9.5.1.2. Pressure .....	134
9.5.1.3. Wind.....	135
9.5.2. Precipitation Editor.....	137
9.5.2.1. Precipitation.....	138
<b>10. Source Scenario Files.....</b>	<b>141</b>
10.1. Scenario Components .....	141
10.2. Targets.....	142
10.3. System Commands .....	143
10.4. Preferences .....	143
10.5. Record Select Indicators .....	144
10.6. Script Definitions .....	144
10.7. Active Runways .....	145
10.8. Restrictions.....	145
10.9. Pilot Controls.....	146
10.10. Device Control .....	146
<b>Appendix A. Acronyms .....</b>	<b>148</b>

## TABLE OF FIGURES

Figure 1. GSGT Processor Login .....	10
Figure 2. GSGT Processor Desktop.....	11
Figure 3. GSGT GUI.....	15
Figure 4. Menu Bar.....	15
Figure 5. Toolbar .....	16
Figure 6. Toolbar Display Control .....	17
Figure 7. Map Display Menus and Tools.....	17
Figure 8. Menu Tear-off.....	17
Figure 9. Map Selection .....	18
Figure 10. Background Maps .....	19
Figure 11. Airspace Options.....	19
Figure 12. ARTCC Options .....	21
Figure 13. Radar Options .....	23
Figure 14. MLAT Options .....	23
Figure 15. WAM Options.....	24
Figure 16. ADS-B Options.....	24
Figure 17. Weather Options.....	25
Figure 18. Site Definition Data .....	25
Figure 19. Find Menu .....	26
Figure 20. Flight Level .....	26
Figure 21. Zoom .....	27
Figure 22. Range .....	27
Figure 23. Status Bar .....	27
Figure 24. Context Boxes .....	28
Figure 25. Loading Adaptation List .....	30
Figure 26. Selecting an ERAM Adaptation .....	30
Figure 27. Selecting Multiple ERAM Adaptations.....	31
Figure 28. Adding STARS Adaptation .....	32
Figure 29. Selecting the STARS Adaptation Location.....	32
Figure 30. Selecting the TRACON Folder.....	33
Figure 31. Selecting a Site File .....	33
Figure 32. STARS Adaptation Added.....	34
Figure 33. Adding TBFM Adaptation.....	35
Figure 34. Selecting TBFM Location.....	35
Figure 35. Selecting TBFM Adaptation.....	36
Figure 36. TBFM Adaptation Added.....	37
Figure 37. Removing a Child Adaptation .....	38

Figure 38. Selecting a Scenario Location and Name.....	39
Figure 39. Selecting a Weather Scenario.....	40
Figure 40. Scenario Overwrite Warning.....	41
Figure 41. Opening an Existing Scenario.....	42
Figure 42. Load Progression.....	43
Figure 43. Loading Errors.....	43
Figure 44. Scenario Editor.....	44
Figure 45. Creating a New Object.....	45
Figure 46. Object Delete Confirmation.....	45
Figure 47. Object Editor.....	46
Figure 48. Replication Editor.....	47
Figure 49. Replications.....	49
Figure 50. Save Scenario.....	50
Figure 51. Scenario Overwrite Warning.....	51
Figure 52. Save Before Exit.....	51
Figure 53. Terminal and ERAM Sim Mode Tabs.....	52
Figure 54. Normal and Dysim Modes Tabs.....	52
Figure 55. Preferences Tabs.....	53
Figure 56. Sensors Tab.....	55
Figure 57. Filtering the Editor.....	57
Figure 58. RSI Filter Selection.....	58
Figure 59. Objects Filtered by RSI.....	58
Figure 60. Message Editor.....	60
Figure 61. Targets Tab.....	62
Figure 62. Target Editor Main Tab.....	64
Figure 63. FH Message Preview.....	67
Figure 64. Target Editor Dynamics Tab.....	68
Figure 65. Show Flight Path.....	70
Figure 66. Target Event Editor.....	71
Figure 67. Target Editor Messages Tab.....	77
Figure 68. Freeze Derived Messages.....	78
Figure 69. Target Specific Preferences.....	80
Figure 70. Edit Prefs Attention Icon.....	81
Figure 71. Flight Plan Override Editor.....	81
Figure 72. Edit FP Overrides Attention Icon.....	82
Figure 73. ICAO Flight Plan Overrides Editor.....	82
Figure 74. RTCS and TTP Message Validation.....	84
Figure 75. Validation Successful.....	84
Figure 76. Target Editor Dysim Tab.....	85
Figure 77. Target List Context Menu.....	86
Figure 78. Target Conflict Warning.....	87

---

Figure 79. Script Definitions Tab.....	89
Figure 80. Preview Options.....	90
Figure 81. Scenario Preview.....	91
Figure 82. Preview Controls.....	92
Figure 83. Snapshot Options.....	93
Figure 84. Show Flight Path.....	94
Figure 85. Target Flight Path.....	95
Figure 86. Cloning a Flight in Preview.....	96
Figure 87. Import Scenario.....	97
Figure 88. Scenario Selection.....	98
Figure 89. Select Scenario Elements.....	99
Figure 90. Select Display Items.....	100
Figure 91. Import Errors and Warnings.....	101
Figure 92. NASQuest Import.....	101
Figure 93. Import CSV File.....	102
Figure 94. Import CSV Options.....	102
Figure 95. CSV Import Status.....	103
Figure 96. Main Reports Menu.....	105
Figure 97. Scenario Editor Reports Menu.....	105
Figure 98. GSGT Session Log.....	106
Figure 99. Sorted Scenario List Options.....	106
Figure 100. Sorted Scenario List Report.....	107
Figure 101. Message Injection Report.....	108
Figure 102. Paired Target Report Options.....	109
Figure 103. Target Position Report Options.....	110
Figure 104. Target Position Report File List.....	111
Figure 105. Target Position Report.....	111
Figure 106. FAV Traversal Report.....	112
Figure 107. Target Count Report Options.....	113
Figure 108. Target Count Report.....	114
Figure 109. Weather Editor.....	115
Figure 110. Loading Adaptation.....	117
Figure 111. Selecting an Adaptation.....	118
Figure 112. Adaptation Display.....	119
Figure 113. Menu Bar.....	121
Figure 114. Map Selection.....	121
Figure 115. Weather Data Selections.....	122
Figure 116. ARTCC Options.....	122
Figure 117. Enter Pointer Mode Menu Button.....	123
Figure 118. Enter Selection Mode Menu Button.....	123
Figure 119. Pressure Altitude Options.....	124

---

Figure 120. Flight Level .....	124
Figure 121. Zoom .....	124
Figure 122. Range .....	124
Figure 123. Weather Information Bar.....	125
Figure 124. Weather Scenario Name and Location .....	127
Figure 125. WeatherTime Slices .....	128
Figure 126. Deleting a Time Slice.....	129
Figure 127. Select Existing Weather Scenario .....	130
Figure 128. Enter Selection Mode .....	131
Figure 129. RUC Editor .....	132
Figure 130. Selecting Weather Cells .....	133
Figure 131. Defining Temperature.....	134
Figure 132. Defining Pressure .....	135
Figure 133. Defining Wind .....	136
Figure 134. Precipitation Editor .....	137
Figure 135. Defining Precipitation .....	139


## 1. GSGT Overview

The Graphic Simulation Generation Tool (GSGT) generates scenarios based on National Air Space (NAS) adaptation for simulation of traffic to various Air Traffic Control (ATC) systems. These scenarios can be used as a source of real time inputs to facilitate testing and integration of NAS ATC systems and related subsystems. GSGT employs a Graphical User Interface (GUI) to aid in scenario development and is capable of automatically generating flight data messages.

GSGT has the capability of creating scenarios for dynamic injection. When launched in dynamic simulation mode, GSGT generates the initial flight plans and departure messages. All other flight data messages are generated when the scenario is executed.

## 2. Getting Started

The processor with GSGT installed is configured to boot up to a user login screen. Users can enter a username and password, then click the login button or press **Enter** on the keyboard.

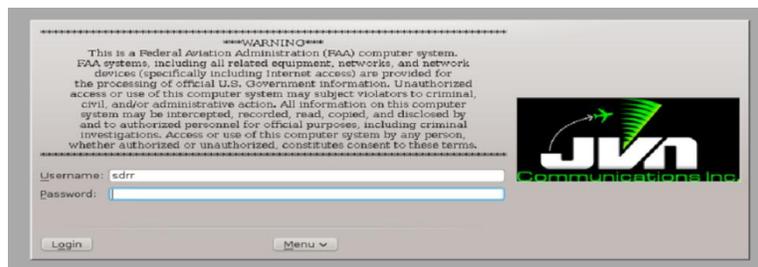

**Figure 1. GSGT Processor Login**

**NOTE:** The 'root' user does not have access to the GSGT commands and utilities. If root access is needed while logged in, the user should either log out and log in again as 'root' or open a terminal window, type `su` and enter the 'root' user password.

After a short loading period the KDE desktop will appear.



Figure 2. GSGT Processor Desktop

## 3. System Configuration

### 3.1. Environment Variables

GSGT uses environment variables for the locations of source and exported scenario files, weather scenarios, and adaptation data, including En Route Automation Modernization (ERAM), Standard Terminal Automation Replacement System (STARS), and Time Based Flow Management (TBFM) adaptation files.

**Table 1. Environment Variables**

Variable Name	Description	Default Location
GSGT_WORK_PATH	Location of source scenario files.	/usr/local/gsgt
SDRR_SCENARIO_PATH	Location of exported SDRR scenario files.	/usr/local/scenarios
WX_PATH	Location of weather scenarios.	/opt/wx
ADAPTATION_PATH	Location of adaptation data.	/opt/adaptation

### 3.2. Starting GSGT

To start GSGT from the command line, enter:

```
> gsgt
```

To launch a GSGT version that is not the default version, enter:

```
> /usr/local/jvn.x.x.x/bin/gsgt
```

**NOTE:** Starting GSGT from a command line while inside the scenario directory will automatically open that scenario.

### 3.2.1. Command Line Options

GSGT can be started with various options which control its operation.

**Table 2. Program Parameters**

Parameter	Description
--dysimMode	DYSIM mode for dynamic scenario execution with the ERAM system.
--eramSimMode or --terminalMode	ERAM simulation mode or Terminal mode for dynamic scenario execution without an ERAM system.
--native	Default mode. Same as no parameter. Native mode provides the ability to export the scenario to SDRR for static execution with the ERAM system.
--opengl	Opens the GSGT log
--proxy=server/port	Opens GSGT with specific server/port
--version	Display GSGT version.
--nofullscreen	Not full screen mode; GSGT will be started in a window roughly half the size of the screen.
--open	Opens the GSGT Open Scenario window
--new	Opens the GSGT New Scenario window
--help	Display application parameters.

For example, GSGT can be started in ERAM Simulation Mode:

```
> gsgt --eramSimMode
```

### 3.2.2. GSGT Modes

GSGT operates in several modes that are tailored to specific functionality.

**Table 3. GSGT Operation Modes**

Mode	Description
Normal Mode	Normal mode is tailored for creating target scenarios to be exported to SDRR for execution with the ERAM system.
DYSIM Mode	DYSIM mode is tailored for creating target scenarios for dynamic execution using the ERAM system.
Terminal/ERAM Simulation Mode	Terminal or ERAM simulation mode is tailored for creating target scenarios for dynamic execution without an ERAM system.

### 3.3. Graphical User Interface

The GSGT Graphical User Interface (GUI) includes a menu bar, a toolbar, and a large map display.

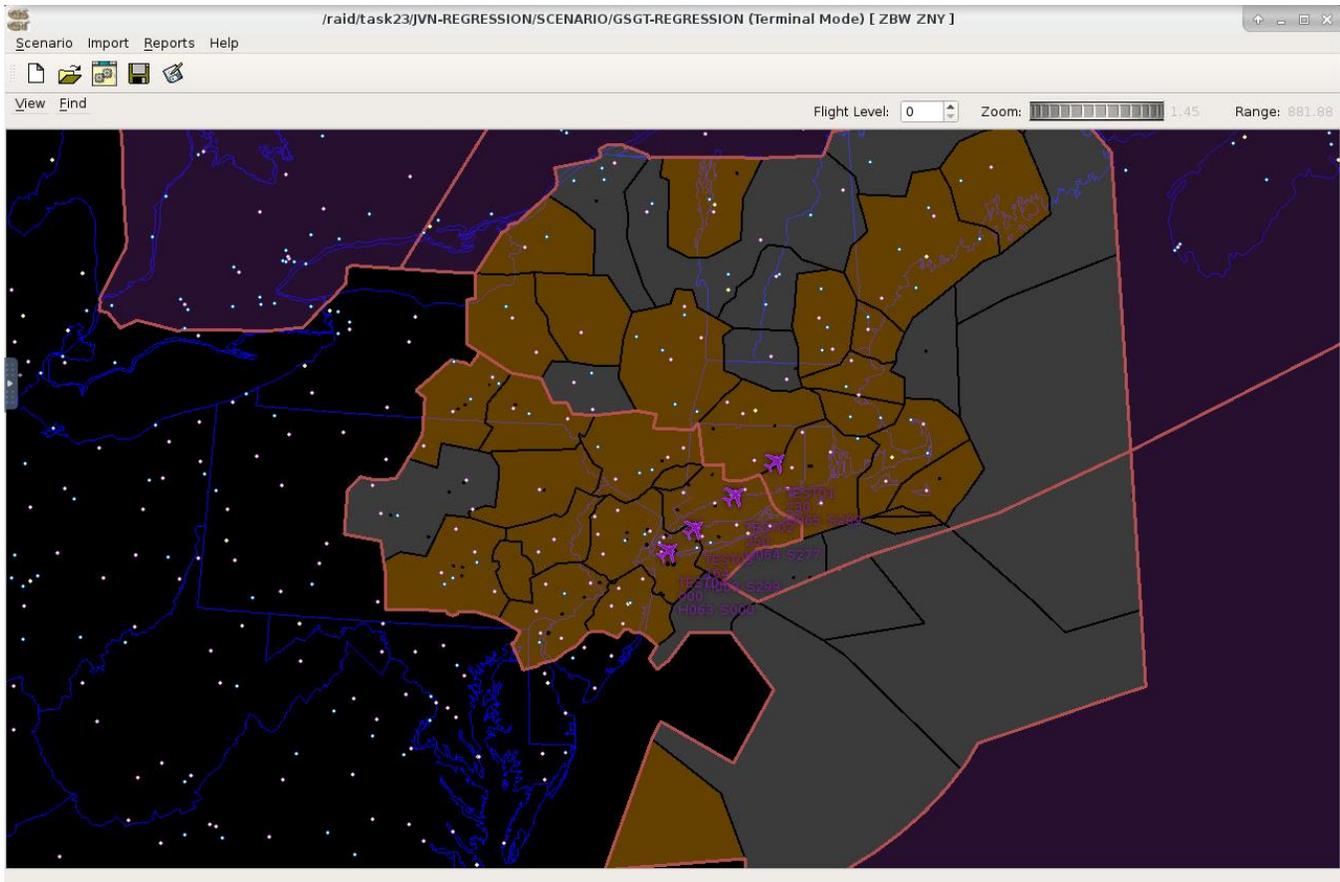


Figure 3. GSGT GUI

#### 3.3.1. Menu Bar

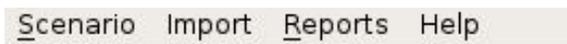


Figure 4. Menu Bar

The menu bar includes the following options:

### **Scenario**

Provides options to create a New scenario, Open an existing scenario, Edit the current scenario, Save the current scenario, Save As the current scenario with a different name, or Exit the GSGT GUI.

### **Import**

The Import menu provides options to import scenario elements from another GSGT scenario, NASQuest, or a CSV file.

### **Reports**

The Reports menu provides options to generate various reports for the currently open scenario such as: GSGT Session Log, Paired Target Display, Simulated Target Position, FAV Traversal Report, and Simulated Radar Target Count.

### **Help**

The Help menu provides options to select **About** (F1) and **Scenario Info** (F2). About displays the About GSGT dialog, and Scenario Info displays the Scenario Information dialog.

## **3.3.2. Toolbar**

The scenario toolbar includes icons to create a New scenario, Open an existing scenario, Edit the current scenario, Scenario Manager (in Normal, Terminal, and TGF Modes; Scenario Manager is not available in DYSIM Mode), Save the current scenario, and Save As to select a different name.



**Figure 5. Toolbar**

By clicking and dragging the toolbar handle (which looks like a double separator), the toolbar can be docked to either the top, bottom, left, or right of the main GSGT window or it can be left to float above the map display. The toolbar can be displayed or hidden by right-clicking anywhere on the main menu bar and selecting **Toolbar**.



**Figure 6. Toolbar Display Control**

### 3.3.3. Map Display

GSGT provides a graphical representation of various adaptation elements on the Map Display. The Map Display also has its own menus, tools, and a status bar (when invoked).




**Figure 7. Map Display Menus and Tools**

The Map Display menus are:

#### **View**

The View menu is used to select adaptation elements for background display. These elements may be displayed individually or in combinations.

**NOTE:** Each menu and submenu has a dashed line at the top. Selecting the dashed line will “tear off” the menu into a new dialog. The menu will remain displayed after a selection is made.

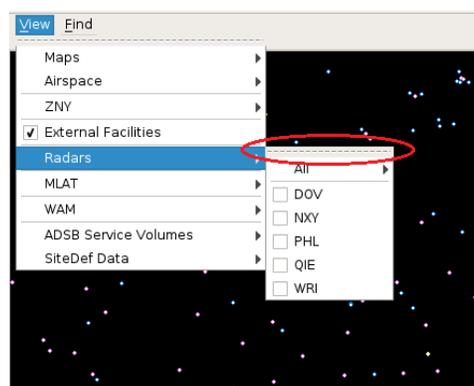


**Figure 8. Menu Tear-off**

Adaptation elements available for display are:


### Maps

Political maps displaying boundaries in blue are available, and include US Map showing state boundaries, Canada showing provinces and territories, and Mexico.

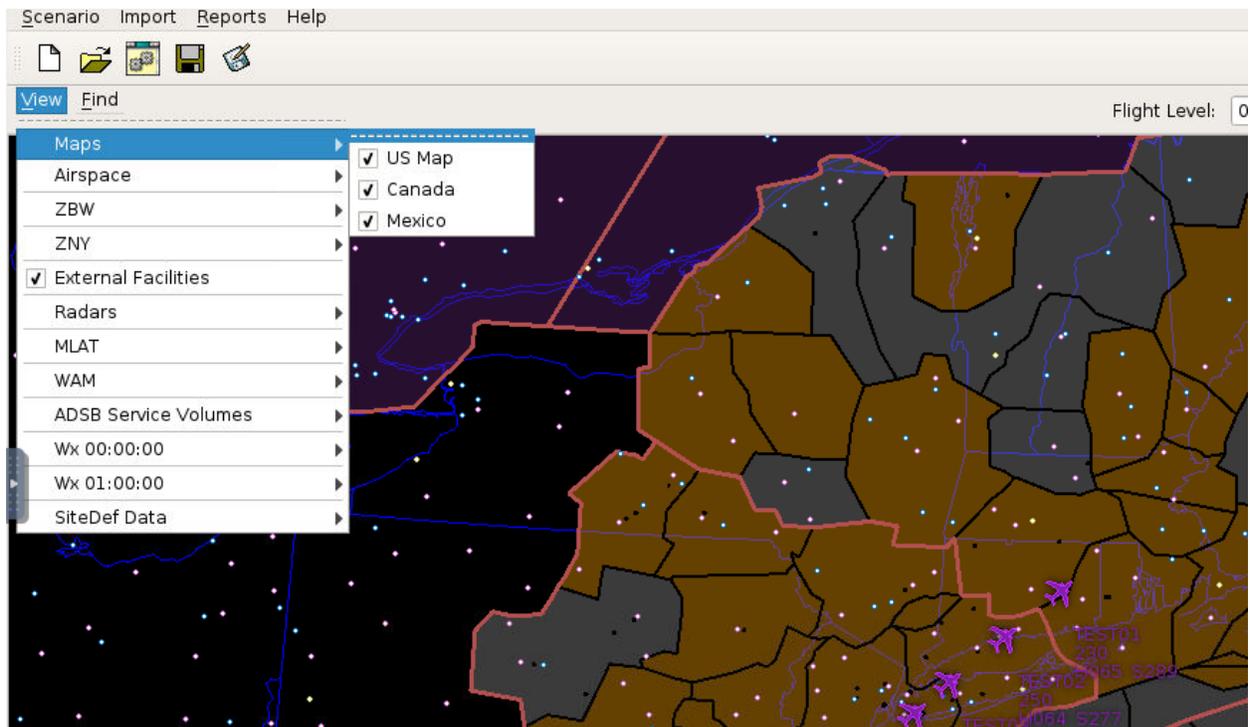

**Figure 9. Map Selection**


Background maps are available if an internet connection is established and include Virtual Earth, Open Street Map, Google Satellite, Google Street, Google Terrain, Stamen, and ThunderForest. STARS maps are also available if using a STARS adaptation and running in Terminal Mode. Select the site to display STARS maps. In the figure below, maps for STARS site 'phl' are available. The default is No Background Map.

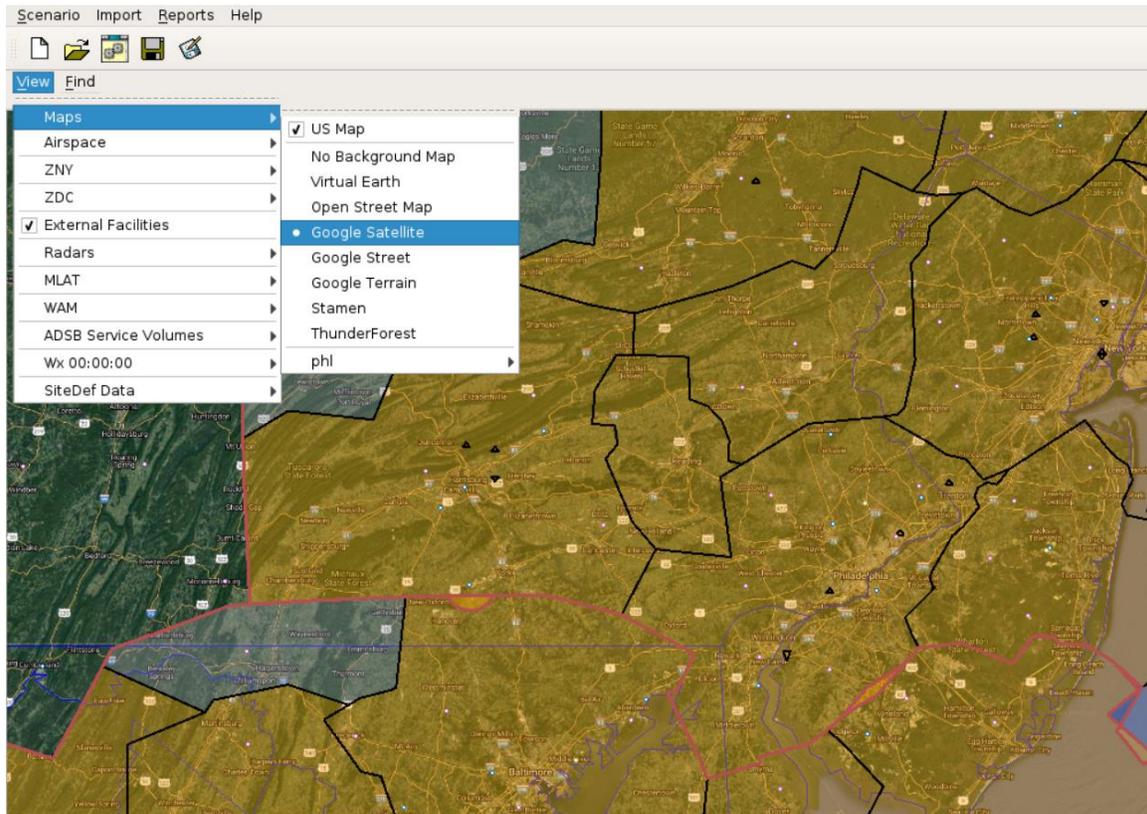

**Figure 10. Background Maps**

**Airspace**

Contains submenus with options to display national En Route data, including:

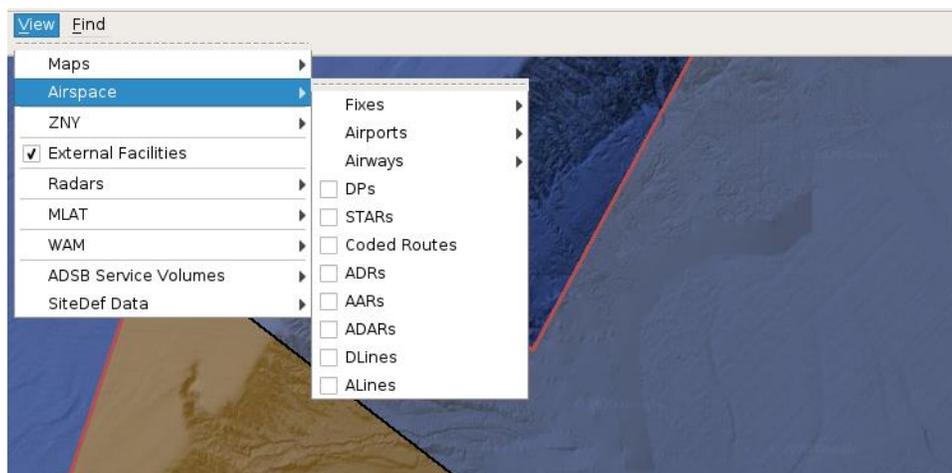

**Figure 11. Airspace Options**

### ***Fixes***

Contains a submenu with the following:

VORs (white and purple dots)

VOR Labels (purple letters)

DMEs (white and olive dots)

DMEs Labels (olive letters)

TACANs (white and olive dots)

TACANs Labels (olive letters)

NDBs (white and blue dots)

NDB Labels (blue letters)

Waypoints (white and turquoise dots)

Waypoint Labels (turquoise letters)

Fix Aliases (white and turquoise dots)

Fix Alias Labels (gray letters)

### ***Airports***

Contains a submenu with the following:

Airports (green and white triangles)

Airport Labels (green letters)

Airport Aliases (green and white triangles)

Airport Alias Labels (green letters)

### ***Airways***

Contains a submenu with the following:

High Airways (tan lines and turquoise points)

Low Airways (tan lines and turquoise points)

Other Airways (tan lines and turquoise points)

### ***DPs***

Departure Procedure (turquoise lines and points)

### ***STARs***

Standard Terminal Arrival Route (turquoise lines and points)

**Coded Routes**

adapted routes (heavy tan lines and turquoise points)

**ADRs**

Adapted Departure Routes (teal lines, gray points, and turquoise points and airports)

**AARs**

Adapted Arrival Routes (teal lines, gray points, and turquoise points and airports)

**ADARs**

Adapted Departure/Arrival Routes (teal lines, gray points, and turquoise points and airports)

**DLines**


lines in the airspace if crossed, the flight is forced onto a ADR (green lines and gray points)

**ALines**

lines in the airspace if crossed, the flight is forced onto a AAR (green lines and gray points)

**ARTCC Name**

Each En Route center adaptation included in the scenario has its own submenu with options to display local adaptation data.

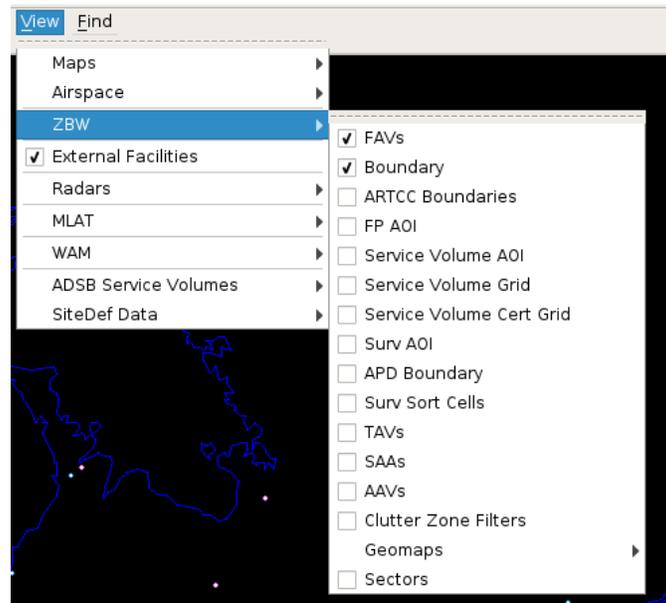

**Figure 12. ARTCC Options**

**FAVs**

Fixed Airspace Volumes (gray for ARTCC and orange for Terminal airspace)

**Boundary**

Area of responsibility (AOR) boundary (red line)

**ARTCC Boundaries**

Boundaries of all ARTCCs (dark red)

**FP AOI**

Flight Plan (FP) Area of Interest (AOI) boundary (green)

**Service Volume AOI**

ADS-B Service Volume Area of Interest boundary (blue)

**Service Volume Grid**

ADS-B Service Volume Grid (teal)

**Service Volume Cert Grid**

ADS-B Service Volume Grid for Certification (teal)

**Surv AOI**

Surveillance Area of Interest boundary (teal)

**APD Boundary**

(yellow)

**Surv Sort Cells**

**Radar** Surveillance Sort Cell Grid (green)

**TAVs**

Terrain Alert Volumes (yellow cross-hatching with red outline)

**SAAs**

Special Activities Airspace (solid orange lines, with dotted-line buffer area)

**AAVs**

Aircraft Alert Volumes (purple)

**Clutter Zone Filters**

(gray)

**Geomaps**


Contains a submenu with the names of the adapted Geomaps (white)

### Sectors

Contains a submenu with the adapted sector plans (green)

### Radars


The Radar submenu lists all adapted radar sites and an option for toggling all radar sites on or off. When a radar site is on, the range is displayed as a circle with a shaded area indicating the coverage area at the selected altitude.

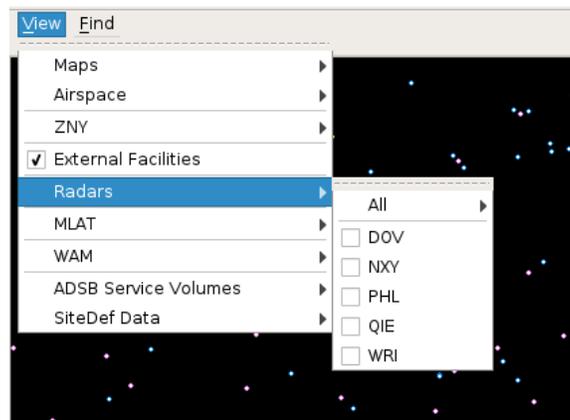

**Figure 13. Radar Options**

### MLAT

The MLAT submenu provides an option for toggling MLAT on or off. When MLAT is on, the range is displayed as a shaded circle.

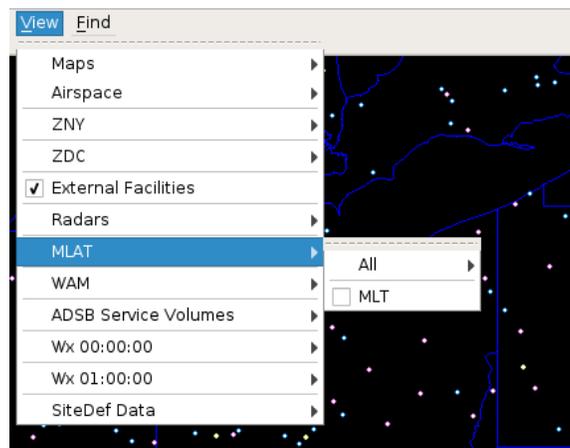

**Figure 14. MLAT Options**

## WAM

The WAM submenu provides an option for toggling WAM on or off. When WAM is on, the range is displayed as a shaded circle.

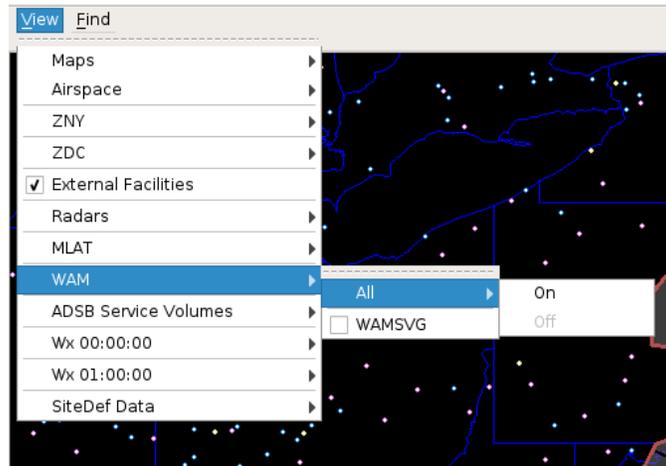


Figure 15. WAM Options

## ADS-B Service Volumes

The ADS-B Service Volumes submenu lists all adapted service volumes and an option for toggling all service volumes on or off. When a service volume is on, the range is displayed as a shaded circle.


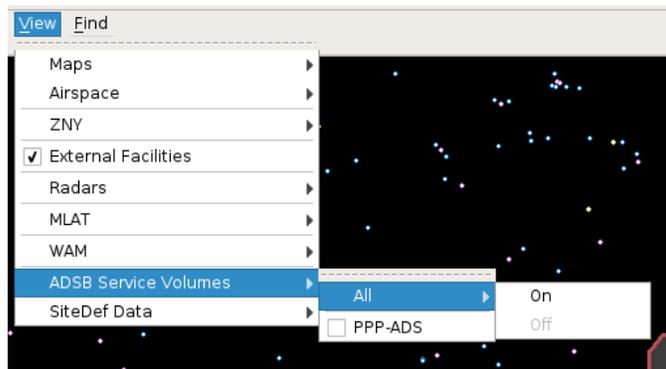


Figure 16. ADS-B Options

***WX hh:mm:ss***


If the target scenario includes a weather scenario, a WX submenu is available for each weather forecast hour and displays Temperature (various colors), Pressure (gray contour lines), Wind, (white arrow vectors) and Precipitation (various colors).

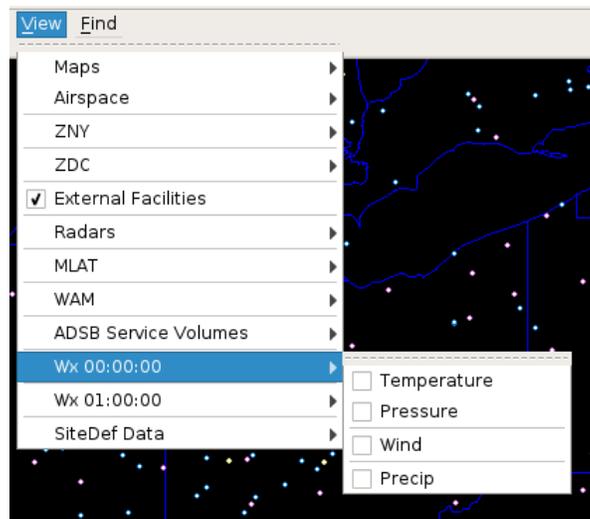

**Figure 17. Weather Options**

***SiteDef Data***

SiteDef Data contains a submenu listing all user defined macros and an option for toggling the display of all macros on or off. SiteDef Data also contains:

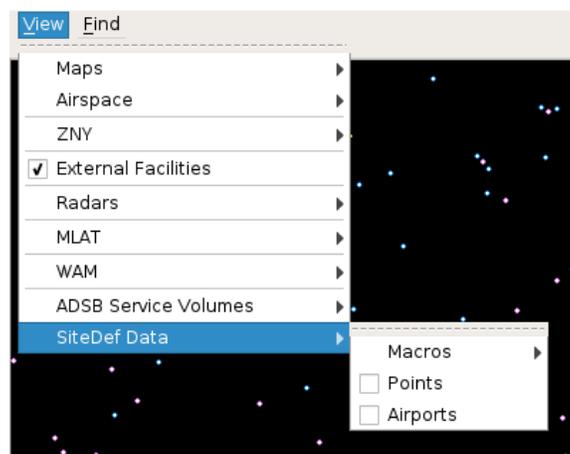

**Figure 18. Site Definition Data**

### **Macros**

User defined route macros.

### **Points**


(yellow dots)

### **Airports**

(purple triangles)

## **Find**

The Find menu can be used to search the adaptation for airspace elements by name. When found, the element(s) are added to the map display and a context box is displayed with details about the element.

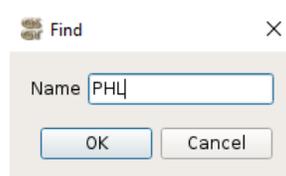

**Figure 19. Find Menu**

## **Flight Level**

The **Flight Level** tool allows an altitude to be set either by typing the value into the box or by clicking the up and down arrows. Changing the altitude also changes the sector and facility boundaries that are displayed.



**Figure 20. Flight Level**

## **Zoom**


The **Zoom** tool allows the range of the display to be adjusted using a wheel selector.



**Figure 21. Zoom**

## Range

The **Range** tool displays the horizontal size (in nmi) of the airspace showing in the map display.

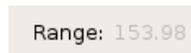


**Figure 22. Range**

### 3.3.4. Status Bar

The Status Bar, also referred to as the Measurement Bar, located on the bottom of the main window is used to display measurement information from the map. The bar is automatically displayed and updated upon user action that triggers the measurement information.

To display lat/lon and X/Y system coordinates at any specific point, hold down the **SHIFT** key while mouse clicking in any particular location on the map. Holding down the **SHIFT** key and left-click dragging the mouse will display spherical distance in nmi, heading, both true and magnetic, and delta X/Y system coordinates.

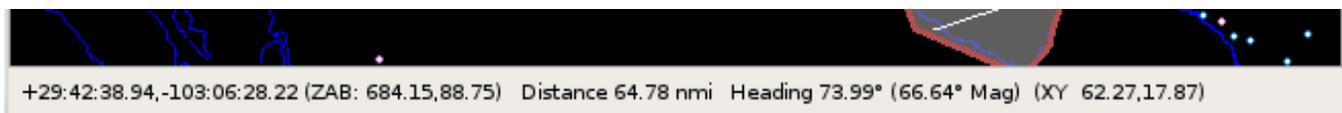

**Figure 23. Status Bar**

### 3.3.5. Context Boxes

Right-clicking on any airspace item (such as a Fix, Airport, or FAV) will cause a context box to be displayed. A context box displays information about the airspace item. The contents of each context box depend on the type of item selected and may contain a menu that includes additional data for the selected item.

When an item is selected, the color of the displayed item and the context box will match. The color used will be chosen from a list of colors, so that if multiple items are selected, they will be displayed with different colors (up to the number of colors in the list).

A context box can be closed by right-clicking again on the item, or by selecting x button on the window.

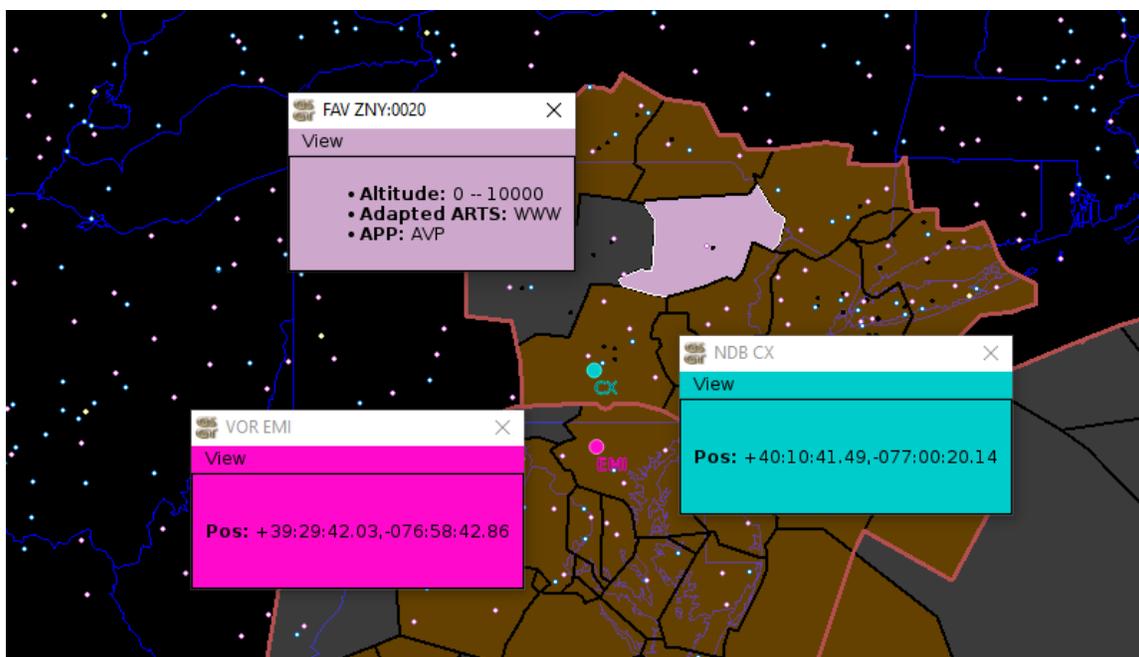


Figure 24. Context Boxes

## 4. GSGT Scenarios

### 4.1. Creating a New Scenario

Creating a new scenario generates a blank scenario with no targets, commands or any definitions. A New Scenario Wizard is used to guide the user through selections to create a new scenario by selecting a scenario name, adaptation, and optional weather scenario.

To create a new scenario, select **Scenario->New** from the GSGT Main Window.

**NOTE:** *If a scenario is already open when the **Scenario->New** option is selected, the new scenario will be automatically configured to use the same adaptation(s) as the current scenario. If you wish to select the adaptation(s), exit and re-start GSGT without opening another scenario, then select **Scenario->New**.*

#### **Back**

Goes to the previous screen.

#### **Next**

Goes to the next screen.

#### **Cancel**

Quits the scenario wizard without creating a new scenario.

#### 4.1.1. Adaptation Selection

NAS adaptation data should exist in subdirectories named eadp (or ERAM), for ERAM adaptation, STARS, and TBFM under the in ADAPTATION\_PATH directory. The first screen of the New Adaptation Wizard will display a list of these subdirectories. Expanding the eadp (or ERAM) subdirectory will result in the **Loading** window to be displayed while information about the ERAM adaptation is parsed. Once parsing of the adaptation data is completed, the list of available adaptations are displayed.

**NOTE:** *This step is skipped if another scenario was open before **Scenario->New** was selected.*

While loading adaptation list a dialog is displayed until all adaptation data information is collected.



Figure 25. Loading Adaptation List

#### 4.1.1.1. Single Adaptation

At least one ERAM adaptation must be selected. The adaptation is then parsed to create the airspace adaptation objects as well as the facility adaptation information.


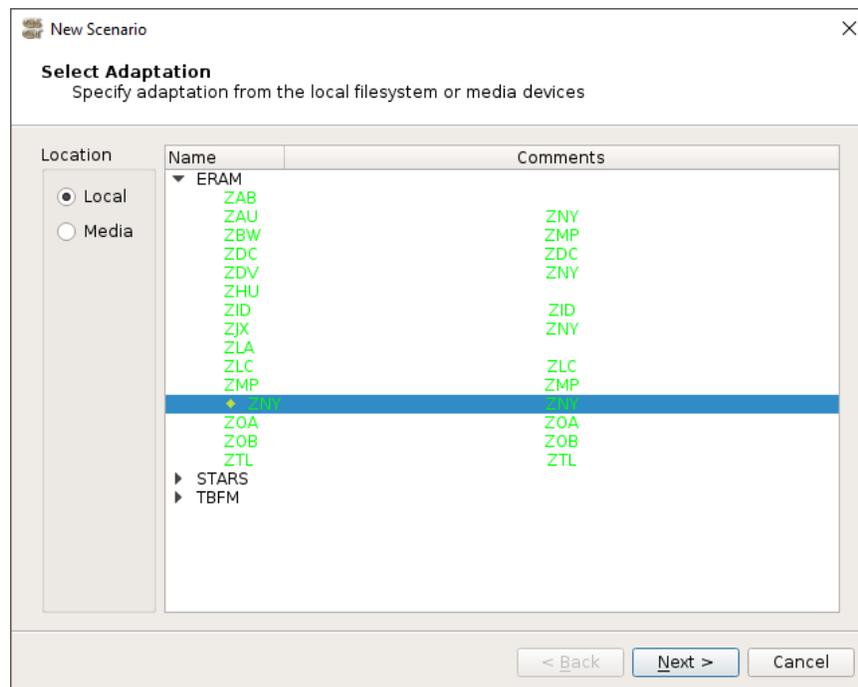


Figure 26. Selecting an ERAM Adaptation

#### 4.1.1.2. Multiple Adaptations

Multiple ERAM adaptations may be selected. The first adaptation selected (marked with a diamond in front of its name) is parsed to create the airspace adaptation objects (which define the entire airspace). All selected adaptations are parsed for their facility adaptation information. To select additional adaptations hold down the **CTRL** key while clicking on individual adaptation names, or hold

**SHIFT** key while clicking on the additional adaptation to select a range (all adaptations will be selected between the first and last adaptation selection).

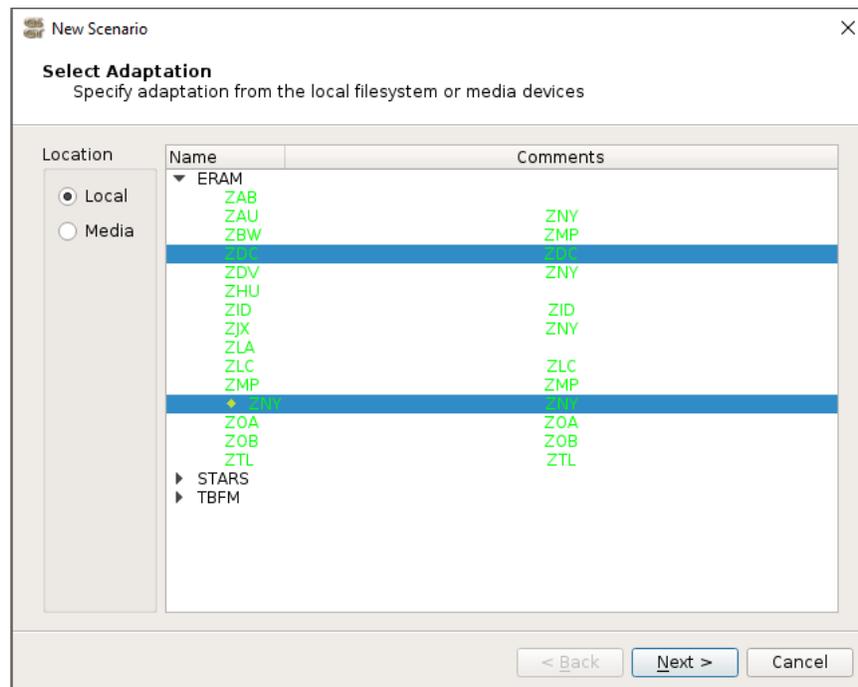


**Figure 27. Selecting Multiple ERAM Adaptations**

#### 4.1.1.3. Adding Child Adaptation or Customization File


To add child adaptation (Terminal, TBFM, etc...) or Customization, right click on the ERAM adaptation and select one of the available pop up menu options. A file manager window is displayed allowing the user to navigate to the selected adaptation or Customization File. Once the desired child adaptation is selected, click on Choose. The child will appear under the selected ERAM adaptation. This can be done for multiple adaptations, as well.

##### 4.1.1.3.1. Adding STARS Terminal Adaptation


Right click on the ERAM adaptation and select 'Add STARS ATCoach site file'. A file manager window is displayed allowing the user to navigate to the selected adaptation or Customization.

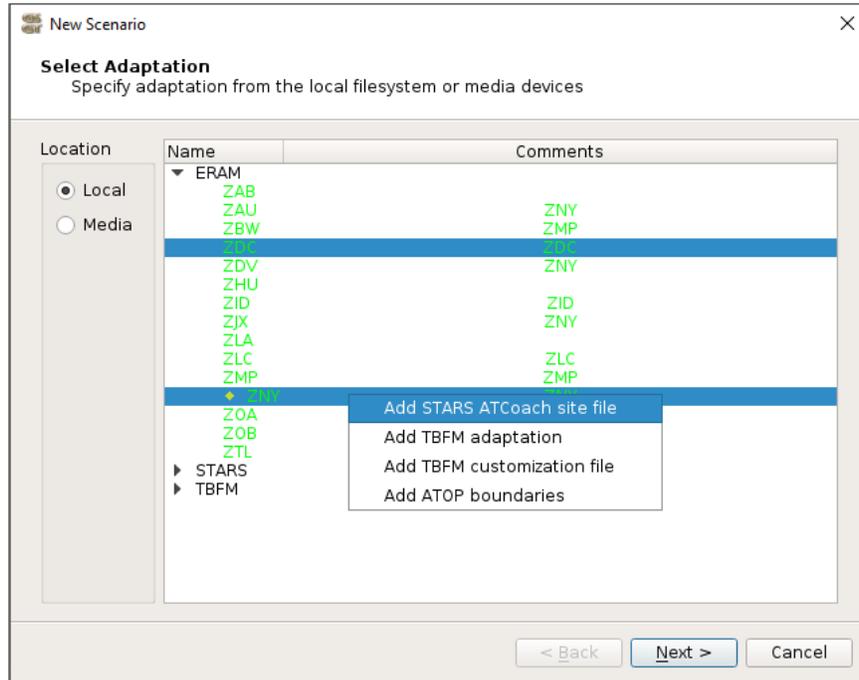


**Figure 28. Adding STARS Adaptation**

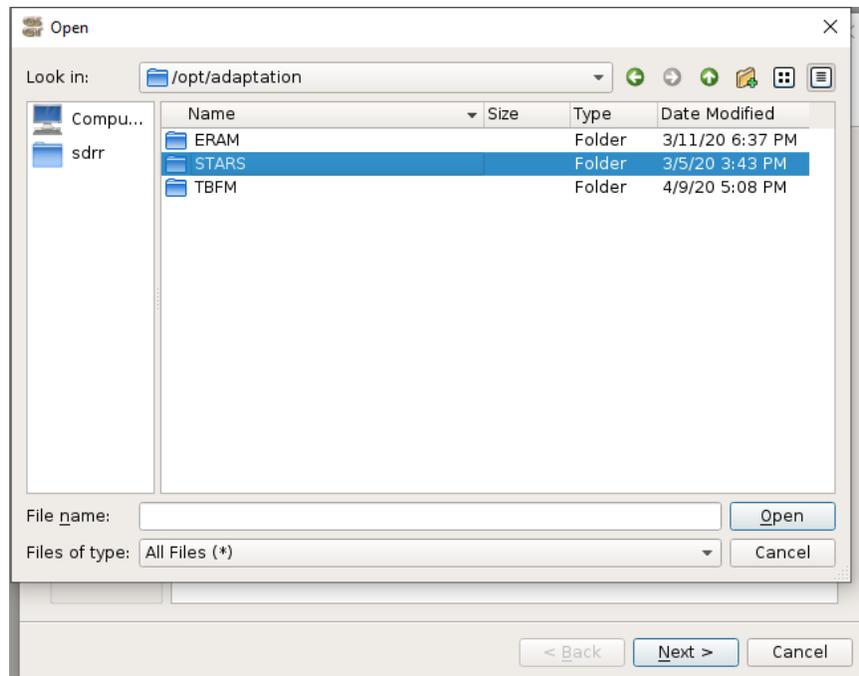


**Figure 29. Selecting the STARS Adaptation Location**

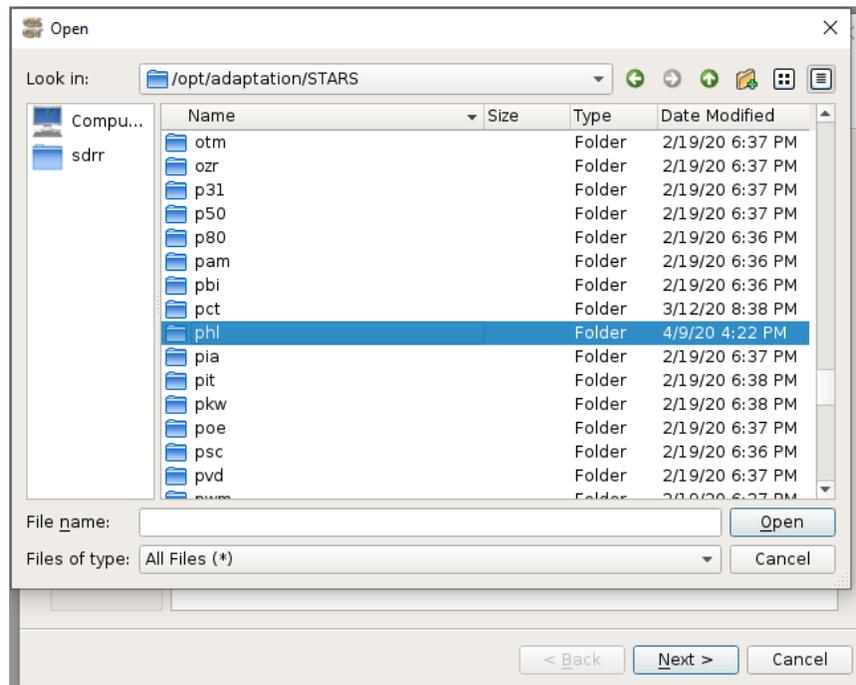

**Figure 30. Selecting the TRACON Folder**

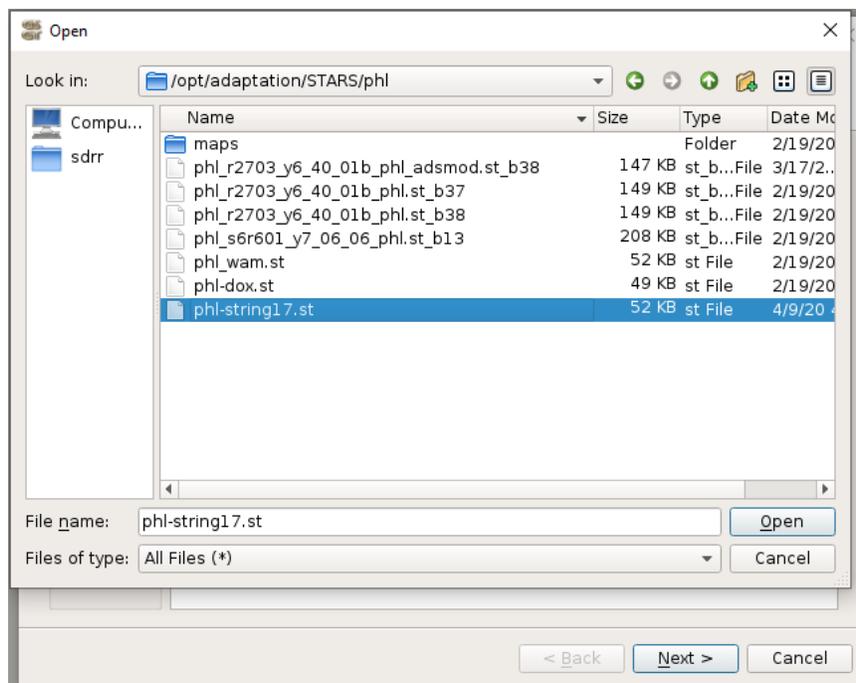


**Figure 31. Selecting a Site File**

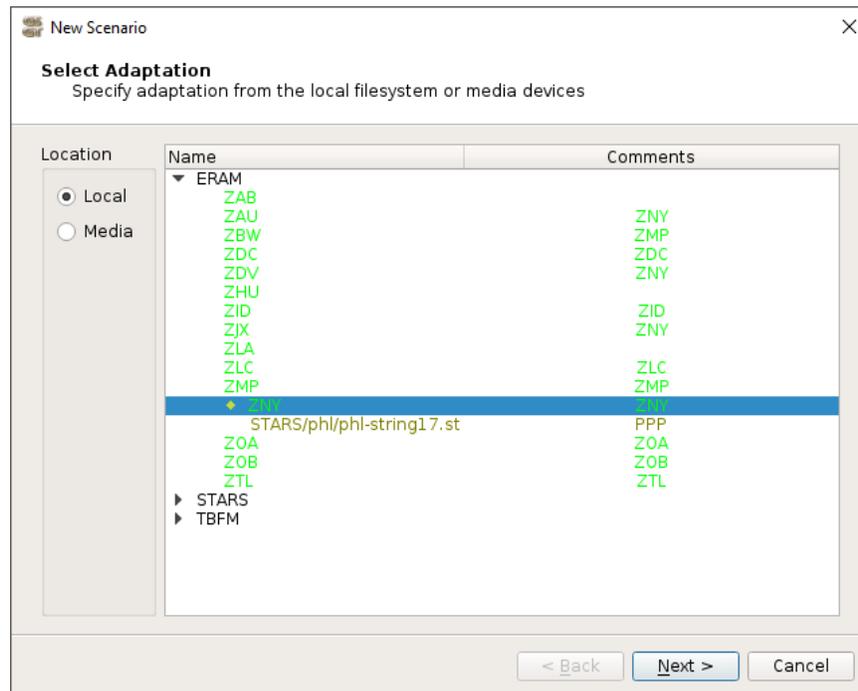


**Figure 32. STARS Adaptation Added**

#### **4.1.1.3.2. Adding TBFM Adaptation**


Right click on the ERAM adaptation and select 'Add TBFM adaptation'. A file manager window is displayed allowing the user to navigate to the selected adaptation or Customization.

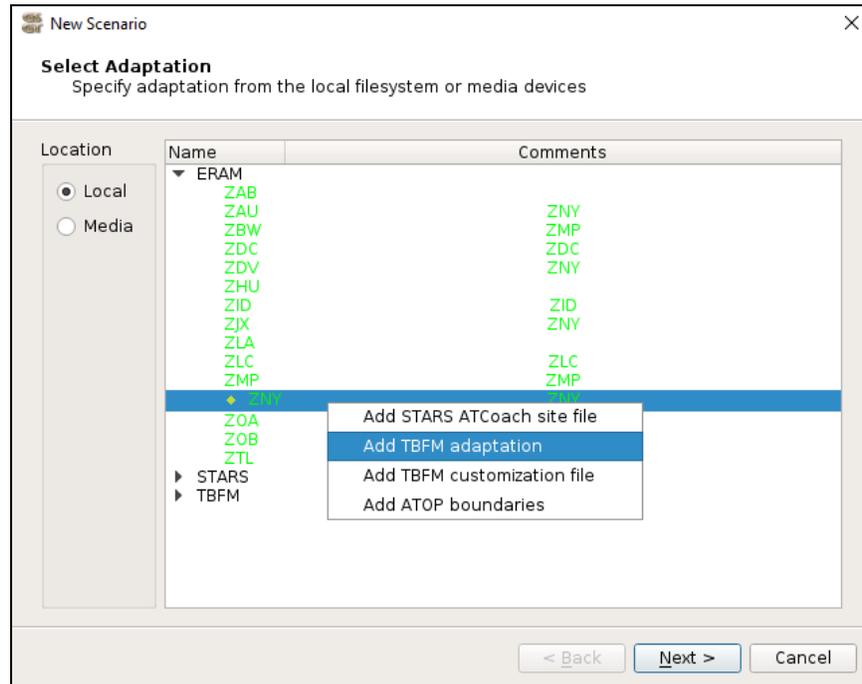


**Figure 33. Adding TBFM Adaptation**

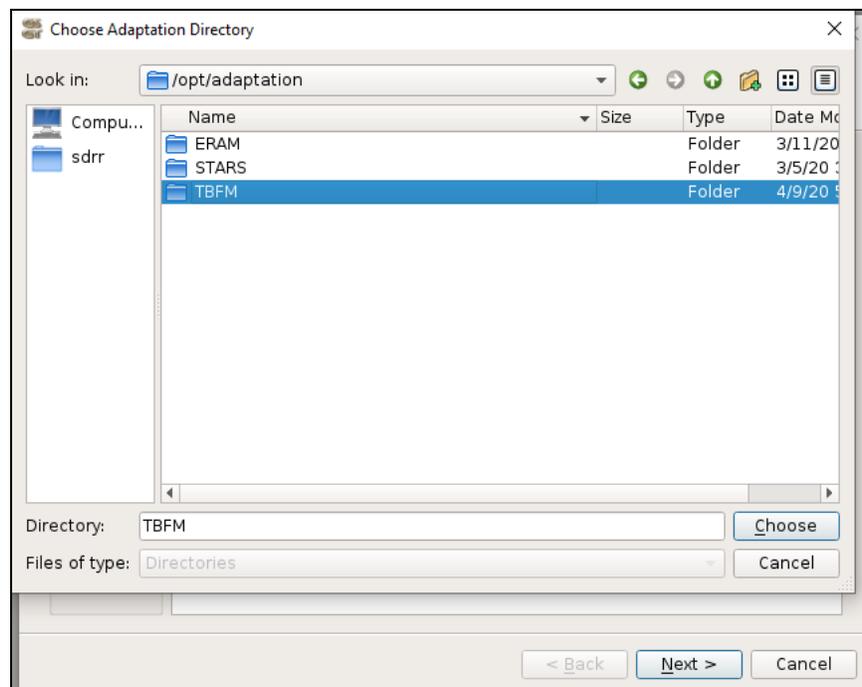

**Figure 34. Selecting TBFM Location**

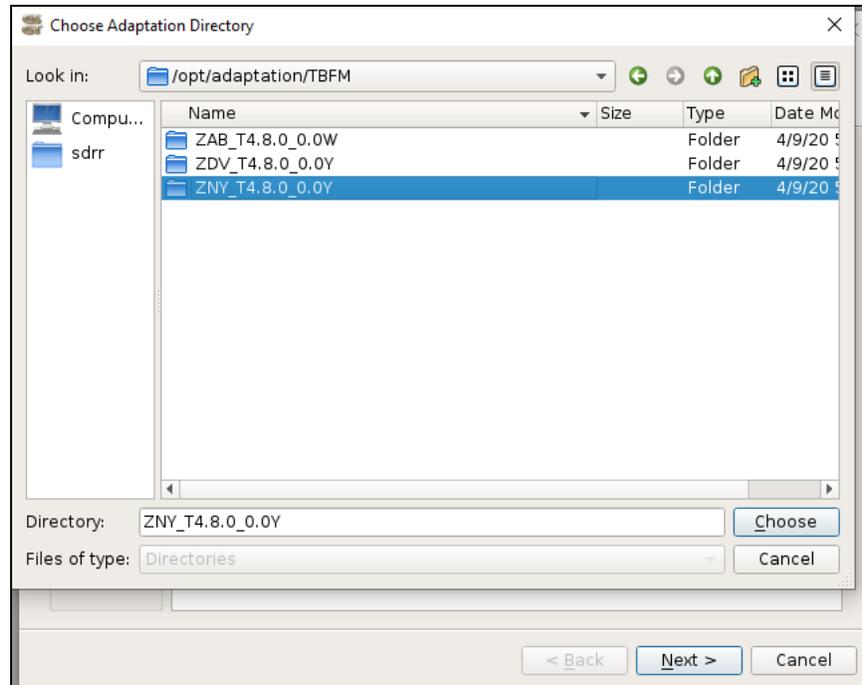

**Figure 35. Selecting TBFM Adaptation**

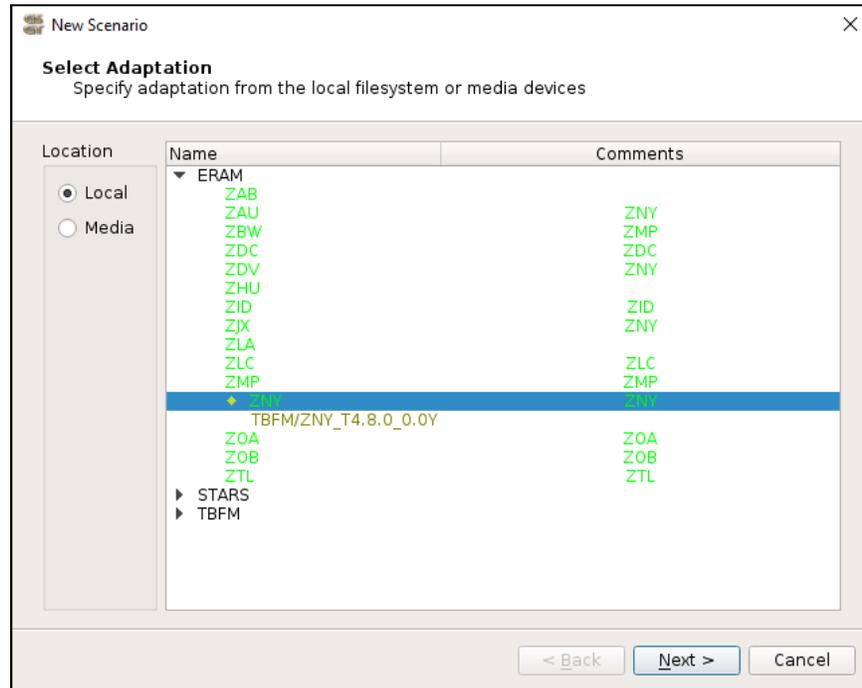

**Figure 36. TBFM Adaptation Added**

### 4.1.1.3.3. Removing Child Adaptation

Right click on the Child adaptation and select 'Remove'.


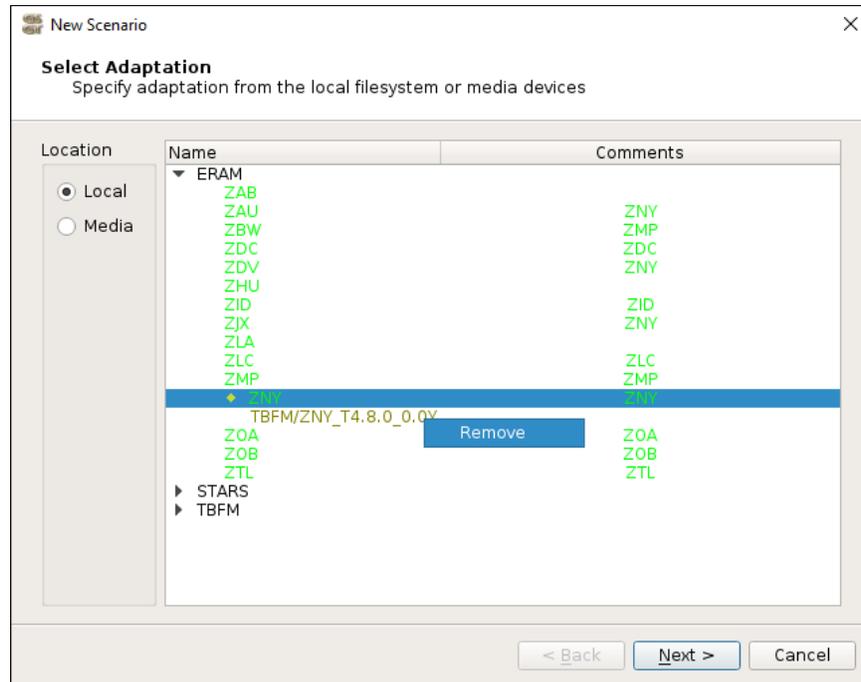


Figure 37. Removing a Child Adaptation

#### 4.1.2. Scenario Location and Name

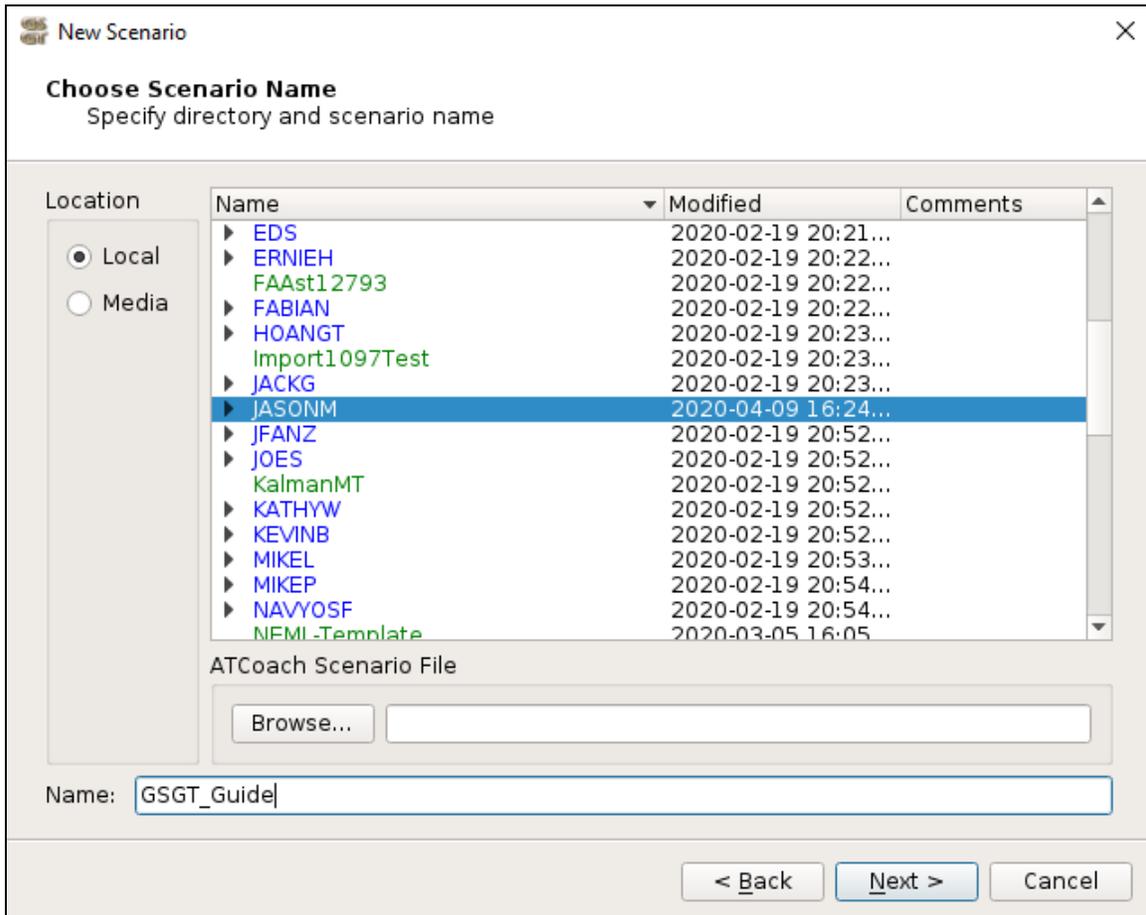

**Figure 38. Selecting a Scenario Location and Name**

#### **Location Selector**

Location of the scenarios, such as default local directory GSGT\_WORK\_PATH or other media such as CD-ROM or flash drive.


#### **Scenario Name**

Scenario name can be an existing scenario name or a new scenario name typed in by the user. The new scenario will be created in the selected directory. Selecting an existing scenario will populate the name for the new scenario, and if user proceeds with creation of new scenario the existing scenario will be overwritten.

**NOTE:** Directories are displayed in blue and scenarios are displayed in green. Read-only directories and scenarios are colored black and gray respectively. Right-click on a directory allows the user to create a new directory or subdirectory under the selected directory.

### 4.1.3. Weather Selection

Weather files may be selected by clicking or highlighting the desired weather directory. Selecting a weather file is optional.

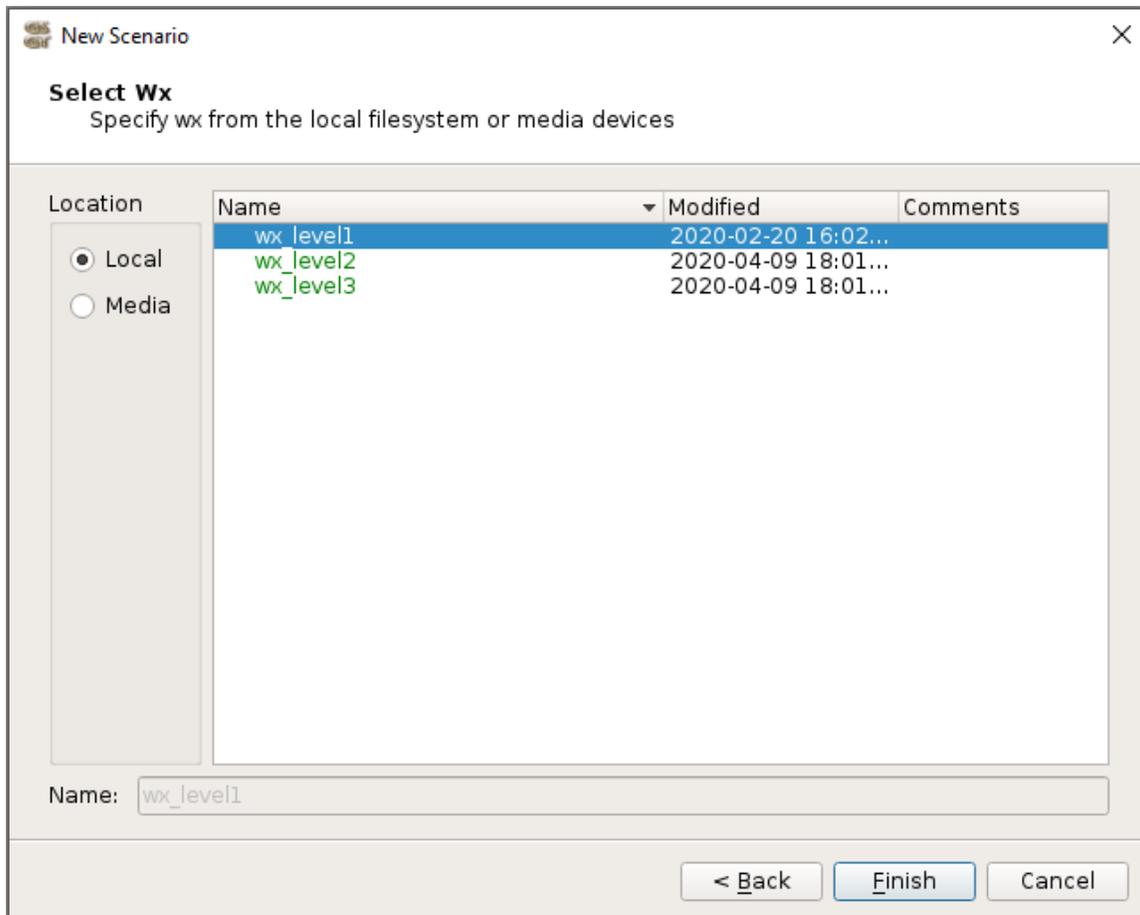

**Figure 39. Selecting a Weather Scenario**

#### **Finish**


Parses the adaptation data and loads the scenario. Not enabled until an adaptation is selected.

### **Cancel**

Cancels creation of the new scenario.

### **4.1.4. Scenario Overwrite Warning**

The warning is displayed to alert the user that a scenario file exists with the same name.

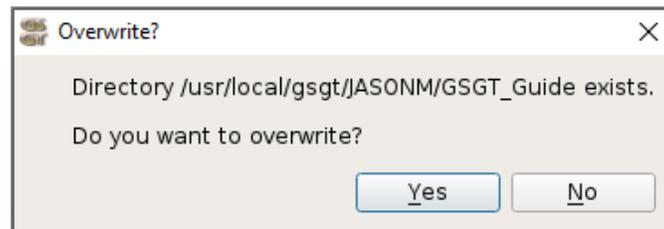

**Figure 40. Scenario Overwrite Warning**

### **Yes**

Overwrites the existing scenario with the current scenario.


### **No**

Cancels the save scenario operation.

## **4.2. Open an Existing Scenario**

To open an existing scenario, select **Scenario->Open** from the GSGT Main Window.

**NOTE:** Starting GSGT Editor from a command line while inside the scenario directory will automatically open that scenario.

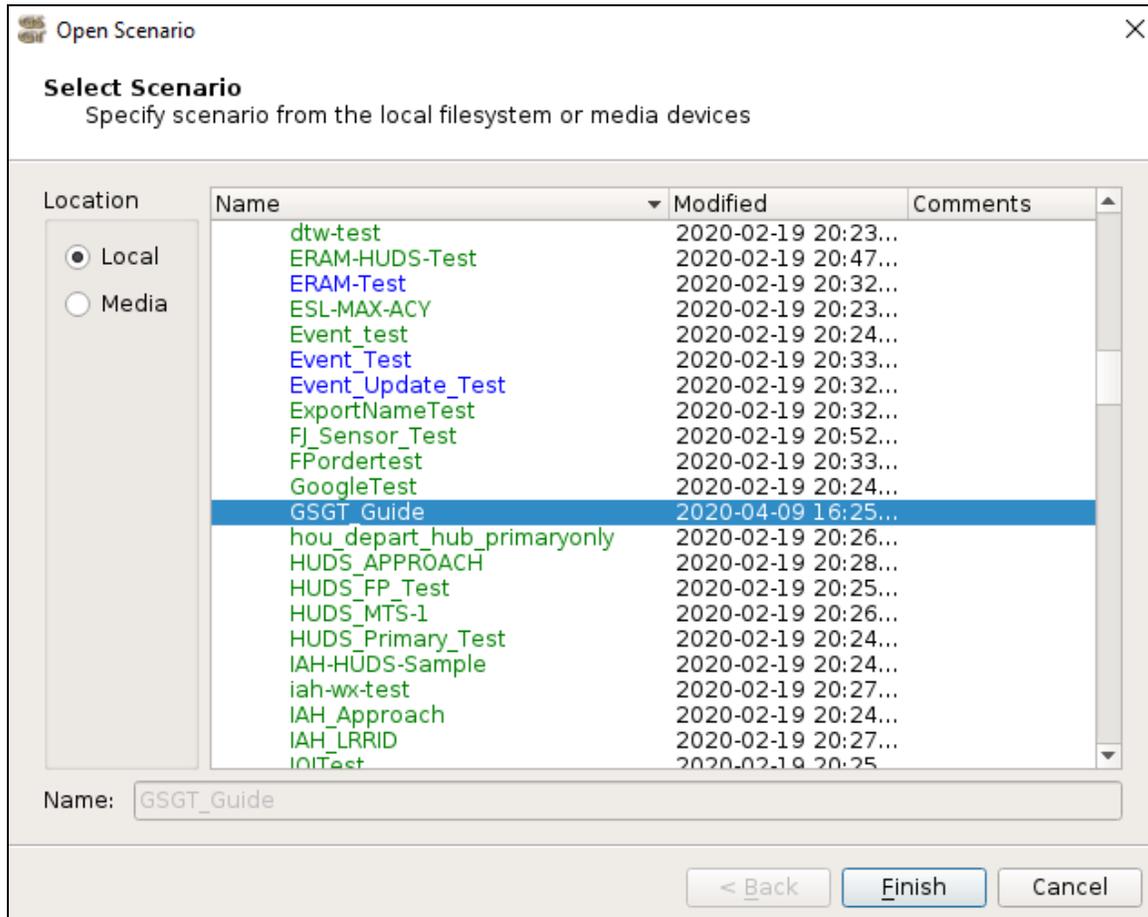

**Figure 41. Opening an Existing Scenario**

**Back**

Disabled in this window.

**Finish**

The selected scenario is opened in the GSGT main window. Enabled after a scenario is selected.

**Cancel**

Closes the window and cancels scenario open action.

**NOTE:** *Opening a scenario which uses different adaptation than the current scenario will close the current GSGT session and start a new one. It may take a few seconds for the new GSGT session to appear (depending on system performance).*

### 4.2.1. Load Progression Display

The window below will be displayed and the step currently being performed will be listed at the bottom of the window. When completed, an adaptation window will be displayed and the scenario can be reviewed or modified.



Figure 42. Load Progression

### 4.2.2. Scenario File Loading Errors

If there are errors encountered while loading the scenario, the GSGT Session Log will be displayed listing all errors encountered during loading.

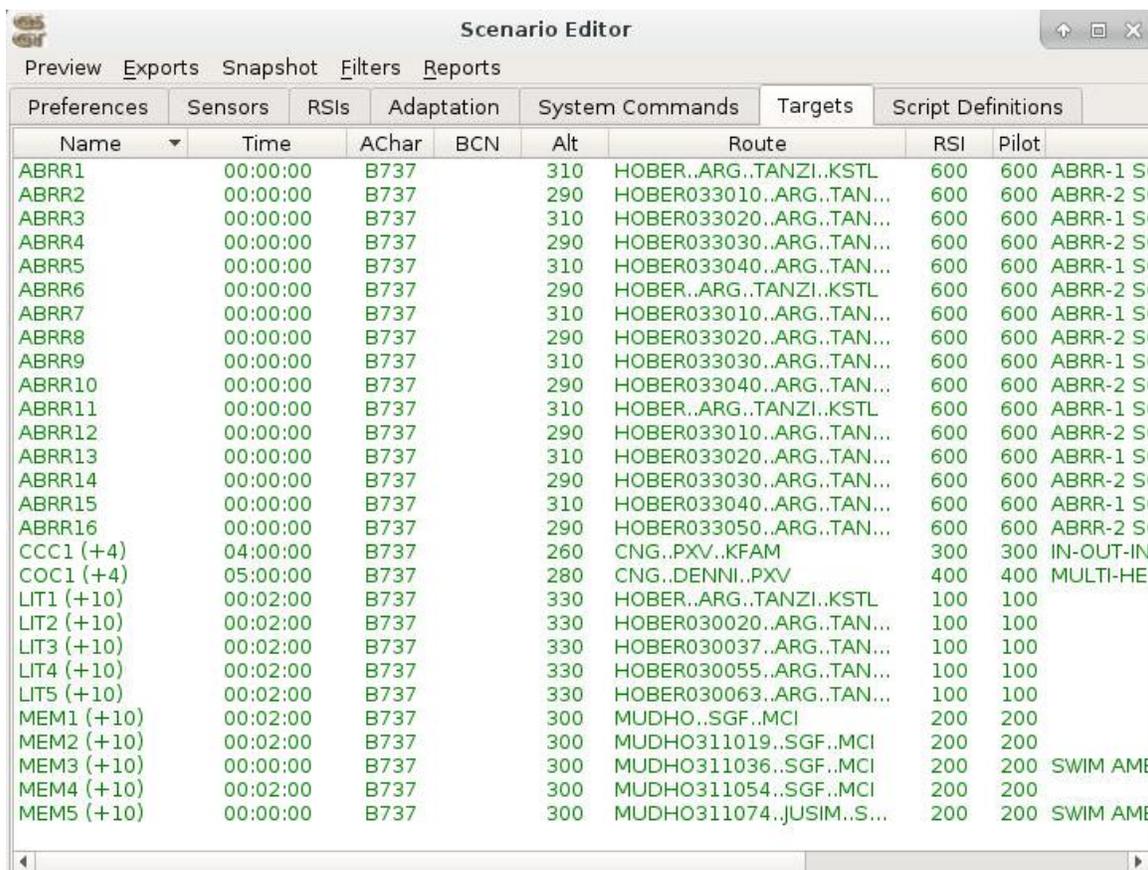


Figure 43. Loading Errors

### 4.3. Edit Scenario

The main scenario editor window displays a list of objects by type that can be edited. Clicking on an object type displays all of the instances of the object type contained in the scenario, if any.

Select **Scenario->Edit** or use the edit icon  from the GSGT Main Window.



Name	Time	AChar	BCN	Alt	Route	RSI	Pilot
ABRR1	00:00:00	B737		310	HOBER..ARG..TANZI..KSTL	600	600 ABRR-1 S
ABRR2	00:00:00	B737		290	HOBER033010..ARG..TAN...	600	600 ABRR-2 S
ABRR3	00:00:00	B737		310	HOBER033020..ARG..TAN...	600	600 ABRR-1 S
ABRR4	00:00:00	B737		290	HOBER033030..ARG..TAN...	600	600 ABRR-2 S
ABRR5	00:00:00	B737		310	HOBER033040..ARG..TAN...	600	600 ABRR-1 S
ABRR6	00:00:00	B737		290	HOBER..ARG..TANZI..KSTL	600	600 ABRR-2 S
ABRR7	00:00:00	B737		310	HOBER033010..ARG..TAN...	600	600 ABRR-1 S
ABRR8	00:00:00	B737		290	HOBER033020..ARG..TAN...	600	600 ABRR-2 S
ABRR9	00:00:00	B737		310	HOBER033030..ARG..TAN...	600	600 ABRR-1 S
ABRR10	00:00:00	B737		290	HOBER033040..ARG..TAN...	600	600 ABRR-2 S
ABRR11	00:00:00	B737		310	HOBER..ARG..TANZI..KSTL	600	600 ABRR-1 S
ABRR12	00:00:00	B737		290	HOBER033010..ARG..TAN...	600	600 ABRR-2 S
ABRR13	00:00:00	B737		310	HOBER033020..ARG..TAN...	600	600 ABRR-1 S
ABRR14	00:00:00	B737		290	HOBER033030..ARG..TAN...	600	600 ABRR-2 S
ABRR15	00:00:00	B737		310	HOBER033040..ARG..TAN...	600	600 ABRR-1 S
ABRR16	00:00:00	B737		290	HOBER033050..ARG..TAN...	600	600 ABRR-2 S
CCC1 (+4)	04:00:00	B737		260	CNG..PXV..KFAM	300	300 IN-OUT-IN
COC1 (+4)	05:00:00	B737		280	CNG..DENNI..PXV	400	400 MULTI-HE
LIT1 (+10)	00:02:00	B737		330	HOBER..ARG..TANZI..KSTL	100	100
LIT2 (+10)	00:02:00	B737		330	HOBER030020..ARG..TAN...	100	100
LIT3 (+10)	00:02:00	B737		330	HOBER030037..ARG..TAN...	100	100
LIT4 (+10)	00:02:00	B737		330	HOBER030055..ARG..TAN...	100	100
LIT5 (+10)	00:02:00	B737		330	HOBER030063..ARG..TAN...	100	100
MEM1 (+10)	00:02:00	B737		300	MUDHO..SGF..MCI	200	200
MEM2 (+10)	00:02:00	B737		300	MUDHO311019..SGF..MCI	200	200
MEM3 (+10)	00:00:00	B737		300	MUDHO311036..SGF..MCI	200	200 SWIM AME
MEM4 (+10)	00:02:00	B737		300	MUDHO311054..SGF..MCI	200	200
MEM5 (+10)	00:00:00	B737		300	MUDHO311074..JUSIM..S...	200	200 SWIM AME

Figure 44. Scenario Editor

Clicking the 'Name' button will toggle between sorting the object instances in ascending and descending order. The triangle in the 'Name' button indicates which ordering will be used after the button is clicked. The same applies for the other buttons.

Scenario Editor also provides the ability to view adapted equipment as defined by selected adaptation(s), such as Sensors and ADS-B Service Volumes.

### 4.3.1. Create a New Object

To create a new object, right-click on the object listing or white space if there are no objects created. A context menu with the option 'New' is displayed. Selecting 'New' from the menu opens a dialog window to define the new object.

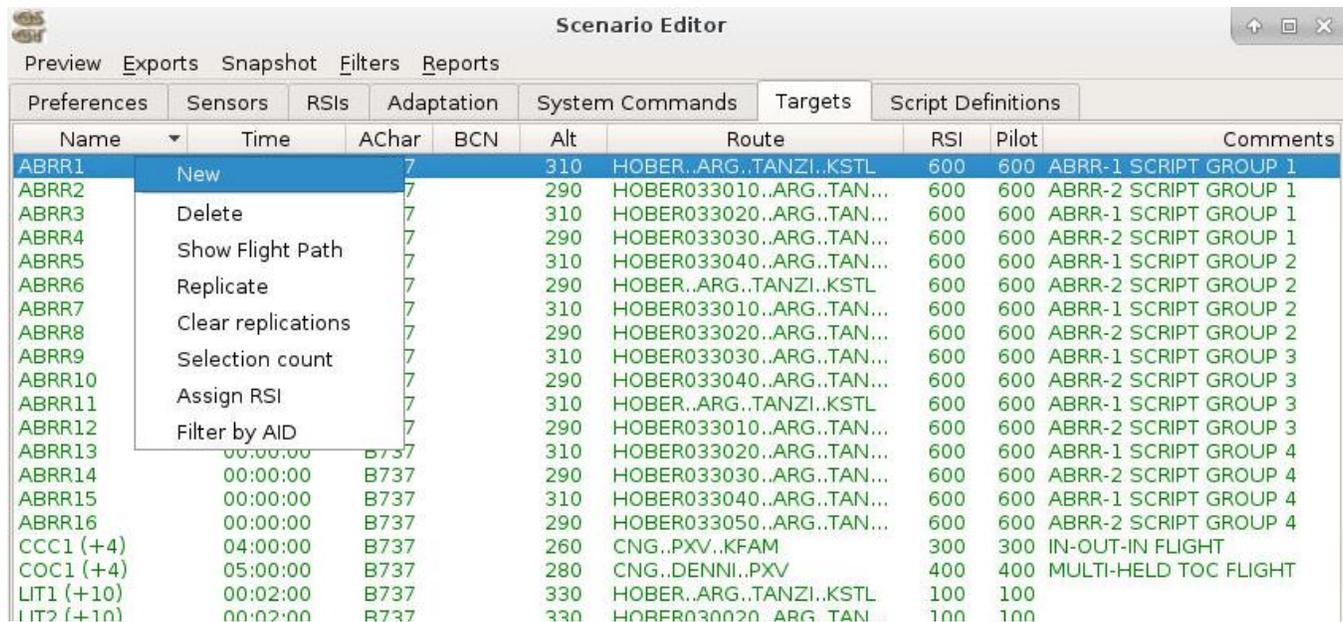


Figure 45. Creating a New Object

### 4.3.2. Delete Object

To delete an object, right-click on an object instance name. A context menu with 'Delete' (and possibly other options) is displayed. Selecting 'Delete' from the menu opens a confirmation dialog, asking user to confirm deletion of the selected object(s).

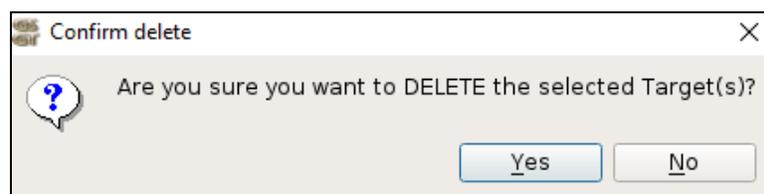


Figure 46. Object Delete Confirmation

### 4.3.3. Edit Object

To edit an object, double-click on an instance name and the editor window will be replaced with the editor dialog for specific type of object instance selected. The example below is a Target editor window.


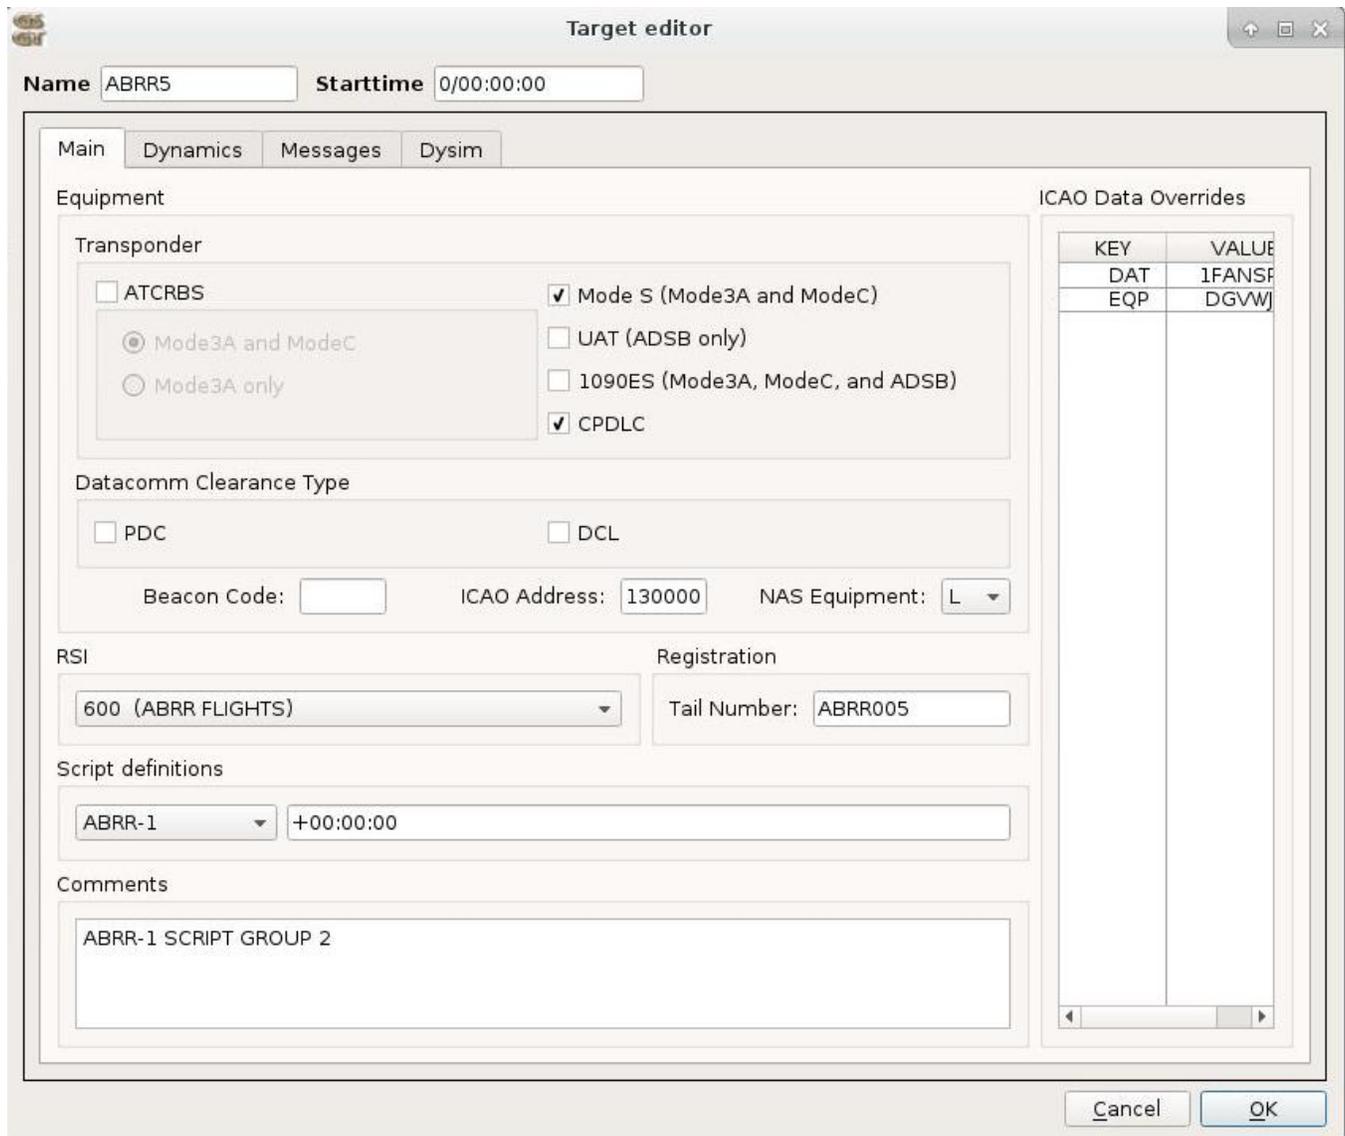


Figure 47. Object Editor

#### 4.3.4. Replicate Object

Replication provides the ability to produce copies of the selected objects such as System Commands or Targets. The replications can be dynamic (not frozen), so that single object manages all its replications and a change to that object is reflected across all replications of that object. For dynamically replicated targets, all messages and events associated with the original target, will also be generated for each target replication. Alternatively, replications can be frozen, which creates a copy of the original object; therefore, the new objects can be independently modified to specific needs.

The Replication Editor dialog varies depending on whether a System Command or Target is being replicated. As shown in the figure below, the following options are available for Target replications. System Command replication options only allow the user to specify the number of replications and a delta time between replications.

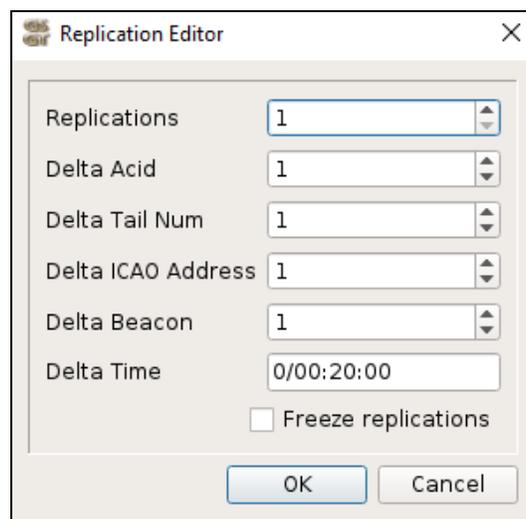

**Figure 48. Replication Editor**

##### ***Replications***

The number of replicated objects.

##### ***Delta Acid***

Delta in Acid between replications. If the base target has the identifier UAL101, and '1' is specified for the Delta Acid, the following Acids are achieved in replications: UAL102, UAL103, UAL104...

##### ***Delta Tail Num***

Delta in Tail Number between replications. If the base target has the Tail Number N12345, and '2' is specified for the Delta Tail Num, the following Tail Numbers are achieved in replications: N12347, N12349, N12351...

### ***Delta ICAO Address***

Delta in ICAO Address between replications. If the base target has an ICAO Address of AB00E9, and '3' is selected for the Delta ICAO Address, the following ICAO codes are achieved in replications: AB00EC, AB00EF, AB00F2...

### ***Delta Beacon***

Delta in Beacon code between replications. If the base target has a beacon code of 1011, and '3' is selected for the Delta Beacon, the following beacon codes are achieved in replications: 1014, 1017, 1022...

### ***Delta Time***

Delta in time between replications. The default time is 20 minutes. If the original object has a scenario time of 00:10:00 then the first replication will enter the scenario at 00:30:00.

### ***Freeze Replications***

When checked, produces hard copy replications that are no longer tied to the original object. Frozen replications will appear separately in the GSGT Editor list view. Non-frozen replications remain associated with the original.

### ***OK***

Adds the specified number of replications to the scenario.

### ***Cancel***

Closes the 'Replicate' window without saving changes.

Leaving the pointer over a non-frozen replicated System Command or Target will cause a balloon help to appear with the details of the replication.

Scenario Editor

Preview Exports Snapshot Filters Reports

Preferences Sensors RSIs Adaptation System Commands Targets Script Definitions

Name	Time	AChar	BCN	Alt	Route	RSI	Pilot	Comments
ABRR1	00:00:00	B737		310	HOBER..ARG..TANZI..KSTL	600	600	ABRR-1 SCRIPT GROUP 1
ABRR2	00:00:00	B737		290	HOBER033010..ARG..TAN...	600	600	ABRR-2 SCRIPT GROUP 1
ABRR3	00:00:00	B737		310	HOBER033020..ARG..TAN...	600	600	ABRR-1 SCRIPT GROUP 1
ABRR4	00:00:00	B737		290	HOBER033030..ARG..TAN...	600	600	ABRR-2 SCRIPT GROUP 1
ABRR5 (+4)	00:00:00	B737		310	HOBER033040..ARG..TAN...	600	600	ABRR-1 SCRIPT GROUP 2
ABRR6	00:00:00	B737		290	HOBER..ARG..TANZI..KSTL	600	600	ABRR-2 SCRIPT GROUP 2
ABRR7	00:00:00	B737		310				Replicated Target: x4   time delta = 00:20:00   acid delta = 1   bcn delta 1
ABRR8	00:00:00	B737		290	HOBER033020..ARG..TAN...	600	600	ABRR-2 SCRIPT GROUP 2
ABRR9	00:00:00	B737		310	HOBER033030..ARG..TAN...	600	600	ABRR-1 SCRIPT GROUP 3
ABRR10	00:00:00	B737		290	HOBER033040..ARG..TAN...	600	600	ABRR-2 SCRIPT GROUP 3
ABRR11	00:00:00	B737		310	HOBER..ARG..TANZI..KSTL	600	600	ABRR-1 SCRIPT GROUP 3
ABRR12	00:00:00	B737		290	HOBER033010..ARG..TAN...	600	600	ABRR-2 SCRIPT GROUP 3

Figure 49. Replications

## 4.4. Save Scenario

To save current scenario select **Scenario->Save** from the GSGT Main Window.

To save a scenario under a different name select **Scenario->Save As** from the GSGT Main Window. This allows the user to specify the name and location of the scenario files. A directory with the name as the specified in Scenario Name is created in the selected location.


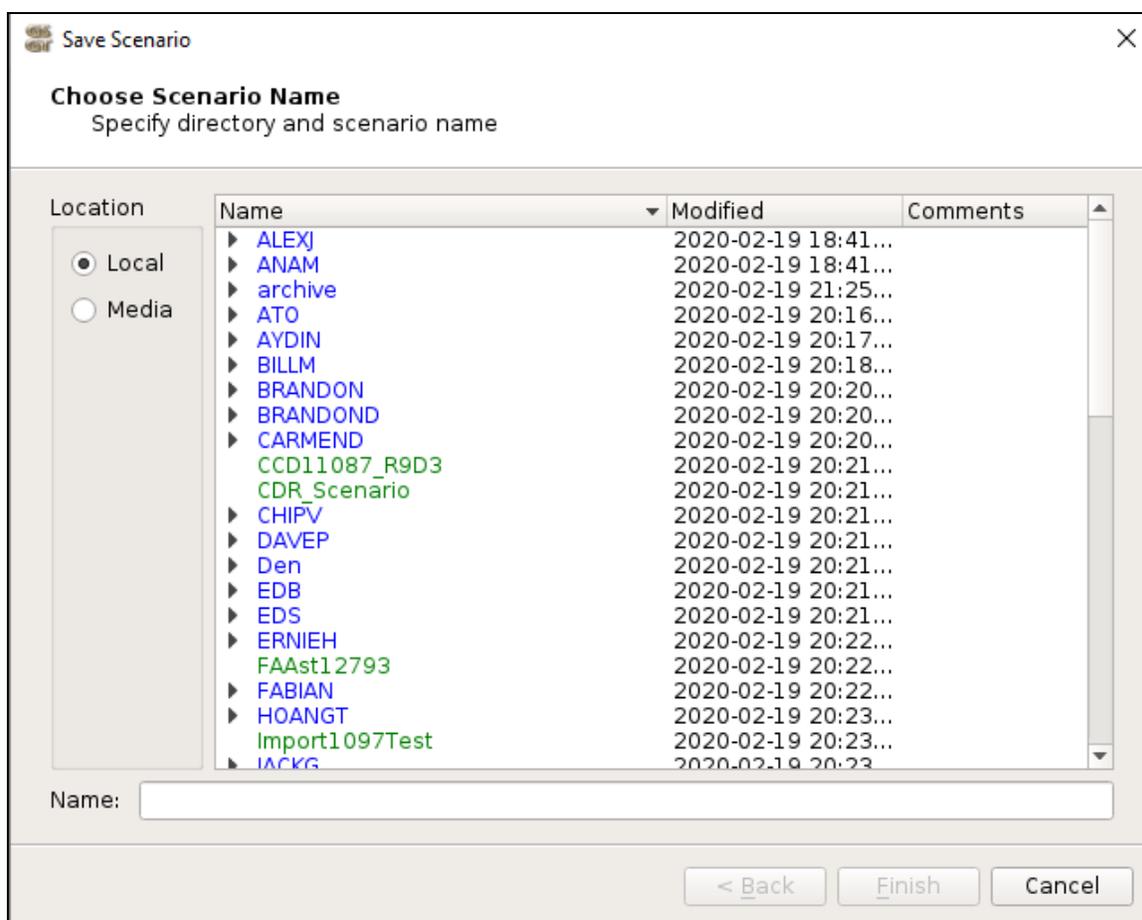


Figure 50. Save Scenario

#### 4.4.1. Scenario Overwrite Warning

When a scenario name is specified in the Save Scenario dialog already exists, the user is prompted to overwrite the existing scenario.

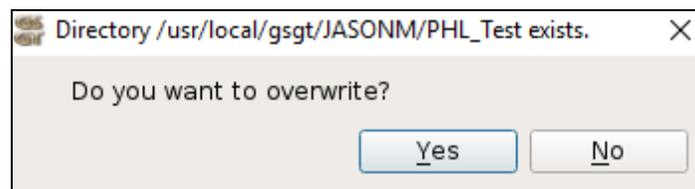

**Figure 51. Scenario Overwrite Warning**

**Yes**


The existing scenario file is overwritten.

**No**

The save action is cancelled.

#### 4.4.2. Save Scenario Before Exit

When the user attempts to exit the GSGT application and unsaved changes have been made to the scenario, the following dialog is displayed.

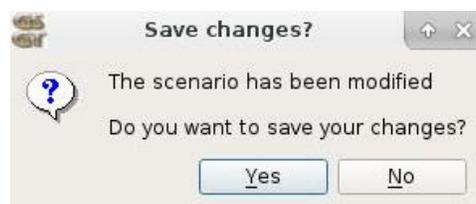

**Figure 52. Save Before Exit**

**Yes**

The scenario file is saved and the application is exited.

**No**


The scenario file is NOT saved and the application is exited.

## 5. Scenario Editor

The Scenario Editor window is comprised of multiple tabs, including Preferences, Sensors, RSIs, Adaptation, System Commands, Targets, and Script Definitions. Note that not all tabs are available in all GSGT modes. The Sensors and Adaptation tabs display adapted surveillance items and interfacility and display system items, respectively, for reference only. The remaining tabs contain lists of scenario objects by type that can be edited.



**Figure 53. Terminal and ERAM Sim Mode Tabs**

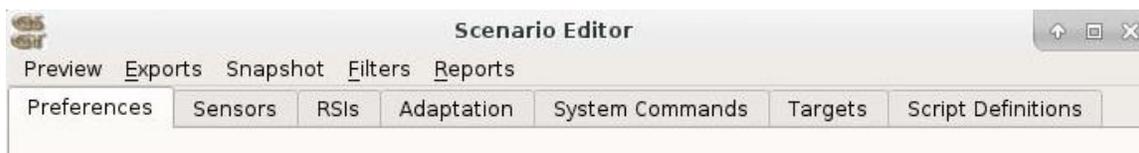


**Figure 54. Normal and Dysim Modes Tabs**

### 5.1. Preferences

Preferences are used to specify timing and other attributes of the scenario. The attributes specified in the Preferences tab are applied to the scenario globally. Some timing parameters can be applied to individual targets through the Target editor; see section 5.6.1.3.2 for more details. GSGT looks for a preferences configuration file called `prefs.xml`. If `prefs.xml` cannot be found, standard default values are used.

#### 5.1.1. Edit Preferences

To edit Scenario Preferences, click on the **Preferences** tab in the Scenario Editor Main Window.

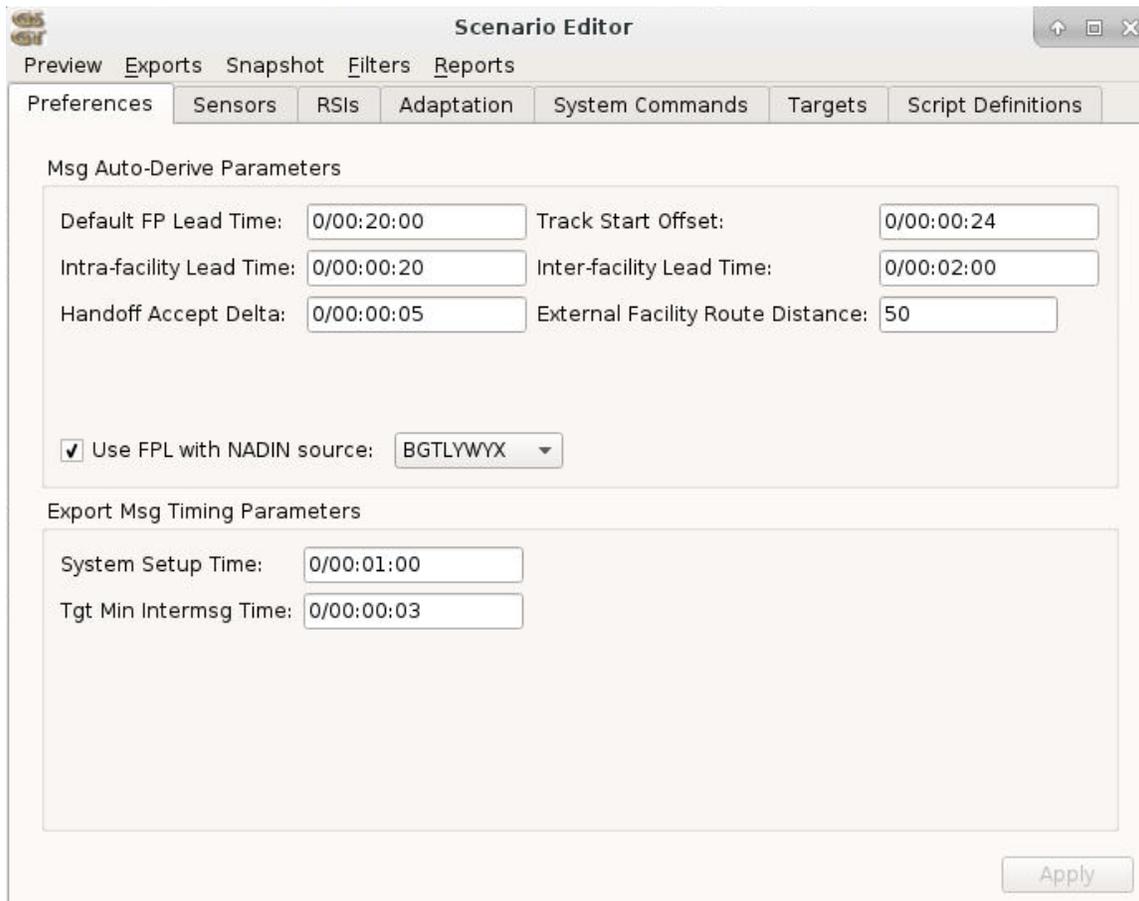

**Figure 55. Preferences Tabs**

### ***Export Msg Timing Parameters***

#### ***System Setup Time***

No messages will be injected before this time, unless the message is marked as a system setup message. This allows messages such as combine sector and switch activity to be injected prior to any flight data messages.

#### ***Tgt Min Intermsg Time***

The minimum amount of time between auto-generated messages for the same target. This ensures that messages associated with the same target will not be injected out of order. It is useful in large scenarios, when message injection times tend to be delayed due to equipment injection delays.

## **Msg Auto-Derive Parameters**

### **FP Lead Time**

For auto-generated messages, the amount of time preceding a target start time or preceding a boundary crossing that the flight plan messages will be scheduled for injection. For a departure flight, the initial proposed flight plan will be generated with an injection time that is FP Lead Time prior to the departure time. For an active flight, the flight plan will be generated with an injection time that is FP Lead Time prior to the start of the radar track. If a flight crosses any enroute or terminal facility boundaries, the flight plan generated for each downstream facility will have an injection time that is FP Lead Time prior to the boundary crossing time.

### ***Track Start Offset***

For auto-generated messages, the time after a target start time for a flight that starts inside an adapted local facility that the start track message (QT) will be scheduled for injection.

### ***Intra-facility Lead Time***

For auto-generated messages, the time before an inter-sector boundary crossing when the initiate handoff message (QN) will be scheduled for injection.

### ***Inter-facility Lead Time***

For auto-generated messages, the time before an enroute or terminal facility boundary crossing when the initiate handoff message (TI) will be scheduled for injection.

### ***Handoff Accept Delta***

For auto-generated messages, the time between the initiate handoff message and the accept handoff message for both intra-facility and inter-facility transfers of control.

### ***Use FPL with NADIN source***

By default, domestic proposed flights are auto-generated with FP messages. With this option selected, all domestic proposed flights are generated using FPL messages injected from the specified NADIN source.

### ***Apply***

Save and apply the changes made and close the Preferences editor dialog.

## 5.2. Sensors

GSGT uses surveillance devices defined in adaptation. Surveillance equipment attributes can be viewed but not modified. To expand the subtree contained in particular type of equipment click on the triangle icon to the left of the item.

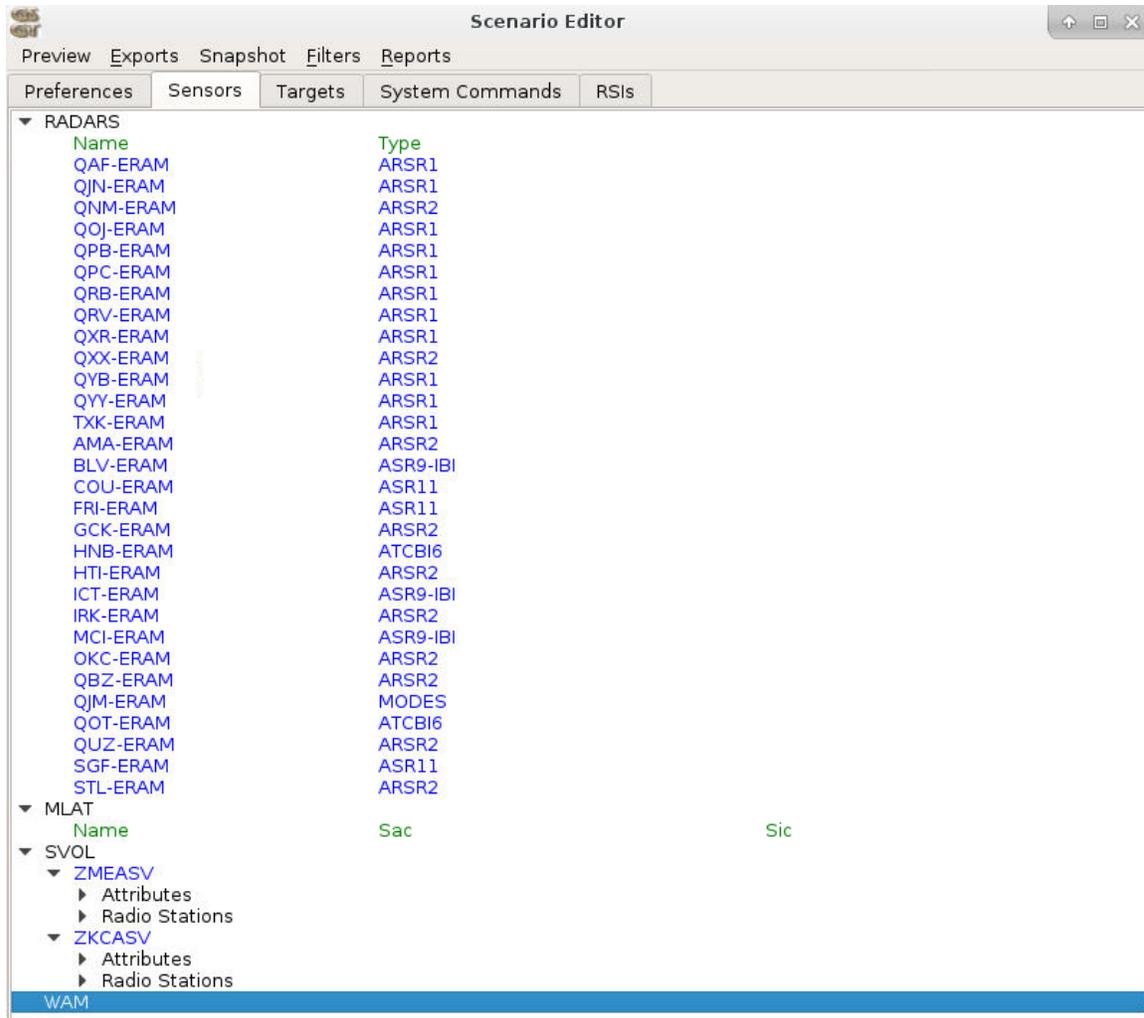



Figure 56. Sensors Tab

## 5.3. RSIs

Record Selection Indicators, abbreviated RSI, can be used to identify various messages, which can then be selected or filtered during runtime.

### 5.3.1. Create and Edit RSI

To create a new RSI, click on the **RSIs** object label in the Scenario Editor Main Window and right-click the object list. Select **New** from the context menu.

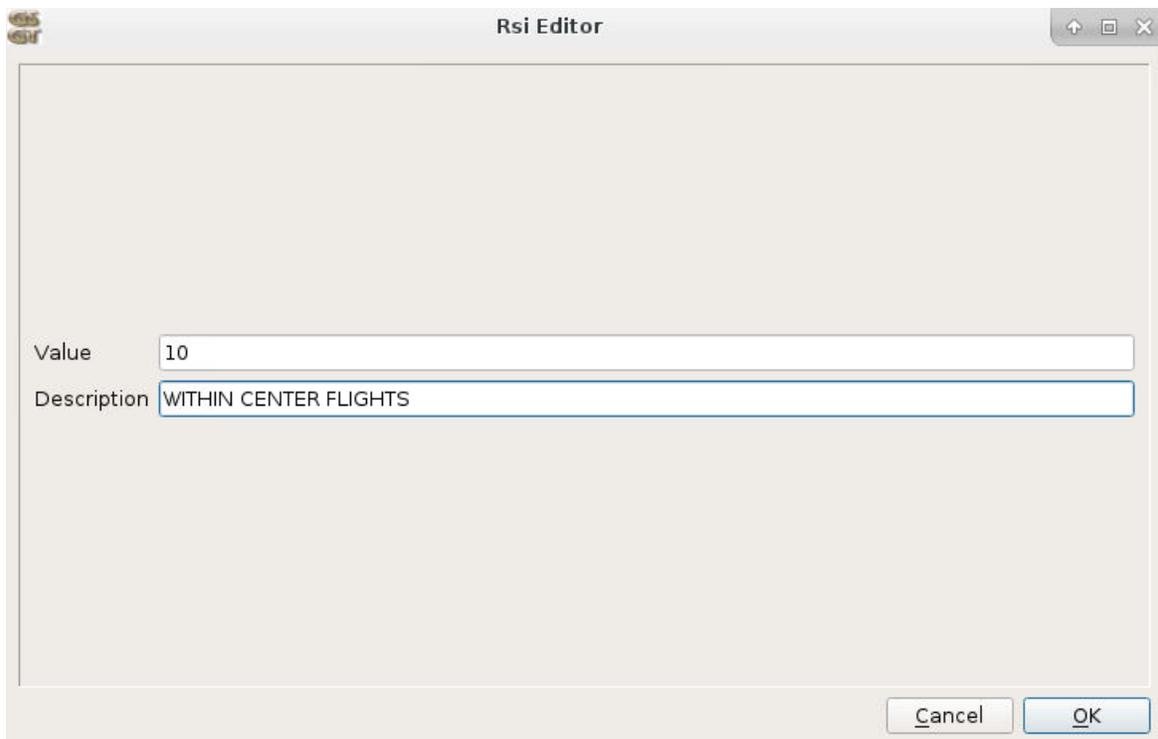


The screenshot shows a dialog box titled "Rsi Editor". It has a title bar with standard window controls (minimize, maximize, close) and a small icon on the left. The main area contains two text input fields. The first field is labeled "Value" and contains the text "10". The second field is labeled "Description" and contains the text "WITHIN CENTER FLIGHTS". At the bottom right of the dialog, there are two buttons: "Cancel" and "OK".

#### **Value**

Any string can be used for the RSI value.

**NOTE:** Each string value can only be used for one RSI. A dialog box stating "RSI exists" will appear if the string entered is already being used for another RSI once OK is selected.

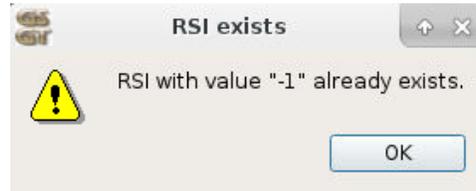

**Description**

Text description of the RSI.

**OK**

Save and apply the changes made and close the RSI editor dialog.

**Cancel**


Cancel the changes made and close the RSI editor dialog.

**5.3.2. Edit Objects Associated with Specific RSI**

From the Scenario Editor, left-click on Filters, then select Filter by RSI to display the list of RSI(s) to filter the editor by.




**Figure 57. Filtering the Editor**

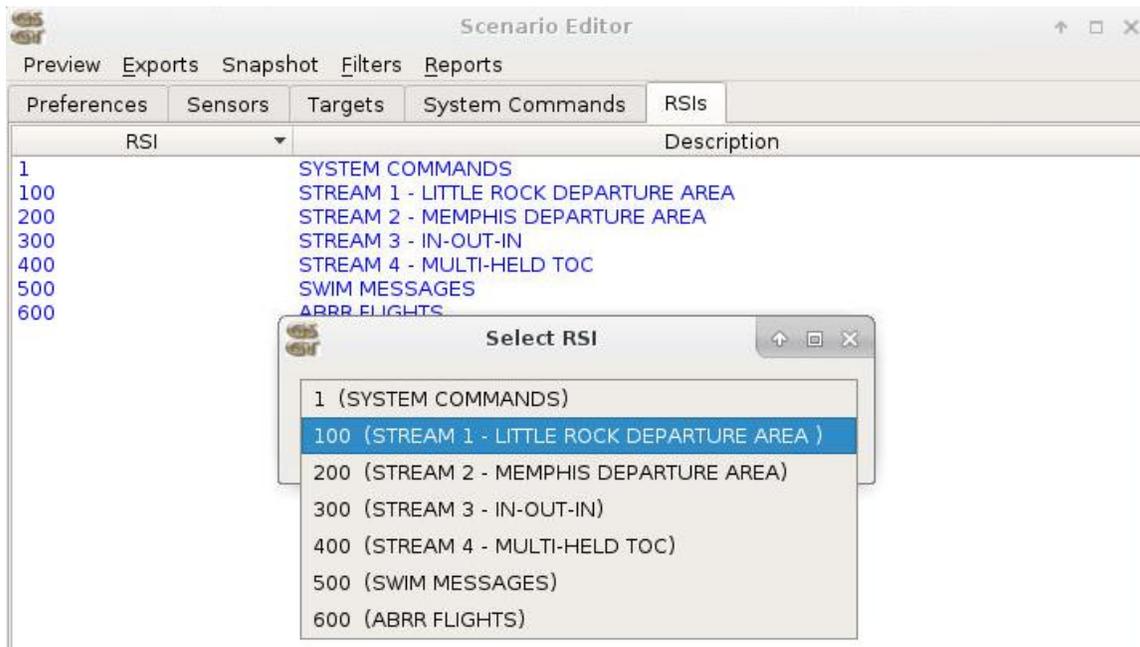

**Figure 58. RSI Filter Selection**

This filters the scenario editor by the RSI(s) selected.

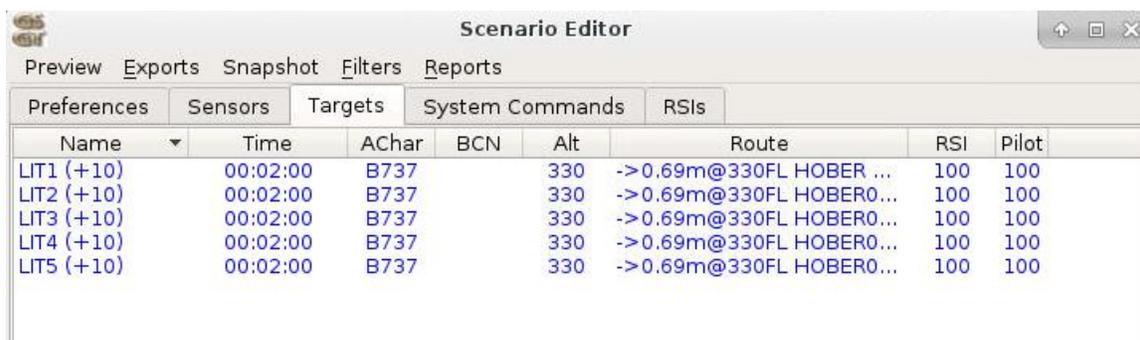

**Figure 59. Objects Filtered by RSI**

## 5.4. Adaptation Equipment and DS

GSGT uses equipment devices based on the positions and devices defined in adaptation. Equipment attributes can be viewed but not modified. To expand the subtree contained in a particular type of equipment click on the triangle icon to the left of the item.

## 5.5. System Commands

Messages defined in the system commands tab are not associated with any Target and can be injected from any supported device. These might be system setup type messages such as combine sector or switch activity. Any message can be scripted, including flight data. The editor supports freehand text editing of messages that allows users to create any valid or invalid message format. Note that flight data messages would have to be scripted without any substitution tokens that reference a particular target, such as AID, CID, GUF, etc. If target token substitution is needed, the flight data message must be scripted within the Target editor; see section 5.6.1.3.5.

### 5.5.1. Create and Edit System Command

Certain system commands require or may be formatted with special characters or values that are represented as tokens. These tokens can be entered into the text of a System Command to be substituted to corresponding hex code or values during the scenario export. The primary reason for these tokens is to provide an ASCII character representation for non-printable character values or for values that are unknown until the export or run time.

**Table 4. Special Character Tokens**

Token	Description
\d	downward-pointing arrow aka arrival arrow
\u	upward-pointing arrow aka departure arrow
\c or	clear weather symbol
\o or '	overcast weather symbol
\xHH	arbitrary value, where HH is a two digit hex value
\p	interfacility messages parity error
\e	EOM token
\l	LRC error


**NOTE:** Not all tokens may be appropriate in all message types.

**NOTE:** Tokens are not case sensitive, so for instance ether \c or \C can be used.

**NOTE:** Entering an extra slash before a character will 'escape' it and not generate a special character. For example, the string "\\c" will be exported as "\c" and not as a clear weather symbol.

### 5.5.1.1. Message Editor

To create a new System Command, select a message type and appropriate device(s) from the drop downs above the text input area. Enter a message injection time offset and select an RSI, if desired. Type the message contents into the free form text area and press enter or right-click and select Save. The new message is added to the message list below the text input area. Some message types will only accept specific formats; for example rtcsmg will only accept a message in xml format.

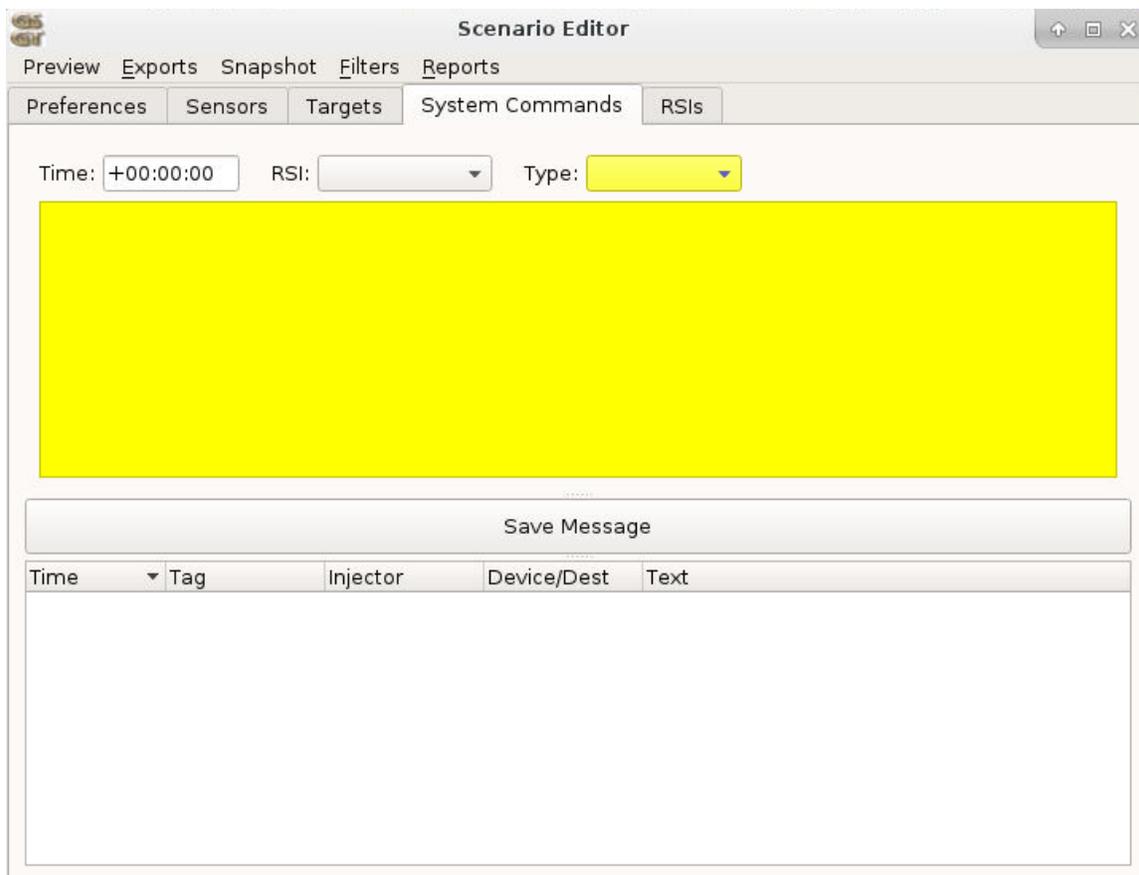

**Figure 60. Message Editor**

***Time***

Input box allowing entry of the time the message is to be injected into the scenario.

***RSI***

Drop down list of RSIs allowing selection of the desired RSI.

### Type

Drop down menu allowing selection of the type message to be injected. Depending on the type of message, additional fields will appear for message sources and input devices.

**Table 5. Message Types with Facility and Device Fields**


Message Type	Facility/Device Field 1	Facility/Device Field 2
ifmsg	Source	Destination
ssrvmsg	ERAM	Device
fdiomsg	ERAM	CCU
nadinmsg	Source Address	Destination ERAM
icaoMsg	Source	Destination
wmscrmsg	Destination ERAM	N/A
tdlsmg	TDLS	N/A
swimmsg	Destination ERAM	N/A
cmsmsg	ERAM	HADDS Address
aigMsg	STARS	N/A
tfmsMsg	N/A	N/A
cpdlcmg	N/A	N/A
afnmsg	N/A	N/A
rtcsMsg	RTCS Airport	N/A
ttpMsg	TTP Airport	N/A

### Text

Message text. Freeform text area.

## 5.6. Targets

A Target is a representation of a flight with certain characteristics such as aircraft dynamics, equipment, route of flight, and events that control almost every aspect of its identity. The targets also include a set of messages, identical in structure to System Commands, but are associated with that particular target. The messages can be automatically derived based on the characteristics of the target, manually entered or be a combination of both.

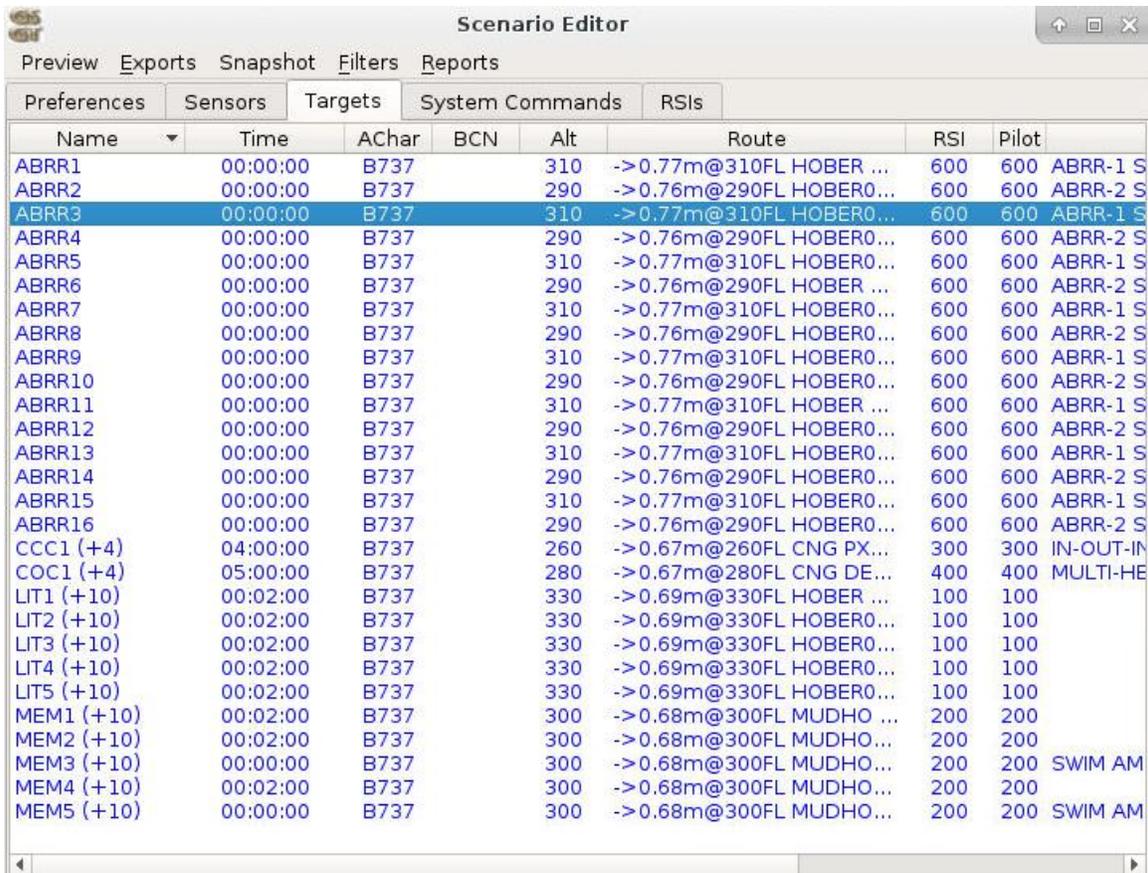

Name	Time	AChar	BCN	Alt	Route	RSI	Pilot
ABRR1	00:00:00	B737		310	->0.77m@310FL HOBER ...	600	600 ABRR-1 S
ABRR2	00:00:00	B737		290	->0.76m@290FL HOBER0...	600	600 ABRR-2 S
ABRR3	00:00:00	B737		310	->0.77m@310FL HOBER0...	600	600 ABRR-1 S
ABRR4	00:00:00	B737		290	->0.76m@290FL HOBER0...	600	600 ABRR-2 S
ABRR5	00:00:00	B737		310	->0.77m@310FL HOBER0...	600	600 ABRR-1 S
ABRR6	00:00:00	B737		290	->0.76m@290FL HOBER ...	600	600 ABRR-2 S
ABRR7	00:00:00	B737		310	->0.77m@310FL HOBER0...	600	600 ABRR-1 S
ABRR8	00:00:00	B737		290	->0.76m@290FL HOBER0...	600	600 ABRR-2 S
ABRR9	00:00:00	B737		310	->0.77m@310FL HOBER0...	600	600 ABRR-1 S
ABRR10	00:00:00	B737		290	->0.76m@290FL HOBER0...	600	600 ABRR-2 S
ABRR11	00:00:00	B737		310	->0.77m@310FL HOBER ...	600	600 ABRR-1 S
ABRR12	00:00:00	B737		290	->0.76m@290FL HOBER0...	600	600 ABRR-2 S
ABRR13	00:00:00	B737		310	->0.77m@310FL HOBER0...	600	600 ABRR-1 S
ABRR14	00:00:00	B737		290	->0.76m@290FL HOBER0...	600	600 ABRR-2 S
ABRR15	00:00:00	B737		310	->0.77m@310FL HOBER0...	600	600 ABRR-1 S
ABRR16	00:00:00	B737		290	->0.76m@290FL HOBER0...	600	600 ABRR-2 S
CCC1 (+4)	04:00:00	B737		260	->0.67m@260FL CNG PX...	300	300 IN-OUT-IN
COC1 (+4)	05:00:00	B737		280	->0.67m@280FL CNG DE...	400	400 MULTI-HE
LIT1 (+10)	00:02:00	B737		330	->0.69m@330FL HOBER ...	100	100
LIT2 (+10)	00:02:00	B737		330	->0.69m@330FL HOBER0...	100	100
LIT3 (+10)	00:02:00	B737		330	->0.69m@330FL HOBER0...	100	100
LIT4 (+10)	00:02:00	B737		330	->0.69m@330FL HOBER0...	100	100
LIT5 (+10)	00:02:00	B737		330	->0.69m@330FL HOBER0...	100	100
MEM1 (+10)	00:02:00	B737		300	->0.68m@300FL MUDHO ...	200	200
MEM2 (+10)	00:02:00	B737		300	->0.68m@300FL MUDHO...	200	200
MEM3 (+10)	00:00:00	B737		300	->0.68m@300FL MUDHO...	200	200 SWIM AM
MEM4 (+10)	00:02:00	B737		300	->0.68m@300FL MUDHO...	200	200
MEM5 (+10)	00:00:00	B737		300	->0.68m@300FL MUDHO...	200	200 SWIM AM


Figure 61. Targets Tab

## 5.6.1. Create and Edit Target

To create a Target, right-click on the **Targets** object label in the object list of the Scenario Editor Main Window. Select **New** from the context menu.

### 5.6.1.1. Target - Main

The general target attributes are located on the Main tab of the Target editor. The attributes describe the target's characteristics such as on-board navigation equipment and transponder types.

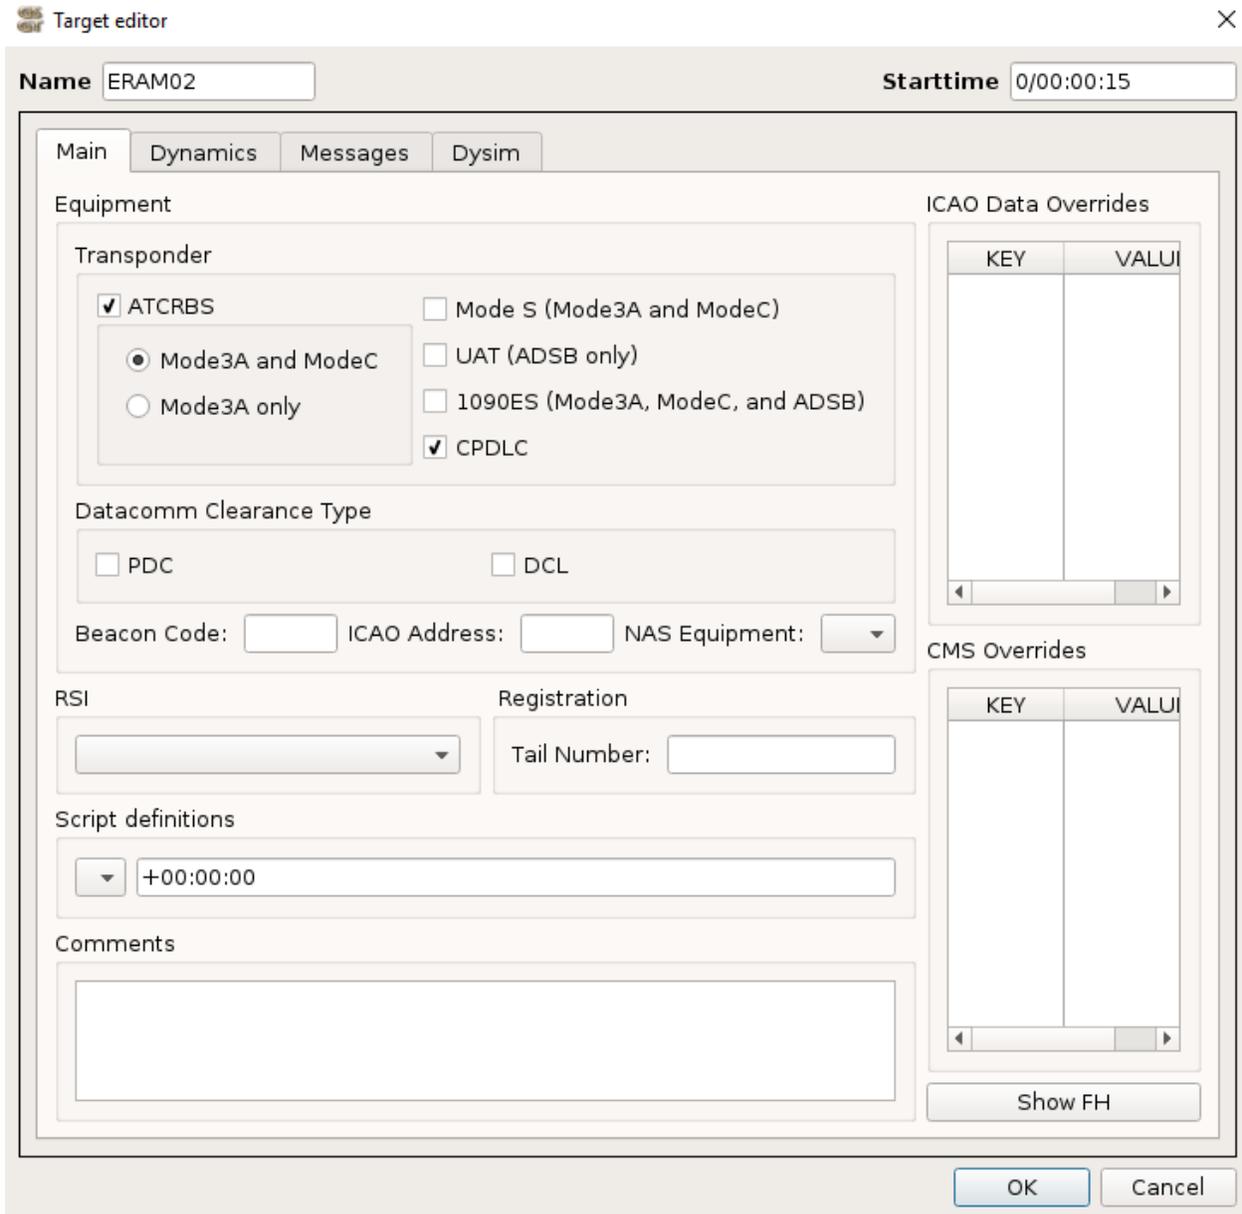

**Figure 62. Target Editor Main Tab**

**Name**

Two to seven alphanumeric characters designating the identity of the flight. The first character must be alphabetic, and may be followed by any combination of 1-6 alphanumeric characters. The minimum length is two (one letter and one digit). The minimum length for a letter-only name is three.

### ***Starttime***

The time at which the target becomes active. The time is specified in days, hours, minutes, and seconds.

### ***Equipment***

#### ***Transponder***

##### ***ATCRBS***

Mode 3A and Mode C  
Mode 3A only

##### ***Mode S***

Mode3A and ModeC

##### ***UAT***

ADSB only

##### ***1090ES***

Mode3A, ModeC, and ADSB

##### ***CPDLC***

#### ***Datacomm Clearance Type***

##### ***PDC***

##### ***DCL***

#### ***Beacon code***

One to four octal digits designating the beacon code for the aircraft. Values less than four digits will be left-padded with zeroes to reach a length of four. Supplying a beacon code is optional; GSGT will generate beacon codes for aircraft as needed.

#### ***ICAO Address***

Six hex digits designating the ICAO address for the aircraft. Supplying an ICAO address is optional; GSGT will generate ICAO address for aircraft as needed.

#### ***NAS Equipment***

The single-letter equipment id. It is appended to aircraft type in the FP message.

## **RSI**

List of RSI descriptions for this target. Clicking 'Select' will open a scroll down menu allowing you to select the desired RSI.

## **Registration**

### **Tail Number**

Two to seven alphanumeric characters designating the aircraft's tail number. The first character must be alphabetic and may be followed by any combination of 1-6 alphanumeric characters. The minimum length is two (one letter and one digit).

## **Script definitions**

If a Target has a script defined it will run the script at the time set by the user. The start of the script can be relative to the target start (activation) time or it can be triggered by a particular generated message. The script can be a set of common messages that can be applied to multiple targets without having to script each set individually for each target. This is primarily used for DataComm and TFDM Terminal Publication (TTP) message sets.

## **Comments**

Any comments associated with the target. Comments are not displayed during scenario playback.

## **ICAO Data Overrides**

ICAO Data overrides used for generating FP/FPL messages. New elements can be added by right mouse click -> **New Element** and entering the elements key. New Values can be added to an element by double clicking the **Value** field for the element. After creating at least one element right clicking again will give the option to **Delete** the highlighted element.


Some ICAO data is automatically generated in the flight plan messages based on other inputs, such as registration and navigation and surveillance equipage. Entries in the ICAO Data Overrides will override the values automatically generated. Neither the element key nor the value are validated for correctness. It is up to the scenario developer to script the appropriate overrides. However, only applicable keys will be incorporated into the generated flight plan messages.

## **CMS Overrides**

CMS overrides used for generating FP/FPL messages. New elements can be added by right mouse click -> **New Element** and entering the elements key. New Values can be added to an element by double clicking the **Value** field for the element. After creating at least one element right clicking again will give the option to **Delete** the highlighted element.

### Show FH

This button will open a pop up window that will show what the current generated FH message would be for the target.

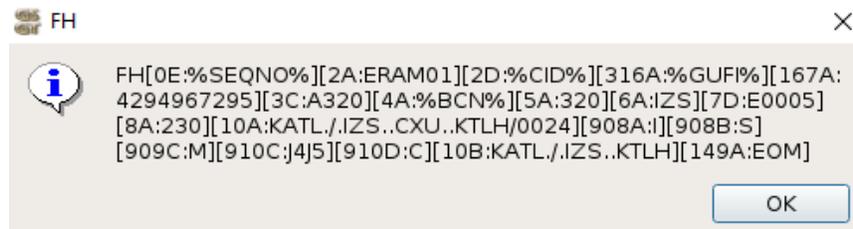


**Figure 63. FH Message Preview**

#### 5.6.1.2. Target - Dynamics

The Dynamics tab of the Target Editor defines the type of aircraft, its speed and altitude, and the path the target is flying in an airspace. A target's aircraft trajectory can be specified as a route with defined points, such as fixes and airports.

When the first and/or last element on the route is an airport, GSGT can model appropriate departure or arrival from/to an airport, including modeling of particular runways on the airport. The runways must be predefined using Runways site definition in order to be available for inclusion.

Based on the target's route definition, GSGT generates radar and derives appropriate messages such as flight plans and handoffs.

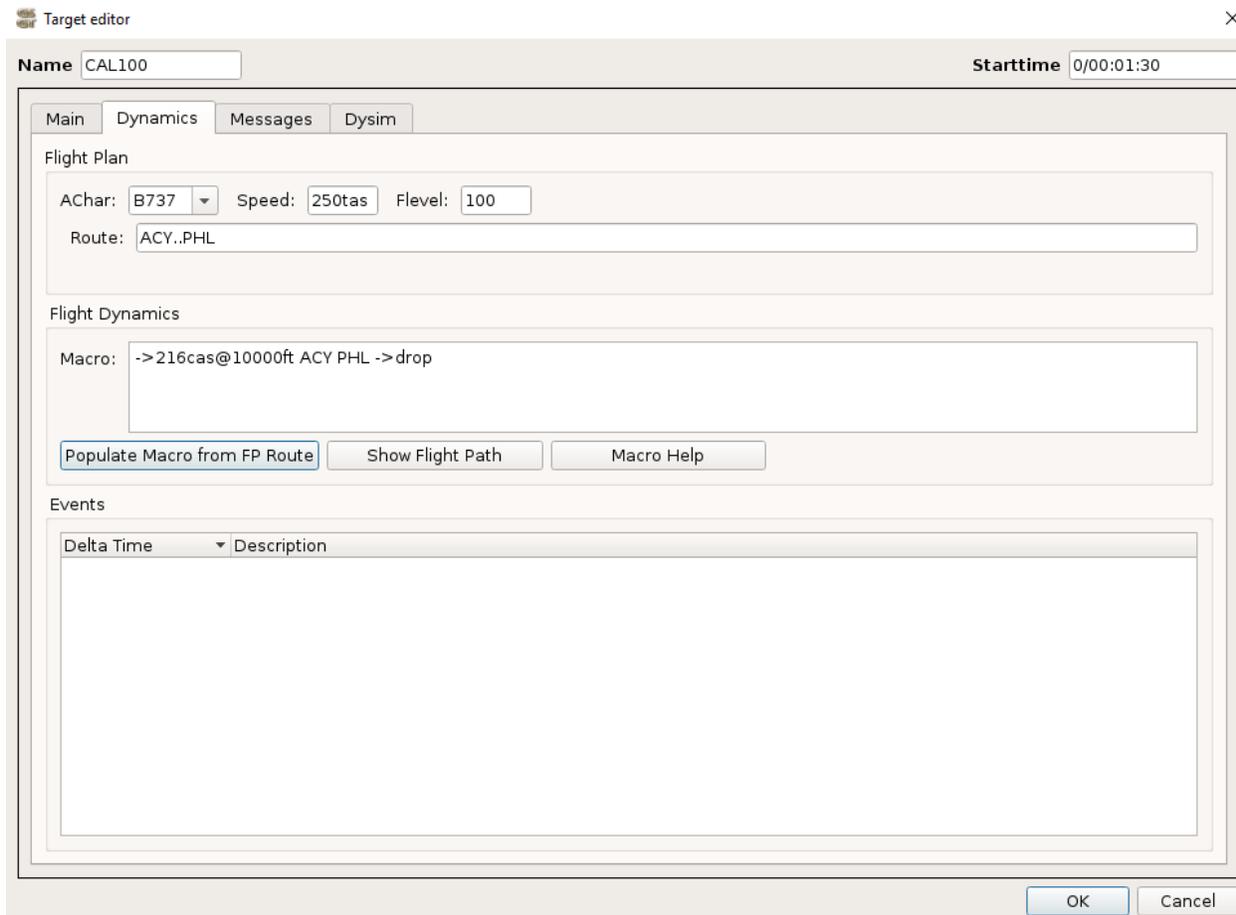

**Figure 64. Target Editor Dynamics Tab**

### ***Flight Plan***

#### ***AChar***

Drop-down menu allowing the user to select the aircraft characteristics of the target from the adapted aircraft types.

#### ***Speed***

Whole numbers specifying the aircraft speed in knots followed by the characters 'tas' or 'cas' or Mach speed in decimal format either preceded or followed by 'm'. If only digits are entered, TAS speed is assumed. The speed is not validated for the specified altitude or aircraft performance capabilities.

#### ***Flevel***

Flight Level. 1-3 numeric characters designating the flight altitude in hundreds of feet.

### **Route**

Text defining the planned flight route of the target.

### **Flight Dynamics**

#### **Macro**

A text field where the user can change the path of a flight without changing its filed flight plan route.

#### **Populate Macro from FP Route**

Upon clicking this will populate the **Macro** text field with commands derived from the **Route**. If any changes are made to the macro, the target will fly as what is written in the macro, versus its filed flight plan.

#### **Show Flight Path**

Displays the target's route in the adaptation viewer with a target dynamics information box.


#### **Macro Help**

A help box that will give some macro format examples.

The flight route can be entered in two ways, using the point and click feature of GSGT or by manually typing the flight route text in the dialog box. To use the point and click function, click the Route text box, then place the cursor over the desired element such as a fix or an airport and left-click the mouse. The element is added to the flight plan and displayed in the Route dialog box. As elements are added to the flight plan, fixes and airports are highlighted in BLUE, the flight route is outlined in RED between fixes, and segments along airways are outlined in GREEN.

Point and click adds new elements to the end of the flight plan. To add or remove an element in the middle of the route, manually modify the fix text in the flight plan dialog box or place the cursor after the element (before "." or "..") that you want to insert additional elements.

**NOTE:** *GSGT does not allow delay times to be typed directly in the route text. In order to create a delay, create a new target Delay Event.*

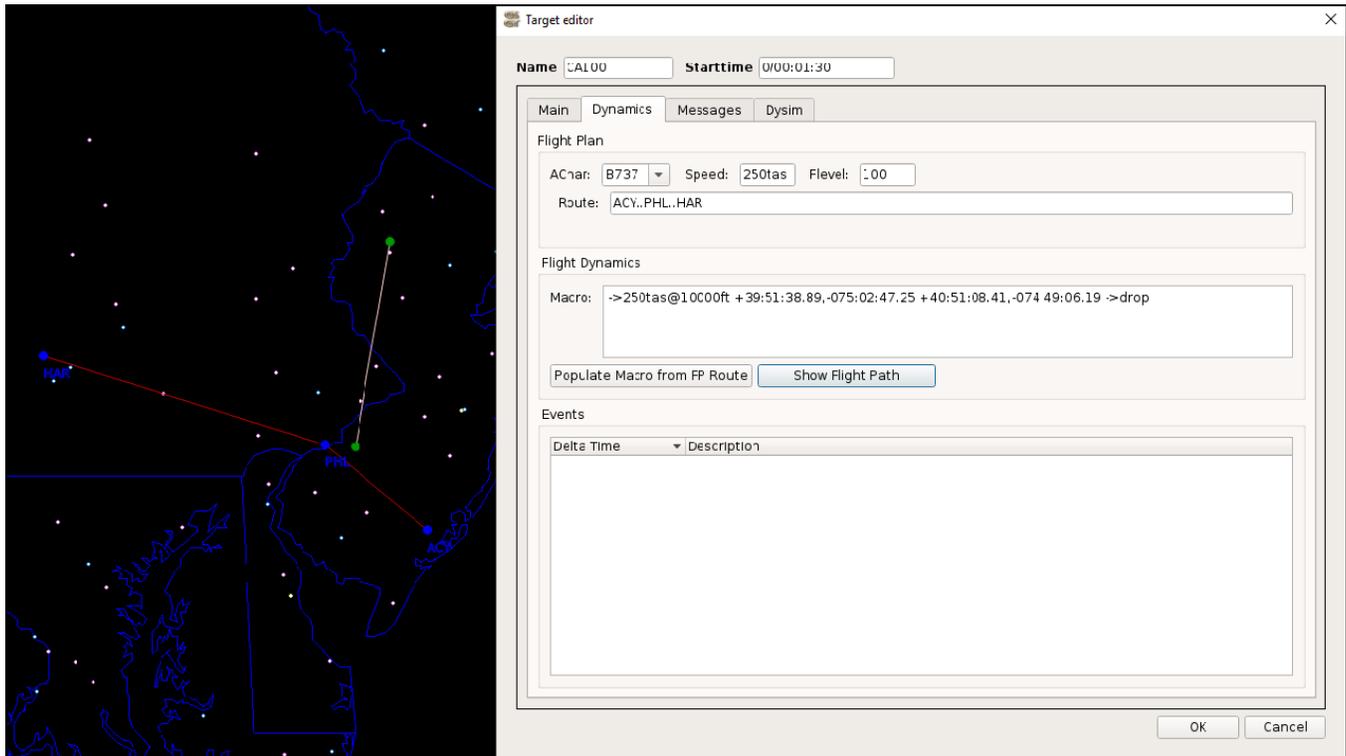

**Figure 65. Show Flight Path**

### **Events**

List of events that are applied to the target. The list specifies the condition when the event is applied and shortly describes the event. Right mouse click context menu options:

#### **New**


Opens the Target Event Editor dialog for a new event.

#### **Edit**

Opens an existing target event in Target Event Editor dialog.

#### **Delete**

Deletes the currently selected target event(s).

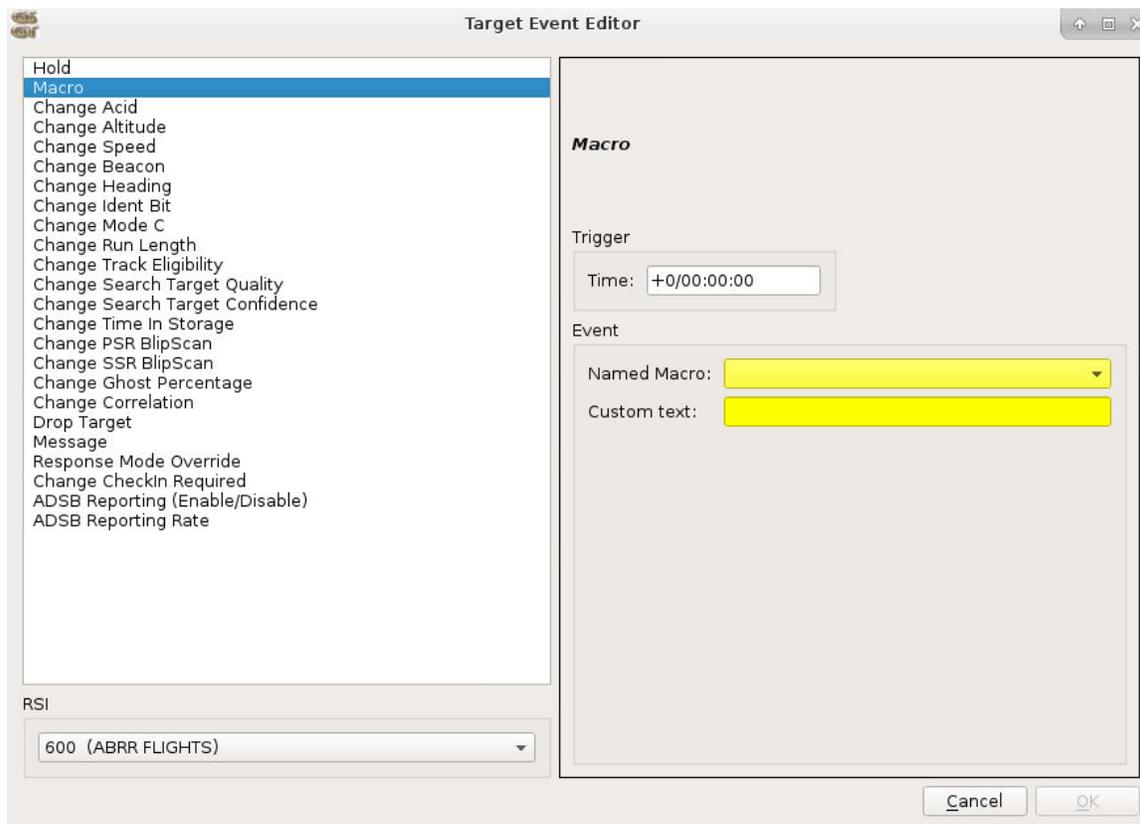

**Figure 66. Target Event Editor**

Target Events allow users to define a wide range of events that can be applied to a target to perform various tasks or change a target's characteristics. Reference table below describing all available events.

**Event Type List**

List of available event types that can be defined for the target.

**Trigger**

Allows user to set the time when the Target Event is performed as an offset of the target start time.

**Event**

The value(s) that will take effect when the Event is processed. The Drop Target Event does not have a Command value.

**Generate Msg**

If selected, a message reflecting the changed value will be generated. Only valid for ERAM scenarios and only for certain events such as change Acid, Altitude, Beacon, and Speed.

**RSI**

If selected, the RSI will be tied to the event for that Target. If that RSI is turned off the event will not trigger.

**OK**

Closes the dialog and creates the specified Event.

**Cancel**

Closes the dialog and returns to the Target editor.

**Table 6. Target Event Types**

Event	Description
Macro	Add a custom macro to be injected.
Change Acid	Changes target's ID
Change Altitude	Changes target's altitude with option to specify rate and slope as well as set altitude as interim.
Change Speed	Changes target's speed with option to specify rate
Change Beacon	Changes target's beacon code with option to change Mode 3A, ADSB or both
Change Heading	Changes target's heading with options to specify direction and rate
Change Ident Bit	Sets ident bit to enabled or disabled
Change Mode C	Sets Mode C to enabled or disabled
Change Run Length	Changes target's run length to a specific value
Change Track Eligibility	Changes target's track eligibility to a specific value
Change Search Target Quality	Changes target's search target quality to a specific value
Change Search Target Confidence	Changes target's search target confidence to a specific value
Change Time In Storage	Changes target's time in storage to a specific value
Change PSR Blip Scan	Changes target's primary search return (PSR) to a specific percentage value. When using ATCoach engine, PSR Blip Scan will only apply if its value is set to either 0 or 100.
Change SSR Blip Scan	Changes target's secondary search return (SSR) to a specific percentage value. When using ATCoach engine, SSR Blip Scan will only apply if its value is set to either 0 or 100.

Event	Description
Change Ghost Percentage	Changes target's ghost percentage to a specific percentage value (HCS version only)
Change Correlation	Changes target's correlation
Drop Target	Drops the target before the end of its the route
Message	Injects a specific message from R, D or A position
Response Mode Override	Overrides NAS responses such as DR or DX, or NAM responses such as LRM
Change Checkin Required	
ADSB Reporting (Enable/Disable)	Enables or Disabled ADSB transponder reporting
ADSB Reporting Rate	Sets ADSB target reporting rate

Custom macro commands can also be scripted as target events. The table below lists the types of macro commands that are available.

**Table 7. Custom Macro Commands**

Command	Description
<b>VNAV Commands</b>	
->dddcas	Change the calibrated air speed of the target to the value specified.
->dddcas~dddkt/min	Change the calibrated air speed of the target to the value specified at a given rate of change.
->dddtas	Change the true air speed of the target to the value specified.
->dddtas~dddkt/min	Change the true air speed of the target to the value specified at a given rate of change.
->.ddm	Change the mach speed of the target to the value specified.
->.ddm~dddkt/min	Change the mach speed of the target to the value specified at a given rate of change.

<p>-&gt;dddcas@dddddft or -&gt;dddtas@dddddft or -&gt;.ddm@dddddft</p>	<p>Change the speed and altitude of the target to the values specified.</p>
<p>-&gt;dddddft -&gt;dddddft~dddd</p>	<p>Change the altitude of the target to the value specified in feet. Change the altitude of the target to the value specified in feet at a given rate of change (in feet per minute).</p>
<p><b>LNAV Commands</b></p>	
<p>FIXNAME FIXNAME{attributes}</p> <p>Attributes:</p> <p>{arpt} {rw:dd} or {rw:ddA}  {ils:dd} or {ils:ddA}  {dddddft} {&lt;dddddft} {&gt;dddddft} {dddddftBdddddft}</p> <p>{dddcas}, {dddtas}, or {.ddm} {&lt;dddcas}, {&lt;dddtas}, or {&lt;.ddm} {&gt;dddcas}, {&gt;dddtas}, or {&gt;.ddm} {rf}{dddmag}{turnDir:A}</p>	<p>Proceed to the fix.</p> <p>Proceed to the fix and obey additional instructions or restrictions specified as attributes of the fix. Some attributes (such as speed and altitude restrictions) may be combined for the same fix.</p> <p>On the first fix, auto-apply departure logic; on the last fix, auto-apply top of descent (TOD) restriction. Not valid on other fixes.</p> <p>In conjunction with {arpt} on departures, use a defined departure procedure for the specified runway.</p> <p>In conjunction with {arpt} on arrivals, perform an ILS approach to the specified runway. This disables TOD processing.</p> <p>Cross the fix at the specified restriction altitude.</p> <p>Cross the fix at or below the specified restriction altitude.</p> <p>Cross the fix at or above the specified restriction altitude.</p> <p>Cross the fix between the specified restriction altitudes. Order is of the restriction altitudes is irrelevant.</p> <p>Cross the fix at the specified restriction speed.</p> <p>Cross the fix at or below the specified restriction speed.</p> <p>Cross the fix at or above the specified restriction speed.</p> <p>Perform a radius to fix turn (in the specified turn direction), exiting the fix at the specified heading.</p>

->dddmag	Change the heading of the target to the value specified in degrees from magnetic North.
->dddmag~ddddeg/sec	Change the heading of the target to the value specified in degrees from magnetic North at a given rate of change.
->dddtrue	Change the heading of the target to the value specified in degrees from true North.
->dddtrue~ddddeg/sec	Change the heading of the target to the value specified in degrees from true North at a given rate of change.
->hold	Hold indefinitely with right hand turns and 1 minute leg lengths.
->hold{legTime:dmin}	Hold indefinitely with right hand turns and leg lengths as specified in minutes.
->hold{turnDir:A}	Hold indefinitely with 1 minute leg lengths and left or right hand turns as specified.
->hold{duration:dmin}	Hold with right hand turns and 1 minute leg lengths for the specified amount of time. Once the duration time has expired, complete the current turn and proceed with the remaining route.
->hold{count:d}	Hold with right hand turns and 1 minute leg lengths for the specified number of laps.
->drop	Drop the target.
<b>Mode3A and Mode C Commands</b>	
->Boooo	Set or change the beacon code.
->BE	Enable the Mode 3A beacon.
->BD	Disable the Mode 3A beacon.
->MCE	Enable Mode C.
->MCD	Disable Mode C.
->RADARE	Enable radar detection.

->RADARD	Disable radar detection.
->ADSBE	Enable ADSB detection.
->ADSBD	Disable ADSB detection.
<b>Target Attributes</b>	
->set:autoLogon=d	Set the autoLogon attribute to 0, off, or 1, on.
->set:cpdlcResponseMode=<mode>	Set the cpdlcResponseMode attribute to manual or auto.
->set:cpdlcResponseDelay=ddd	Set the cpdlcResponseDelay attribute to the specified number of seconds.
->set:script=name	Set the script attribute to the specified script name.
->set:tdls=name	Set the tdls attribute to the specified TDLS name.
->set:disableTracker=d	Set the disableTracker attribute to 1, disabled, or 0, enabled.
->set:freeText=text	Set the freeText attribute to the specified text. This appears in the datablock of the target.
->clear:<attribute>	Clear the target attribute specified.

**NOTE:** *A indicates an alphabetic character, d indicates decimal digits, o indicates octal digits, and ~ indicates a rate of change.*

### 5.6.1.3. Target - Messages

The Messages tab of the Target Dialog lists all non-radar messages associated with the target. The messages can be auto-generated (auto-derived) based on the route of the target or manually created. Messages are defaulted to auto-generate but can be turned off when **Auto-generate msgs** is deselected.

When target is set to auto-generate messages, GSGT will generate all appropriate non-radar messages such as flight plan, start tracking, and handoff control of the flight between controllers and/or facilities as needed.

Additionally, parameters controlling the creation of auto-generated messages can be set in the scenario Preferences or Target Preferences.

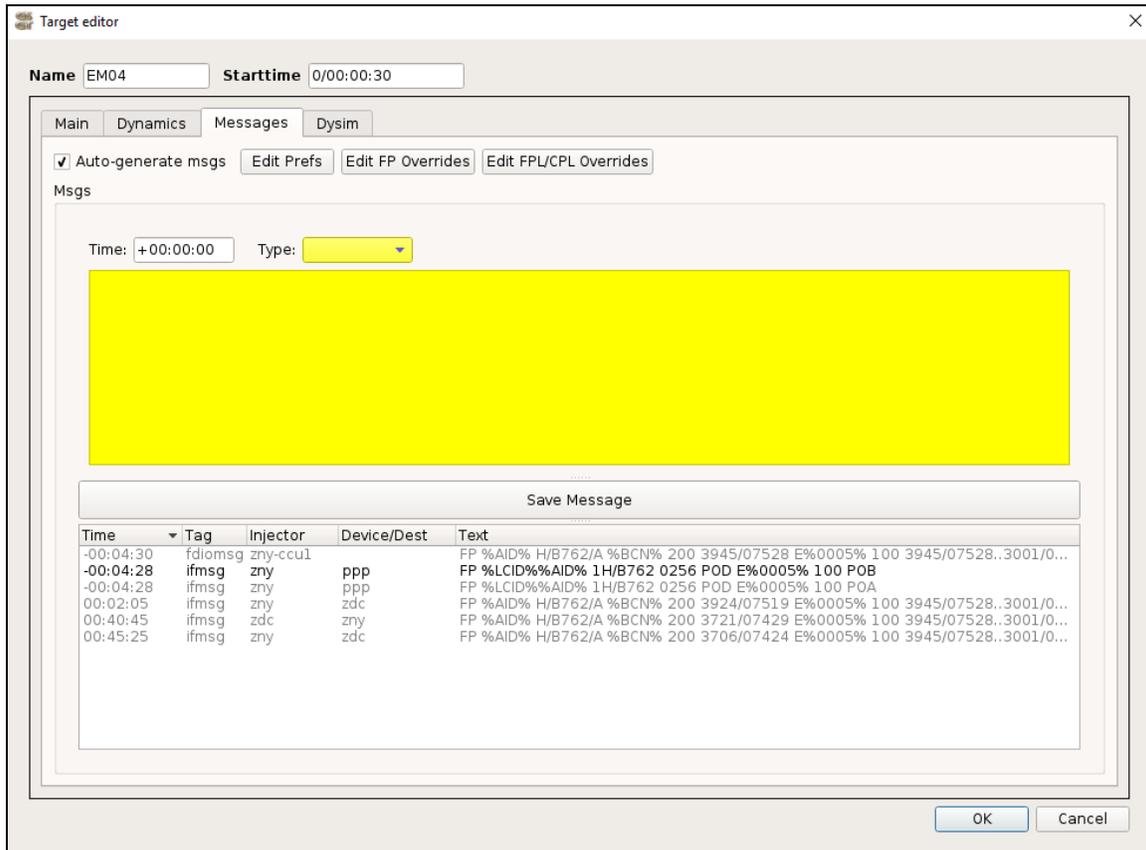


Figure 67. Target Editor Messages Tab

Table 8. Non-radar Message Color Coding

Color	Description
GRAY	auto-generated messages, cannot be edited unless frozen
BLACK	frozen messages

**NOTE:** Frozen messages are always associated with the target and are not automatically updated as target characteristics are changed, except for when replicating and changing name and timing of the target. Auto-generated messages on the other hand, are automatically regenerated on every change to the target.

**NOTE:** Once a target enters a 'live' sector, derived messages are no longer generated.

### **Auto-generate msgs**

Enables auto generation of messages for the target.

### **Edit Prefs**

Set target specific preferences for auto-generated messages.

### **Edit FP Overrides**

Sets override values for auto-generated FP messages.

### **Edit FPL/CPL Overrides**

Sets override values for auto-generated FPL/CPL messages.

### **Msgs**

List of non-radar messages associated with the target. Clicking on the 'Time' header will sort the messages in time order. Clicking on 'Device/Dest', 'Injector', or 'Text' will sort appropriate column in alphanumeric order. Clicking on any of these headers twice will reverse the order of the sort.

Double click to edit a frozen message.

Right mouse click context menu options:

#### **Delete**

Removes selected message(s) from the list.

### **5.6.1.3.1. Auto Deriving Target Messages**

When the **Auto-generate msgs** box is checked, GSGT calculates target positions along its entire route and derives appropriate non-radar messages, and then populates the messages list. In order to accomplish this, GSGT runs the simulation engine.

When the **Auto-generate msgs** box is unchecked while there are any derived messages in the list, a dialog box is displayed to confirm whether the derived messages should be saved as frozen messages or removed.




**Figure 68. Freeze Derived Messages**

### **5.6.1.3.2.Edit Prefs**

Target Preferences override the scenario preferences on a per target basis. To enable override of any particular preference, select and check that preference. When a parameter is checked, its value will be applied to this target only. When unchecked, the general scenario Preference value will apply.

Parameters in the Target Preferences behave exactly the same as in the scenario Preferences with an exception that target preferences are applied only per target basis. See section 5.1.1 details each preference option.

The section for deriving flight plans for domestic proposed flights is used to override the scenario preferences to force generation of FP or FPL.

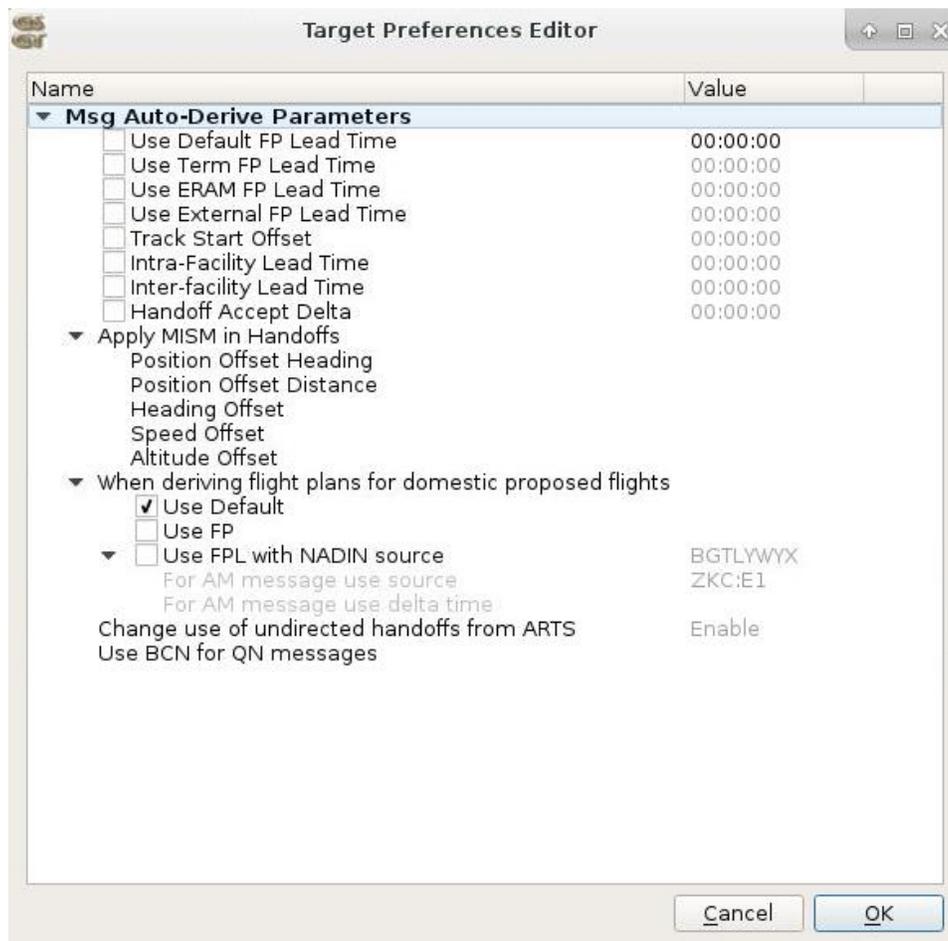

**Figure 69. Target Specific Preferences**

### Use Default

Uses default setting to generate FP or FPL according to scenario preference.


### Use FP

Forces generation of FP regardless of scenario preference

### Use FPL with NADIN source

Forces generation of FPL from specified NADIN device regardless of scenario preference. Additionally, in some situations AM messages are auto-derived from source device and with delta time as specified.


When any of the parameters in the Target Preferences Editor are changed from the default, the 'Edit Prefs' button will show an attention icon indicating that values are changed, as illustrated below.

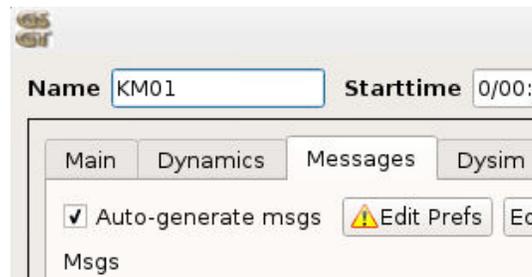

**Figure 70. Edit Prefs Attention Icon**

### 5.6.1.3.3.FP Overrides

The parameters in the FP Overrides Editor dialog override values in derived FP messages for this target only. When value is cleared, the default value in derived FP message is restored.

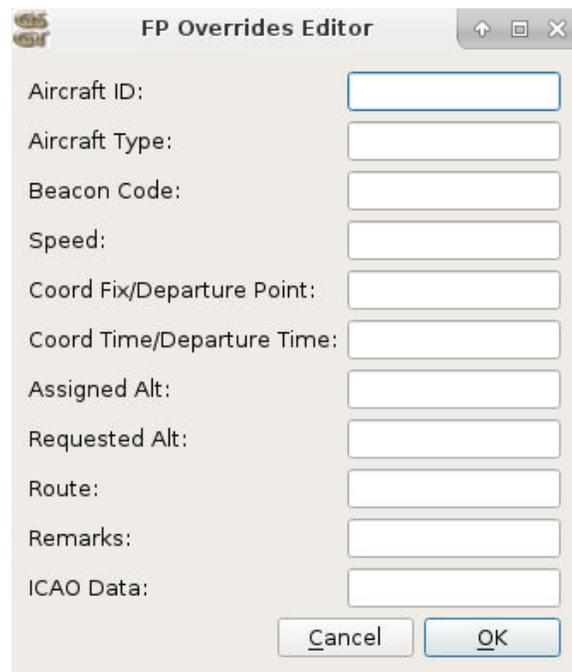

**Figure 71. Flight Plan Override Editor**


When any of the parameters in the FP Overrides Editor are set to be overwritten, the 'Edit FP Overrides' button will show an attention icon indicating that values are overridden, as illustrated below.



**Figure 72. Edit FP Overrides Attention Icon**


#### 5.6.1.3.4. FPL/CPL Overrides

The parameters in the FPL/CPL Overrides Editor dialog override values in derived FPL/CPL messages for this target only. When value is cleared, the default value in derived FPL/CPL message is restored.

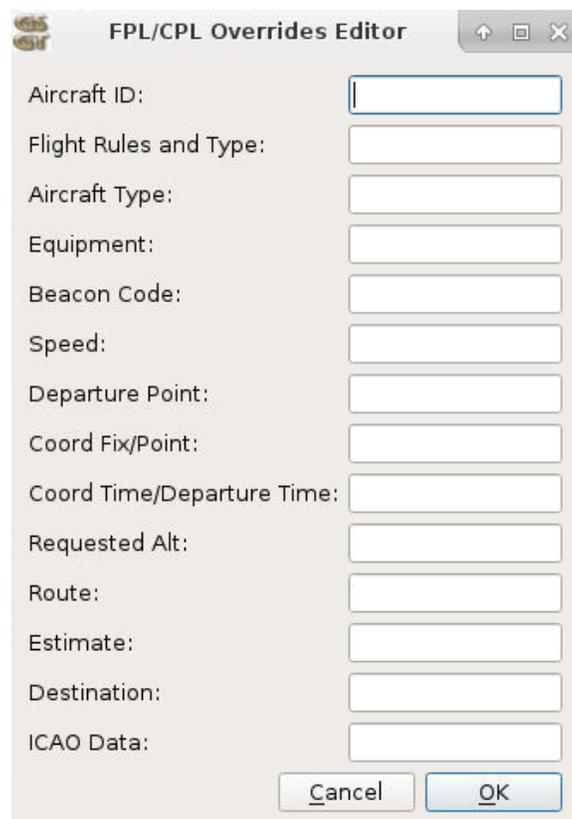

**Figure 73. ICAO Flight Plan Overrides Editor**

When any of the parameters in the FP Overrides Editor are set to be overwritten, the 'Edit FPL/CPL Overrides' button will show an attention icon indicating that values are overridden, as illustrated below.

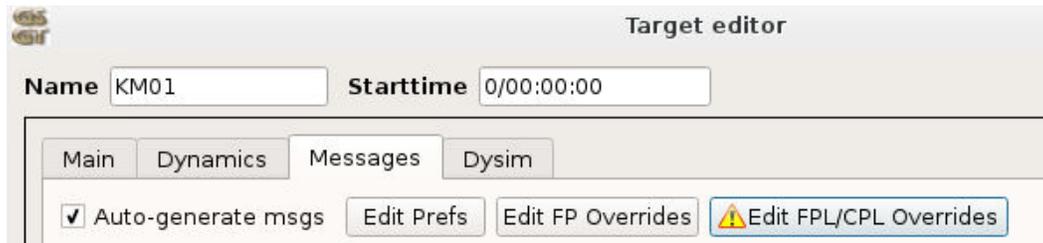

### 5.6.1.3.5. Manually Creating Messages

Creating non-radar messages for a target works identically as for System Commands with exception that messages are associated with the Target instead of being independent. The same set of message editors is used to edit the messages, which are automatically determined for appropriate type of message.

To create a new target message, select a message type and appropriate device(s) from the drop downs above the text input area. Enter a message injection time offset and select an RSI, if desired. Type the message contents into the free form text area and press enter or the 'Save Message' button. The new message is added to the message list below the text input area. Press 'OK' to update the target. Some message types will only accept specific formats; for example rctsmg will only accept a message in xml format.


Flight data messages scripted within the Target editor may include substitution tokens for target identification fields such as AID, CID, GUF, etc. Upon execution, these tokens will be replaced with the appropriate values for the target.

Messages that are auto-derived cannot be edited until **Auto-generate msgs** is deselected. If the **Auto-generate msgs** is selected after being deselected and the original generated messages were frozen, the messages will be automatically re-derived and in essence making a duplicate message.

**NOTE:** Changes made in the Flight Plan Editor do NOT affect the target attributes set in the Target Attributes Editor.


### 5.6.1.3.6. Validating Messages (RTCS & TTP)

Manually created RTCS and TTP messages can be validated against the current schema. After creating and saving the message, right click and select Validate <message type>

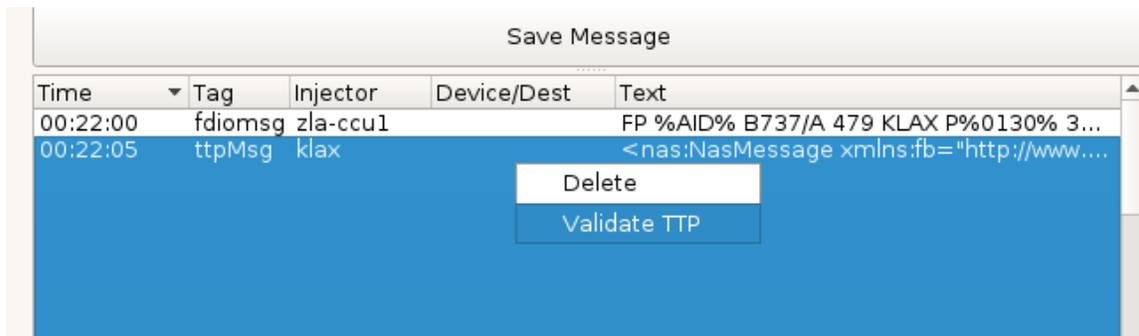

**Figure 74. RTCS and TTP Message Validation**


A popup box will appear confirming the messages validation or detailing why the message failed validation.

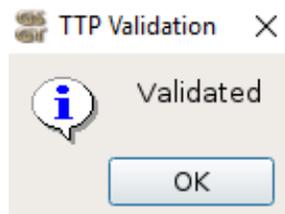

**Figure 75. Validation Successful**

#### 5.6.1.4. Target Dysim Definitions

The Dysim tab of the Target editor provides ability to change engine specific options and define Pre-Programmed Events and Pilot Prompts. This tab is labeled Dysim when running with JVN simulation engine.

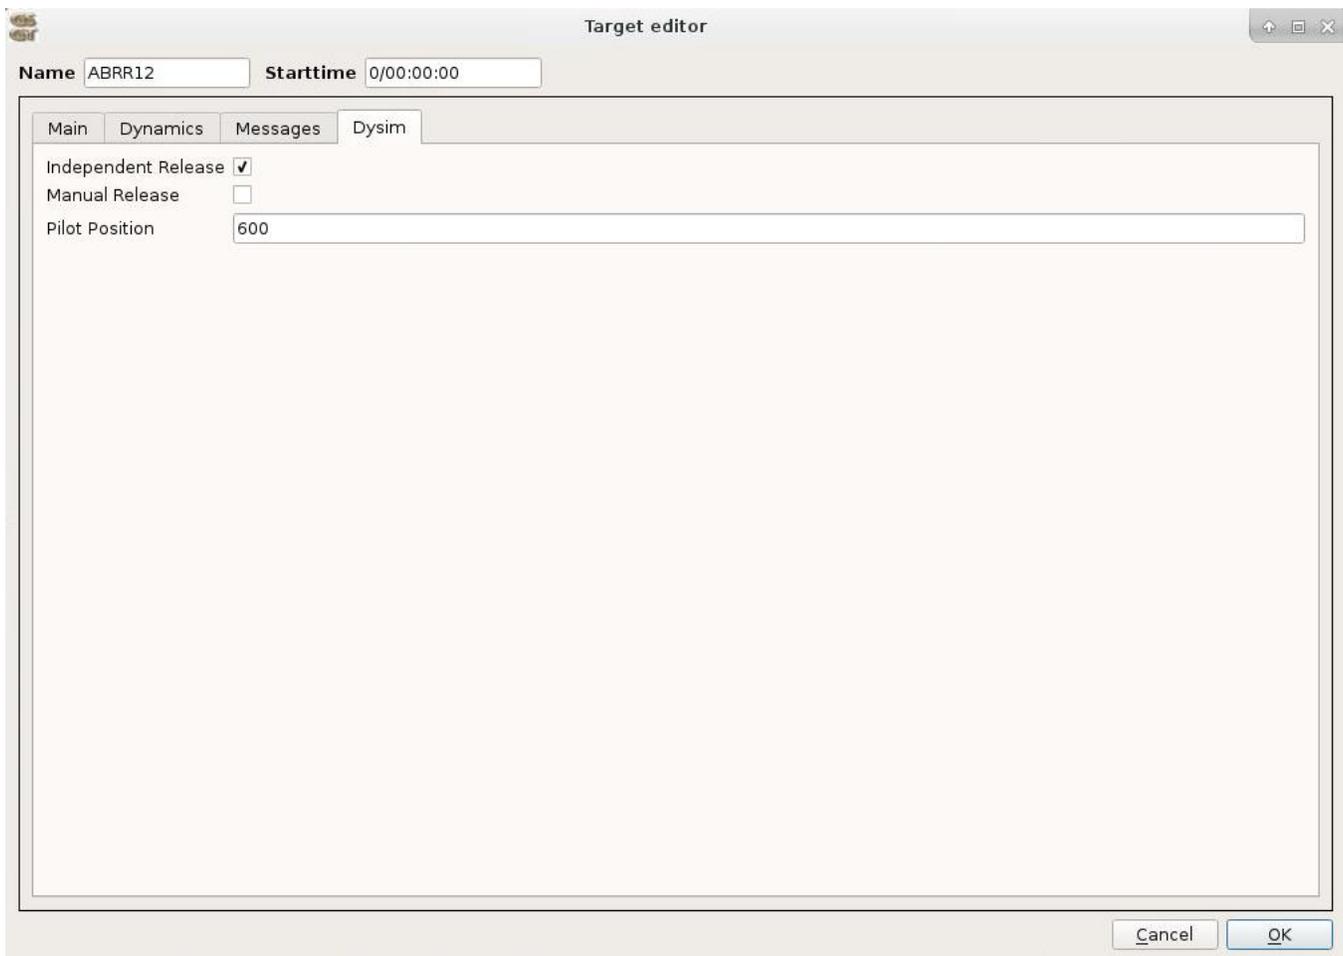

**Figure 76. Target Editor Dysim Tab**

### Independent Release

Engine will not generate the target at the start time. It needs to be released from pilot position. The flight will be in the scenario but no flight data messages will inject nor will the target start until the user manually injects them.

### Manual Release

Engine will generate the target's flight data messages but will not release the target at the start time.

### Pilot Position

Pseudo Pilot assigned to the target (optional) (ERAM version only).

## 5.6.2. Target List Context Menu

Right-clicking on selected target(s) in the object tree of the Scenario Editor Main Window opens a context menu with certain actions such as Replicate and Filter by AID.

ABRR2	00:00:00	B737	290	->0.76m@290FL HOBER0...	600	600	ABRR-2 SCRIPT GROUP 1	Yes	
ABRR3	00:00:00	B737	310	->0.77m@310FL HOBER0...	600	600	ABRR-1 SCRIPT GROUP 1	Yes	
ABRR4	00:00:00	B737	290	->0.76m@290FL HOBER0...	600	600	ABRR-2 SCRIPT GROUP 1	Yes	
ABRR5	00:00:00			New	0.77m@310FL HOBER0...	600	600	ABRR-1 SCRIPT GROUP 2	Yes
ABRR6	00:00:00			Delete	0.76m@290FL HOBER ...	600	600	ABRR-2 SCRIPT GROUP 2	Yes
ABRR7	00:00:00			Show Flight Path	0.77m@310FL HOBER0...	600	600	ABRR-1 SCRIPT GROUP 2	Yes
ABRR8	00:00:00			Replicate	0.76m@290FL HOBER0...	600	600	ABRR-2 SCRIPT GROUP 2	Yes
ABRR9	00:00:00			Clear replications	0.77m@310FL HOBER0...	600	600	ABRR-1 SCRIPT GROUP 3	Yes
ABRR10	00:00:00			Selection count	0.76m@290FL HOBER0...	600	600	ABRR-2 SCRIPT GROUP 3	Yes
ABRR11	00:00:00			Assign RSI	0.77m@310FL HOBER0...	600	600	ABRR-1 SCRIPT GROUP 3	Yes
ABRR12	00:00:00			Filter by AID	0.76m@290FL HOBER0...	600	600	ABRR-2 SCRIPT GROUP 3	Yes
ABRR13	00:00:00				0.77m@310FL HOBER0...	600	600	ABRR-1 SCRIPT GROUP 4	Yes
ABRR14	00:00:00				0.76m@290FL HOBER0...	600	600	ABRR-2 SCRIPT GROUP 4	Yes
ABRR15	00:00:00				0.77m@310FL HOBER0...	600	600	ABRR-1 SCRIPT GROUP 4	Yes
ABRR16	00:00:00				0.76m@290FL HOBER0...	600	600	ABRR-2 SCRIPT GROUP 4	Yes
CCC1 (+4)	04:00:00	B737	260	->0.67m@260FL CNG PX...	300	300	IN-OUT-IN FLIGHT	Yes	
COC1 (+4)	05:00:00	B737	280	->0.67m@280FL CNG DE...	400	400	MULTI-HELD TOC FLIGHT	Yes	
LIT1 (+10)	00:02:00	B737	330	->0.69m@330FL HOBER ...	100	100		Yes	
LIT2 (+10)	00:02:00	B737	330	->0.69m@330FL HOBER0...	100	100		Yes	
LIT3 (+10)	00:02:00	B737	330	->0.69m@330FL HOBER0...	100	100		Yes	
LIT4 (+10)	00:02:00	B737	330	->0.69m@330FL HOBER0...	100	100		Yes	
LIT5 (+10)	00:02:00	B737	330	->0.69m@330FL HOBER0...	100	100		Yes	
MEM1 (+10)	00:02:00	B737	300	->0.68m@300FL MUDHO ...	200	200		Yes	
MEM2 (+10)	00:02:00	B737	300	->0.68m@300FL MUDHO ...	200	200		Yes	
MEM3 (+10)	00:00:00	B737	300	->0.68m@300FL MUDHO ...	200	200	SWIM AMENDMENT WITH PROTECTED SEG...	Yes	
MEM4 (+10)	00:02:00	B737	300	->0.68m@300FL MUDHO ...	200	200		Yes	
MEM5 (+10)	00:00:00	B737	300	->0.68m@300FL MUDHO ...	200	200	SWIM AMENDMENT NO PROTECTED SEGME...	Yes	

Figure 77. Target List Context Menu

### New

Display the Target Editor to create a new Target.

### **Delete**

Delete the selected target(s).

### **Show Flight Path**

Display the target's route in the adaptation viewer with a target dynamics information box for selected Targets.

### **Replicate**

Opens the Replication dialog, which provides the ability to produce copies of the selected target.

### **Clear Replication(s)**

Clears all non-frozen replications, leaving only the original Target.

### **Selection Count**

Displays how many Targets are currently selected.

### **Assign RSI**


Assign the selected Targets the given RSI.

### **Filter by AID**

Filters the Editor with only the selected Target(s).

## **5.6.3. Target Conflict Message**

Any modification to the target's beacon code that results in a conflict is reported and must be confirmed by the user.

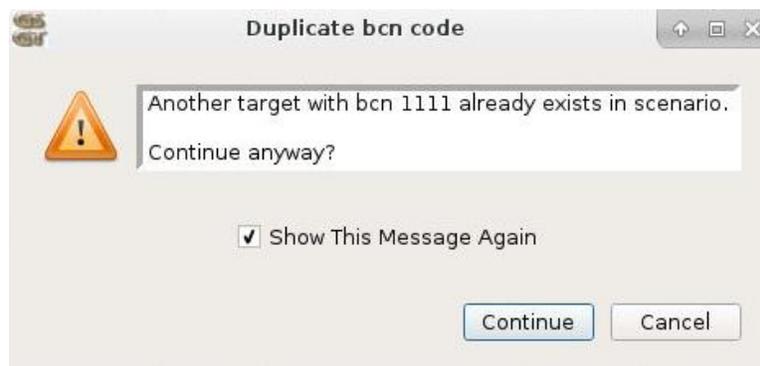

**Figure 78. Target Conflict Warning**

***Continue***


Saves the target with a duplicate beacon code.

***Cancel***

Closes the dialog and returns to the Target editor without applying the changes.

## **5.7. Script Definitions**

Scenario developers can create sets of messages such as DataComm logon scripts or TTP flight updates. The DataComm logon scripts can be edited using the Script Definitions tab of the Scenario Editor. However, the XML formatted TTP messages must be manually edited with a text editor such as **vi**. The script can be a set of common messages that can be applied to multiple targets without having to script each set individually for each target. If a Target has a script defined it will run the script at the time set by the user. The start of the script can be relative to the target start (activation) time or it can be triggered by a particular generated message.

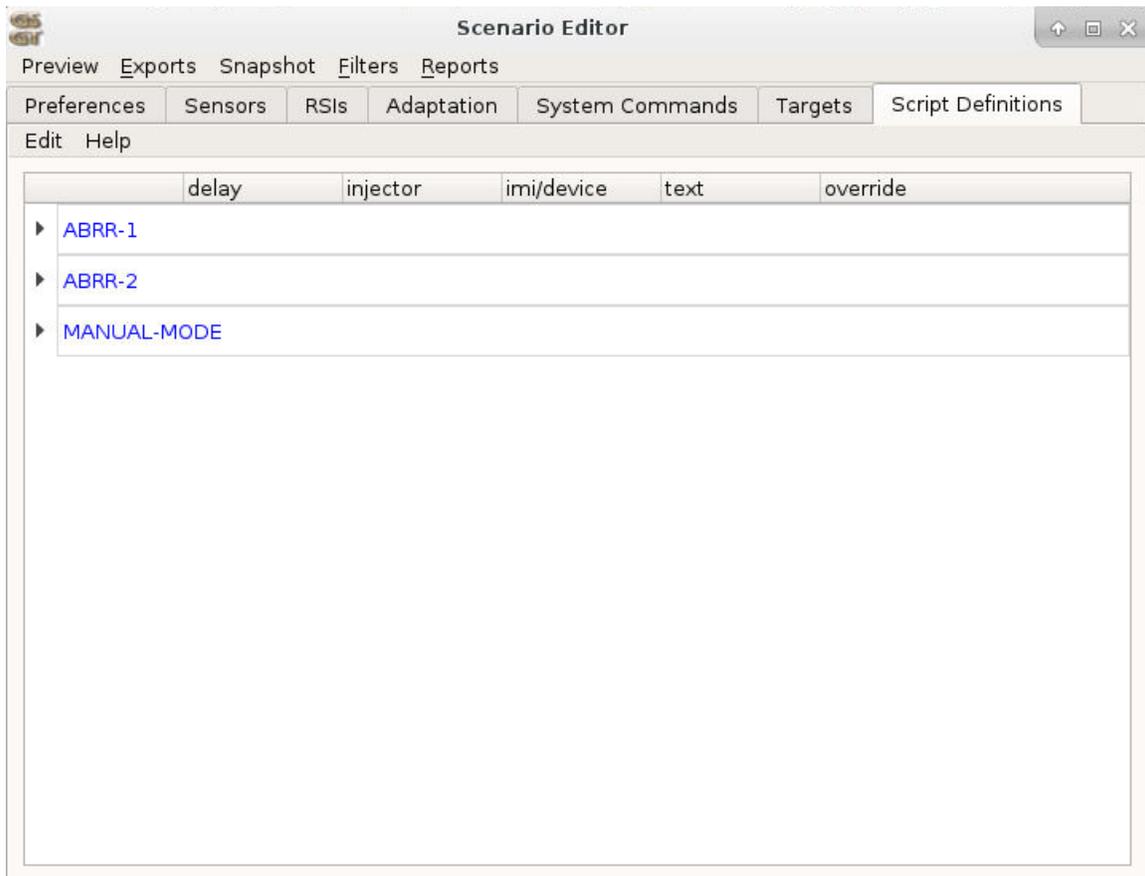

**Figure 79. Script Definitions Tab**

## 6. Preview

The Preview function provides a dry-run simulation capability in GSGT, where users can visually examine targets defined in the scenario in a time based environment. There are several types of preview functions in GSGT tailored for specific needs. Preview, which simulates the entire scenario, and Show Flight Path, that allows to preview targets for fine tuning its parameters while in edit mode.

When Preview is invoked, a dialog is presented to select options for the preview, such as the time to start the preview. This is helpful particularly when scenario is several hours long but user wants to preview the last hour of the scenario. Instead of running through the entire scenario from the start, preview can start at any specific time between the start and end of the scenario.

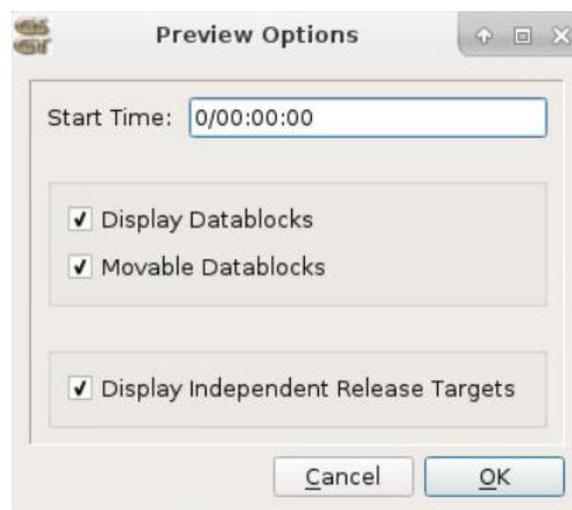


Figure 80. Preview Options

### ***Start Time***

Select the time to start the Preview.

### ***Display Datablocks***

The selected targets in preview will have datablocks with their callsign, heading, speed and altitude.

### ***Movable Datablock***

When selected, and Display Datablocks is selected, the datablock can be moved on the display using left mouse click and drag.

### Display Independent Release Targets

If selected the targets tagged for Independent Release will inject at their assigned starttime.

#### OK

Begins Preview Mode, starting at the specified Start Time.

#### Cancel

Cancels Preview Mode.

## 6.1. Scenario Preview

Preview, also known as Scenario Preview, invokes preview that simulates the entire scenario, with all targets displayed at their appropriate time in simulation. Preview also displays messages that are included with the targets that appear along its route corresponding to the time at which they would be injected by simulation. The target data blocks and displayed messages can be moved using left mouse click and drag to unclutter any particular feature on the display.

To open a Preview, select **Preview** from the Scenario Editor and then click 'OK'.

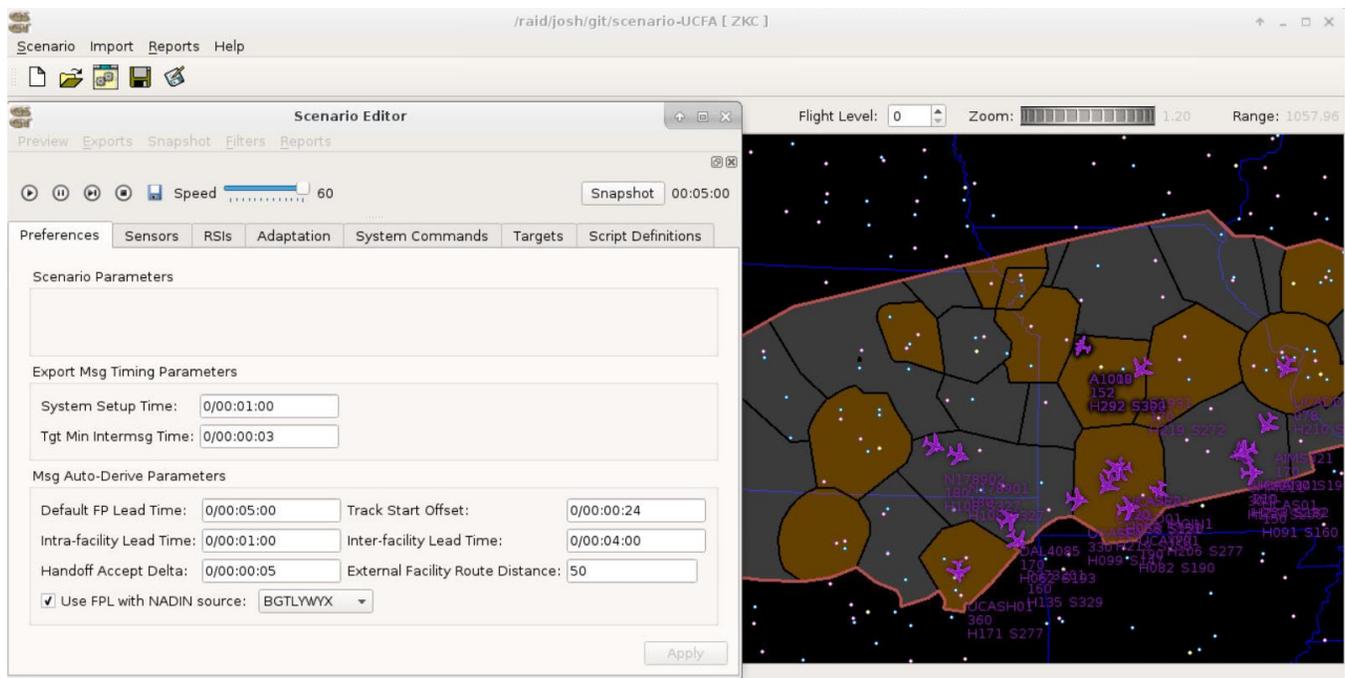


Figure 81. Scenario Preview

When Preview is invoked, the standard toolbar is replaced with preview toolbar for controlling the preview. The controls include the ability to start, pause and step through the preview. Additionally, the preview can be run at a variable speed from 1 (real time) to 60 (1 minute of the sim = 1 second wall clock). There is also an option to create a Snapshot of the scenario at a specific time with selected targets.



**Figure 82. Preview Controls**

***Play***

Starts playing the preview at the specified run speed.

***Pause***

Pauses the preview.

***Step***

Steps through the preview at time intervals of Speed value.

***Stop***

Stops the preview and returns to normal edit mode.

***Save***

Saves cloned targets.

***Speed***

Specifies the preview rate relative to time in seconds. Valid range is 1-20 (1-60 in the HCS version) scenario seconds per real time second.

***Snapshot***

Takes a snapshot of the current scenario at the time taken. There has be targets in the scenario to take a snapshot, and preview needs to be started.



**Figure 83. Snapshot Options**


### ***Time***

The elapsed time of the preview - current scenario time.

Targets can be highlighted using right mouse click on a target, which toggles the display macro route of the flight with each fix being a GREEN dot and the WHITE lines being the route the target will follow to its next fix. In addition a context box is displayed with target's details such as its current position, speed, heading and altitude.

## **6.2. Show Flight Path**

The Show Flight Path function enables previewing targets while editing the scenario. Every target in this mode is previewed independently of other targets and can be moved back and forth along its preview. There are no controls to start or pause the preview. The preview is simply done by mouse dragging the airplane along its route.

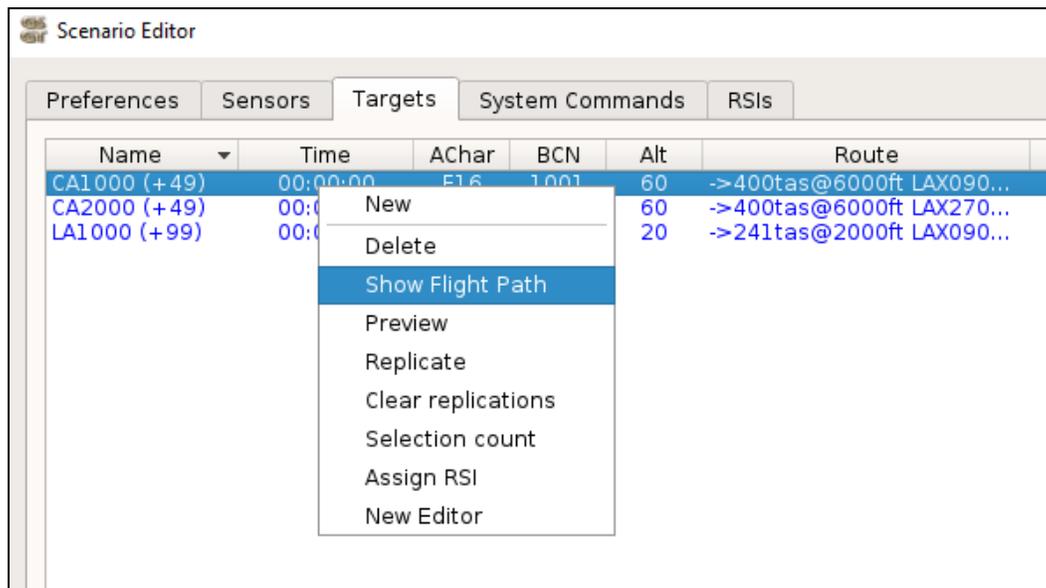

**Figure 84. Show Flight Path**

While target is displayed in Show Flight Path preview, its route using BLUE fixes connected by RED lines between fixes and GREEN dashes between segments along the airways. Additionally, the targets actual route, which corresponds to radar positions, is displayed using GREEN plus symbols. Target's actual route will reflect target events such as holds or heading changes. Also, a context box is displayed with target's details such as its current position, speed, heading and altitude and it's constantly updated when target is dragged along its route. This provides target's details at a particular point in space and time in preview. When the dialog is closed or user right mouse clicks on the target, the target exits the Show Flight Path preview.

To start a Show Flight Path preview for any set of targets, from the Scenario Editor window, select single target or group of targets using **SHIFT** or **CTRL** keys and left mouse click. Then right click on the selected targets to open a context menu and select **Show Flight Path**.

Optionally, all non-radar messages associated with the target can be previewed on its route, which are placed at position corresponding to the time when the messages are injected. To preview messages associated with the target, select **View** button from the target context box and select **Show Messages**. Messages can be moved on the display using left mouse click and drag to unclutter any part of the display.

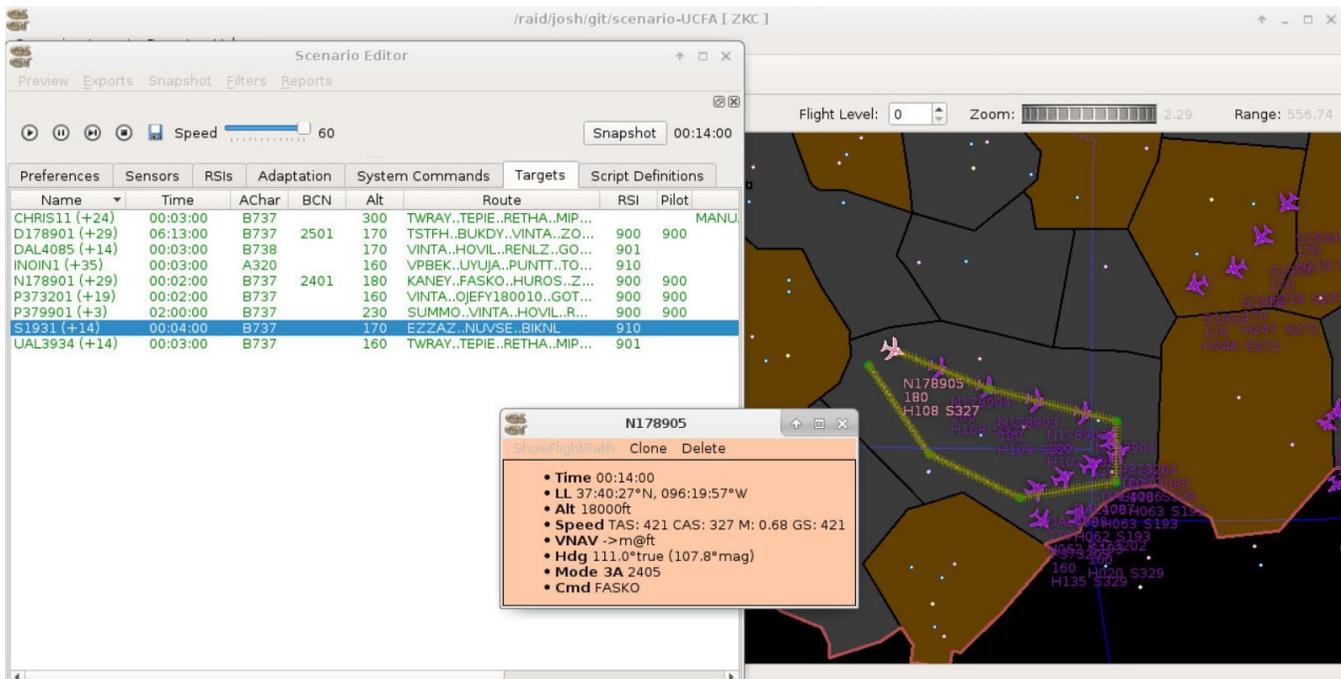


Figure 85. Target Flight Path

### 6.3. Clone a Flight

To clone a flight in GSGT, start preview mode from the Scenario Editor. Make sure to have the flight that will be cloned already created in the scenario. Then right click the flight on the map, and click ShowFlightPath. This will enable the clone option for that flight to be selected.

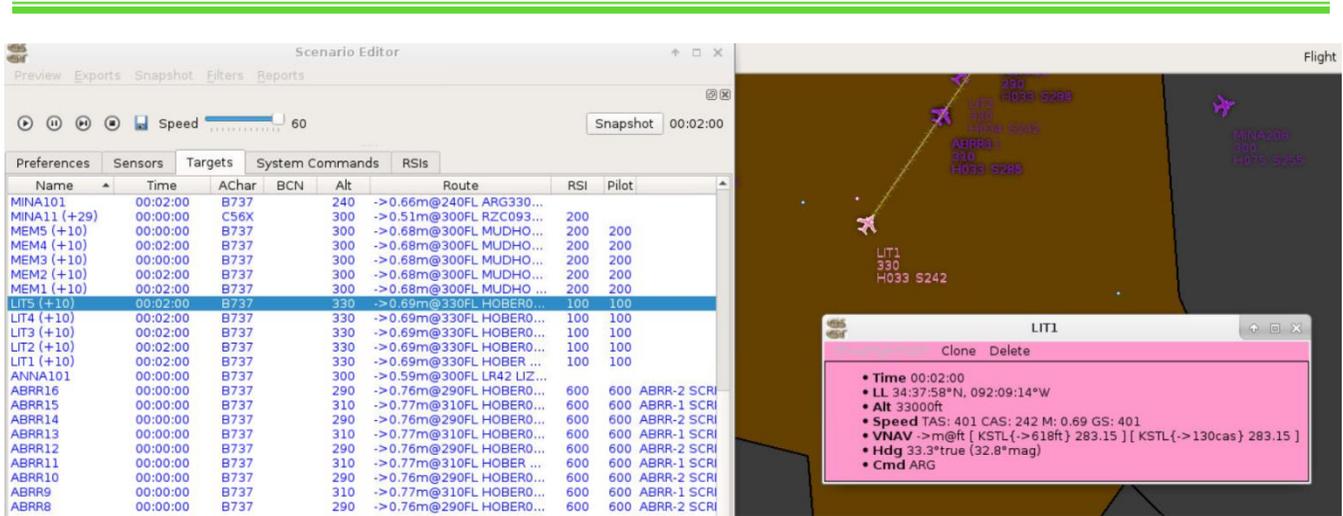


Figure 86. Cloning a Flight in Preview

## 7. Import Functions

GSGT includes functionality to import data from several different sources such as GSGT scenarios, NAS SIM, DYSIM, Host and ERAM SAR, RTF, and TGF.

Import can be performed into a currently open scenario. Before starting Import process, user must create a new scenario or open an existing scenario.

### 7.1. Import GSGT Scenario


The GSGT Scenario import functionality enables the user to import an already existing GSGT scenario into the current scenario, in whole or in part.

To start import process select **Import->GSGT Sim** from the GSGT Main Window.



**Figure 87. Import Scenario**

Select the GSGT scenario to import into current scenario.

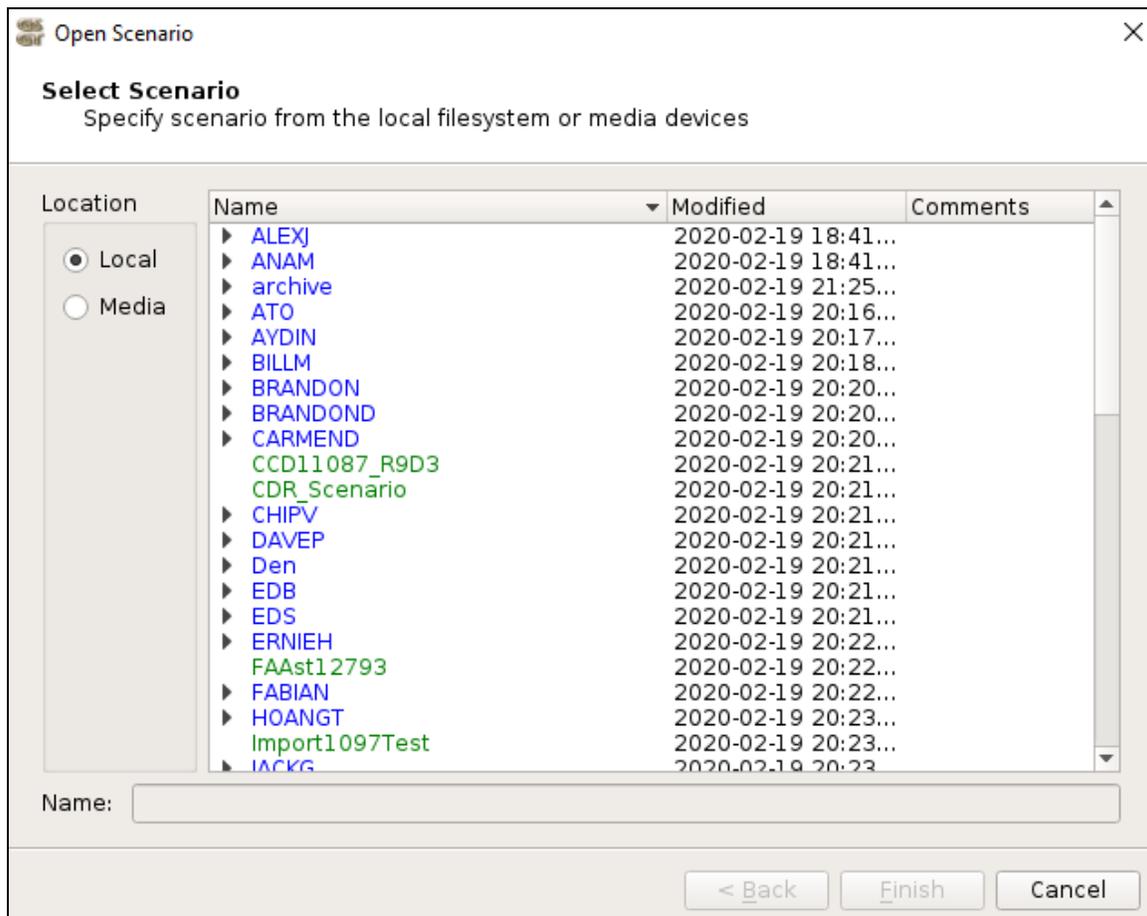

**Figure 88. Scenario Selection**

**Back**

Disabled in this window.


**Finish**

Opens the selected scenario.

**Cancel**

Closes the window and cancels the import scenario action.

After selecting a scenario, the following dialog is presented which allows the user to select the elements from the scenario to import. The first page allows the selection of Prefs, RSIs, Targets, and System Commands.

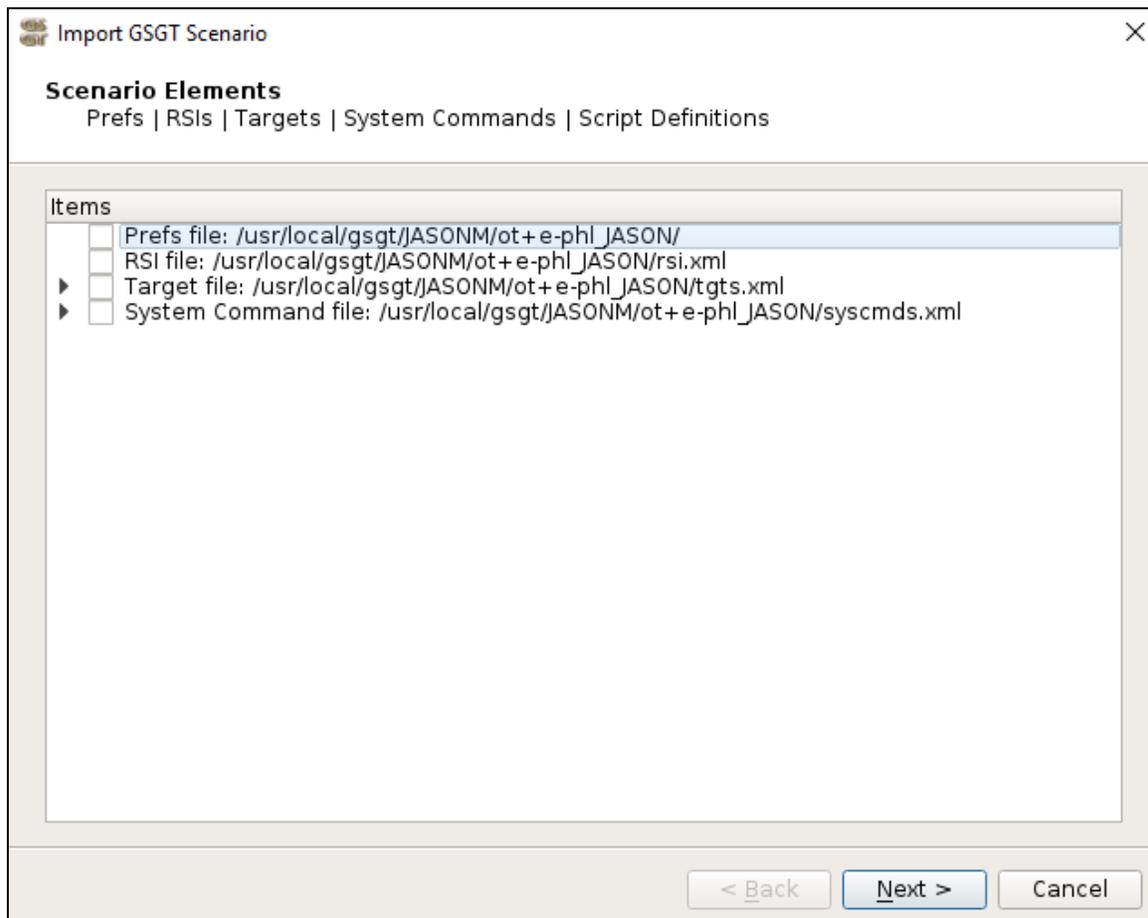

**Figure 89. Select Scenario Elements**

**Back**

Returns to previous page of the import dialog.


**Next**

Advances to the next page of the import dialog.

**Cancel**

Closes the scenario import dialog.

The second page allows the selection of user defined maps (if the selected scenario has any).

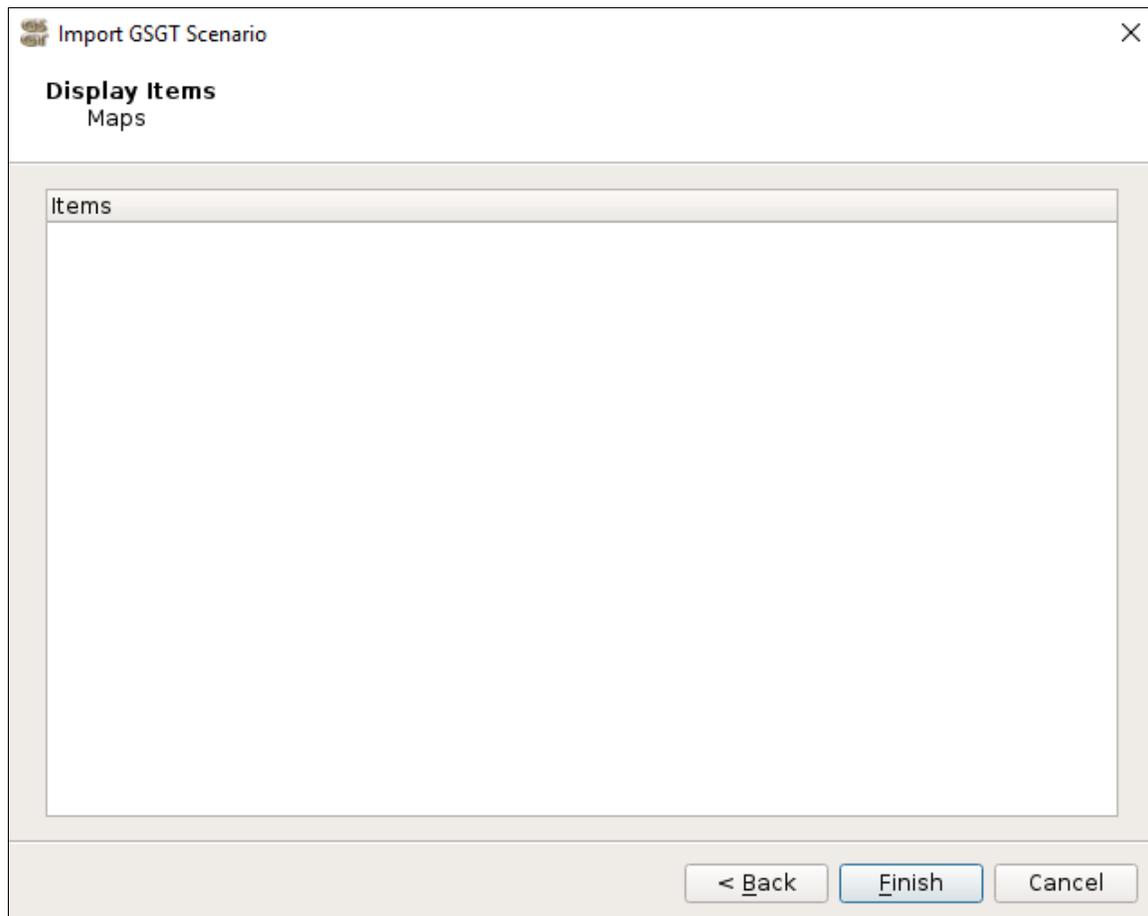

**Figure 90. Select Display Items**

***Back***

Returns to previous page of the import dialog.

***Finish***

Imports the selected items into the current scenario.

***Cancel***

Closes the scenario import dialog.

After import is complete a message box is presented to review status of import and errors during parsing or opening of the selected scenario.




**Figure 91. Import Errors and Warnings**

For NASQuest, start the import process by selecting **Import->Nasquest** from the GSGT Main Window.




**Figure 92. NASQuest Import**

For CSV, start the import process by selecting **Import->CSV** from the GSGT Main Window.

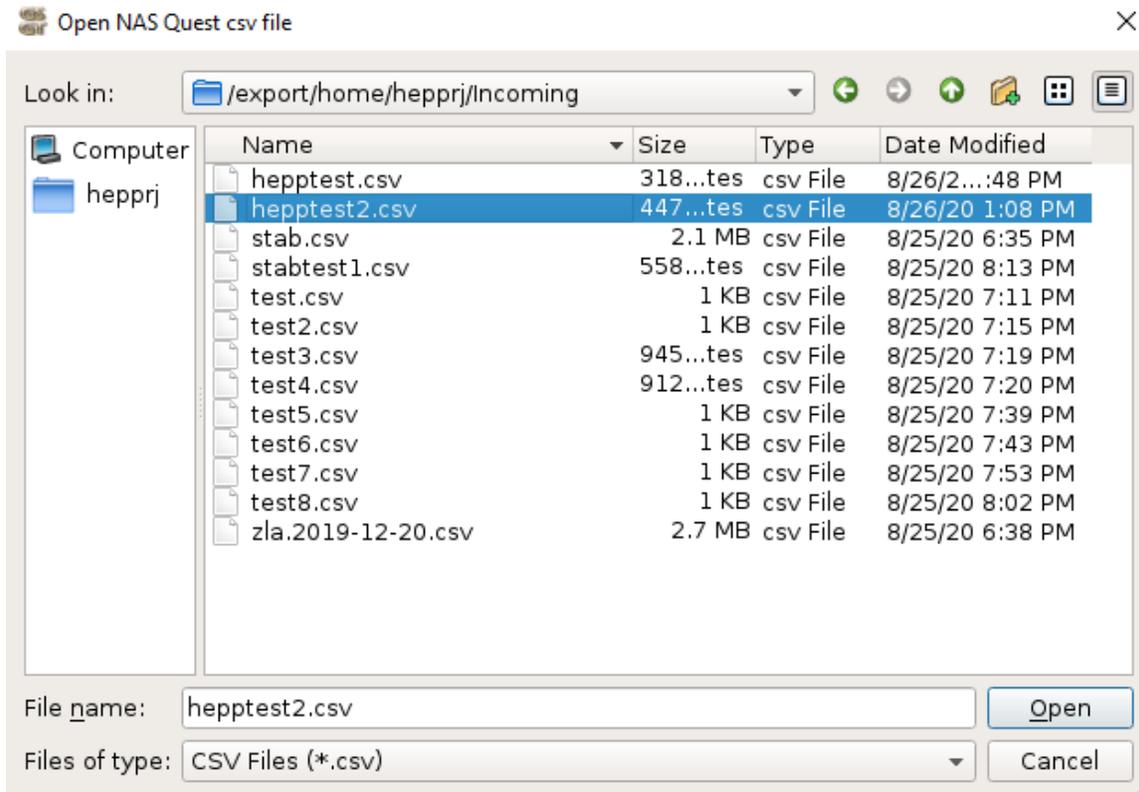


**Figure 93. Import CSV File**

Users have the option to filter the CSV file based on airports of interest.

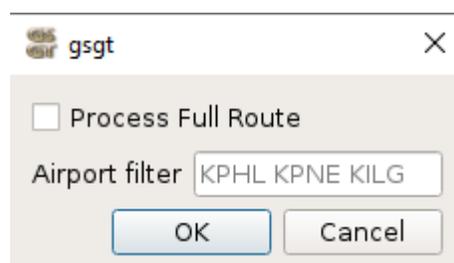

**Figure 94. Import CSV Options**

The Finished CSV Import dialogue box will inform how many targets from the CSV file were imported. Click 'OK' when finished.

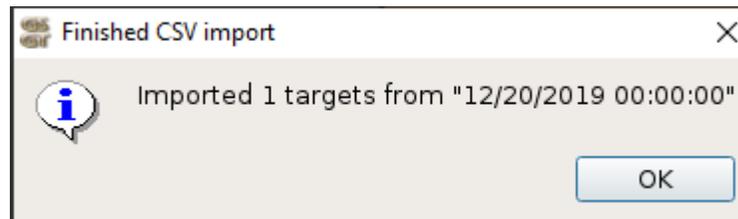

**Figure 95. CSV Import Status**

## 8. Reports and Tools

GSGT includes the ability to generate various reports such as Traversal reports. All reports (as well as import and export logs) are written to files that can be viewed by any HTML browser outside of the GSGT application.


After selection of the report and its options (if applicable), a dialog is displayed to choose a file name where the report will be saved. If the file name already exists, a prompt will be displayed to confirm that the old file will be overwritten. While the report is being created, a window is displayed indicating that the report is being generated. Once the report is complete, a dialog is displayed asking to preview the report. The report is always saved to a specified file, and it may be viewed at a later time by any HTML browser.

The following reports are located on the main GSGT menu: GSGT Session Log, Paired Target Display, Simulated Target Position, FAV Traversal Report, and Simulated Radar Target Count.

The rest of the reports are located in the scenario editor under reports: Sorted Scenario Listing and Message Injection Report.

**Table 9. List of Reports**

Report Name
GSGT Session Log
Sorted Scenario Listing
Message Injection Report
Paired Target Display
Simulated Target Position
FAV Traversal Report
Simulated Radar Target Count

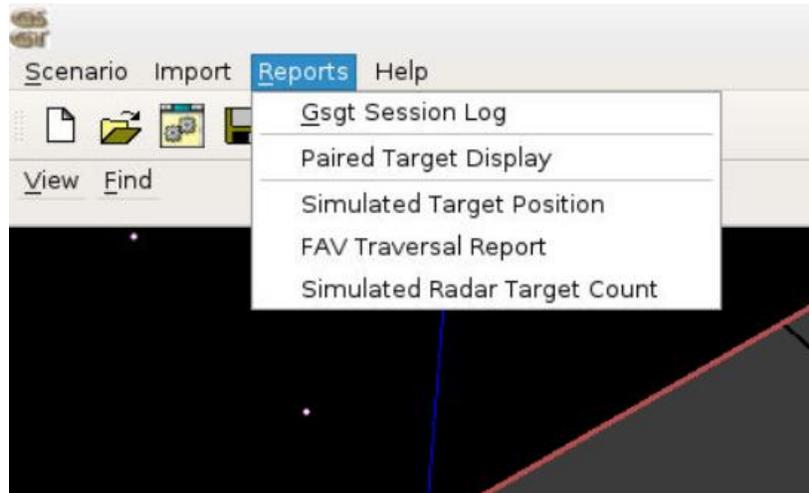

**Figure 96. Main Reports Menu**




**Figure 97. Scenario Editor Reports Menu**

## 8.1. GSGT Session Log

The GSGT Session Log displays messages that were generated during the current session while performing certain task. Messages are logged for start and end of GSGT session, loading of a scenario, and import and export functions.

To generate the report, select Reports->GSGT Session Log from the GSGT Main Window.

The task that generated the message is shown in GRAY. Status and completion messages are shown in GREEN. Warnings are shown in YELLOW and error messages are shown in RED.

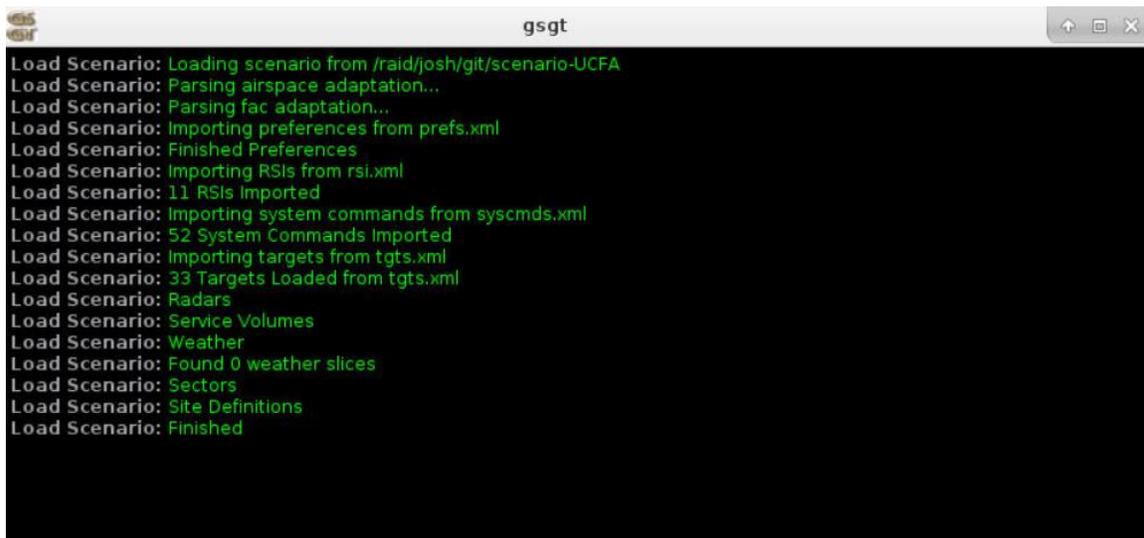

```

Load Scenario: Loading scenario from /raid/josh/git/scenario-UCFA
Load Scenario: Parsing airspace adaptation...
Load Scenario: Parsing fac adaptation...
Load Scenario: Importing preferences from prefs.xml
Load Scenario: Finished Preferences
Load Scenario: Importing RSIs from rsi.xml
Load Scenario: 11 RSIs Imported
Load Scenario: Importing system commands from syscmds.xml
Load Scenario: 52 System Commands Imported
Load Scenario: Importing targets from tgts.xml
Load Scenario: 33 Targets Loaded from tgts.xml
Load Scenario: Radars
Load Scenario: Service Volumes
Load Scenario: Weather
Load Scenario: Found 0 weather slices
Load Scenario: Sectors
Load Scenario: Site Definitions
Load Scenario: Finished
  
```

Figure 98. GSGT Session Log

## 8.2. Sorted Scenario Listing

The Sorted Scenario Listing displays the injected messages for each target. The targets can be sorted by name and RSI.

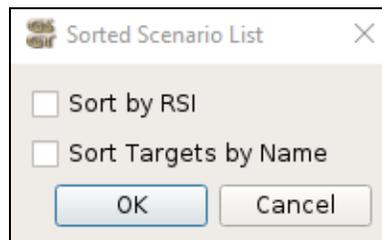


Figure 99. Sorted Scenario List Options

To generate the report, select Reports->Sorted Scenario Listing from the GSGT Main Window.

### **Sort by RSI**

Group and sort the output by RSI.

### **Sort Targets by Name**


Group and sort the output by the targets name.

**OK**

Generates the report using the specified criteria.

**Cancel**

Closes the dialog and cancels the report.

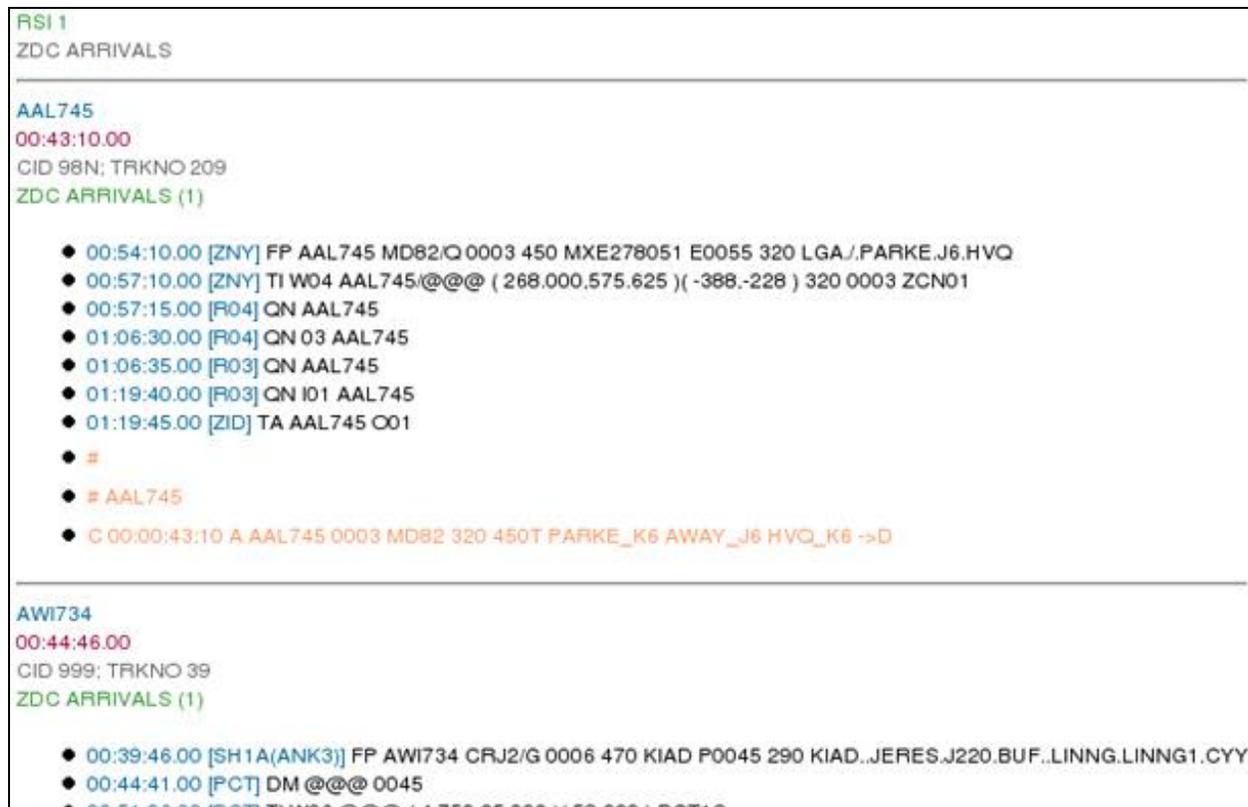


**Figure 100. Sorted Scenario List Report**

### 8.3. Message Injection Report

The Message Injection Report lists all scenario messages in chronological order based on injection time.

To generate the report, select Reports->Message Injection Report from the GSGT Main Window.



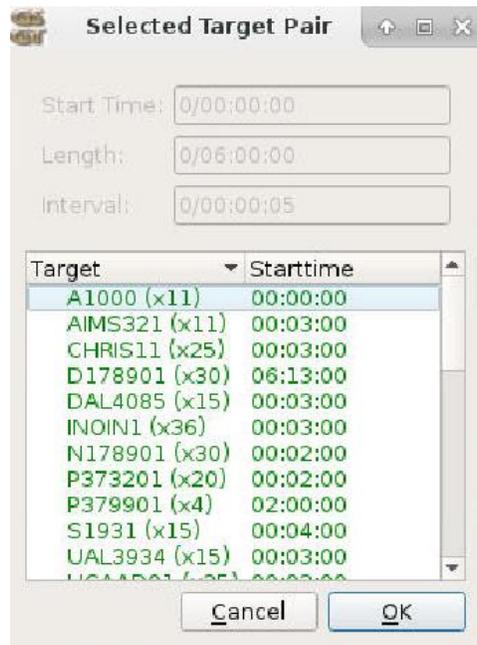

**Figure 102. Paired Target Report Options**

### **Targets**

The targets used in the report. Exactly two targets must be selected. Hold down CTRL to select multiple targets.

### **OK**

Generates the report for the selected targets.

### **Cancel**

Closes the dialog and cancels the report.


The Altitude Profile and Route Display are identical to those in the Conflict Report except that there are no color changes for conflicts.

## **8.5. Simulated Target Position**

The GSGT Simulated Target Position report provides information on selected target positions at a specified time interval.

**NOTE:** This is not available in Terminal/ERAMSim Mode.

To generate the report, select Reports->Simulated Target Position from the GSGT Main Window.

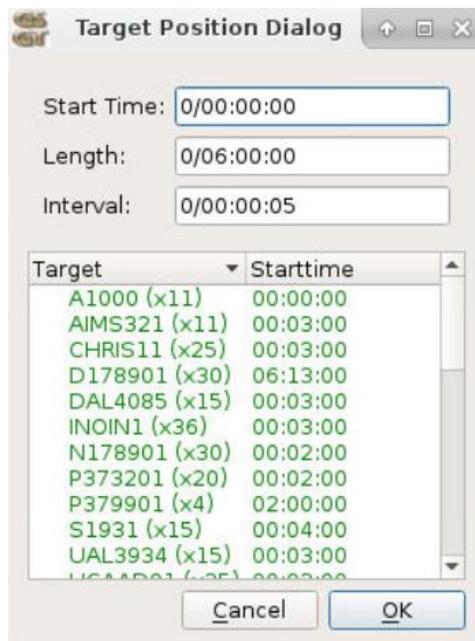

**Figure 103. Target Position Report Options**

**Start Time**

Start time of the report.

**Length**

The length of time the report will cover.

**Interval**

The time interval of each target report.

**Targets**

The targets listed in the report. Hold down CTRL to select multiple targets. Clicking on Target ID or Starttime will sort the targets appropriately.

**OK**

Generates the report using the specified criteria.


**Cancel**

Closes the dialog and cancels the report.

The first file displayed is a summary containing links to the report for each selected target. Clicking on a link will display the individual target report.



**Figure 104. Target Position Report File List**

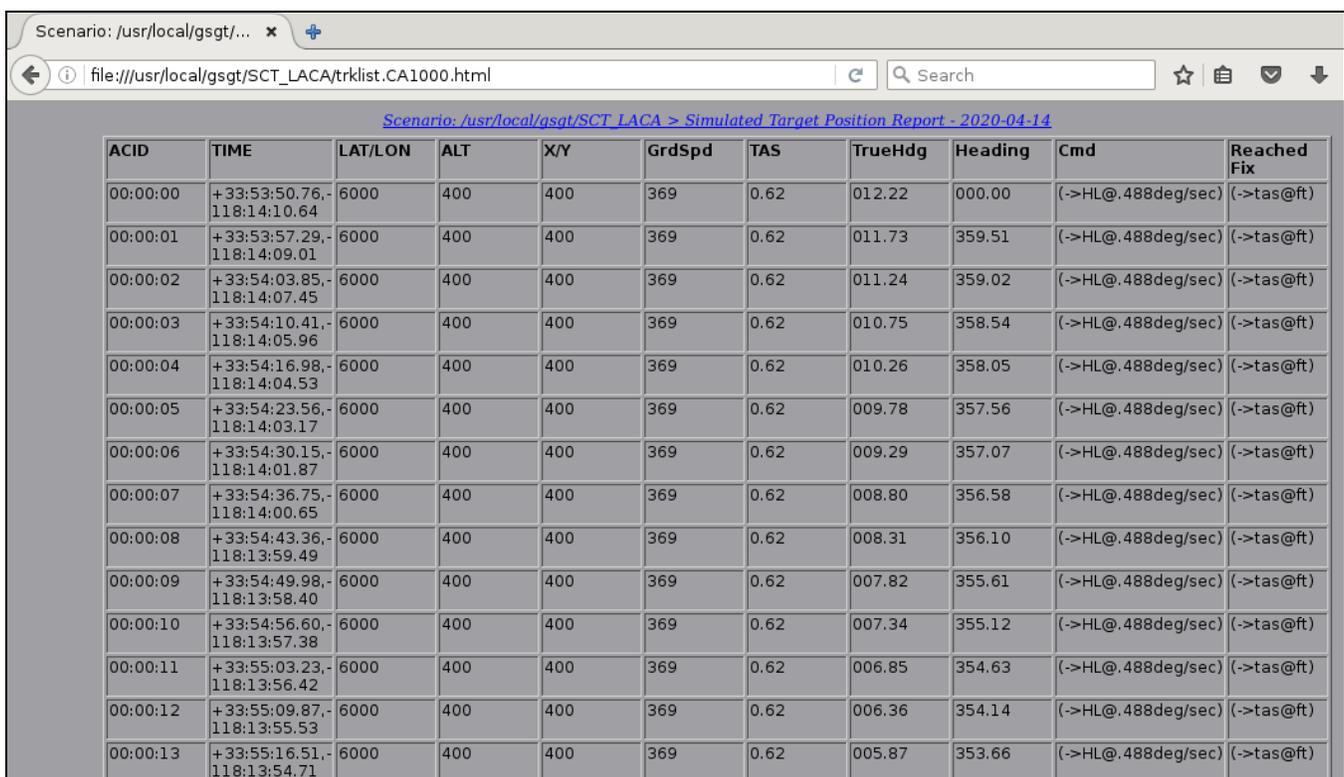

Scenario: /usr/local/gsgt/... x +

file:///usr/local/gsgt/SCT\_LACA/trklist.CA1000.html

Scenario: /usr/local/gsgt/SCT\_LACA > Simulated Target Position Report - 2020-04-14

ACID	TIME	LAT/LON	ALT	X/Y	GrdSpd	TAS	TrueHdg	Heading	Cmd	Reached Fix
00:00:00	+33:53:50.76,-118:14:10.64	6000	400	400	369	0.62	012.22	000.00	(->HL@.488deg/sec)	(->tas@ft)
00:00:01	+33:53:57.29,-118:14:09.01	6000	400	400	369	0.62	011.73	359.51	(->HL@.488deg/sec)	(->tas@ft)
00:00:02	+33:54:03.85,-118:14:07.45	6000	400	400	369	0.62	011.24	359.02	(->HL@.488deg/sec)	(->tas@ft)
00:00:03	+33:54:10.41,-118:14:05.96	6000	400	400	369	0.62	010.75	358.54	(->HL@.488deg/sec)	(->tas@ft)
00:00:04	+33:54:16.98,-118:14:04.53	6000	400	400	369	0.62	010.26	358.05	(->HL@.488deg/sec)	(->tas@ft)
00:00:05	+33:54:23.56,-118:14:03.17	6000	400	400	369	0.62	009.78	357.56	(->HL@.488deg/sec)	(->tas@ft)
00:00:06	+33:54:30.15,-118:14:01.87	6000	400	400	369	0.62	009.29	357.07	(->HL@.488deg/sec)	(->tas@ft)
00:00:07	+33:54:36.75,-118:14:00.65	6000	400	400	369	0.62	008.80	356.58	(->HL@.488deg/sec)	(->tas@ft)
00:00:08	+33:54:43.36,-118:13:59.49	6000	400	400	369	0.62	008.31	356.10	(->HL@.488deg/sec)	(->tas@ft)
00:00:09	+33:54:49.98,-118:13:58.40	6000	400	400	369	0.62	007.82	355.61	(->HL@.488deg/sec)	(->tas@ft)
00:00:10	+33:54:56.60,-118:13:57.38	6000	400	400	369	0.62	007.34	355.12	(->HL@.488deg/sec)	(->tas@ft)
00:00:11	+33:55:03.23,-118:13:56.42	6000	400	400	369	0.62	006.85	354.63	(->HL@.488deg/sec)	(->tas@ft)
00:00:12	+33:55:09.87,-118:13:55.53	6000	400	400	369	0.62	006.36	354.14	(->HL@.488deg/sec)	(->tas@ft)
00:00:13	+33:55:16.51,-118:13:54.71	6000	400	400	369	0.62	005.87	353.66	(->HL@.488deg/sec)	(->tas@ft)

**Figure 105. Target Position Report**


## 8.6. FAV Traversal Report

The FAV Traversal Report displays the FAV crossing times for the selected targets.

To generate the report, select Reports->FAV Traversal Report from the GSGT Main Window.

The dialog with report options is the same as in Simulated Target Position report.

The FAV Listing displays each aircraft ID and the time it enters each FAV.

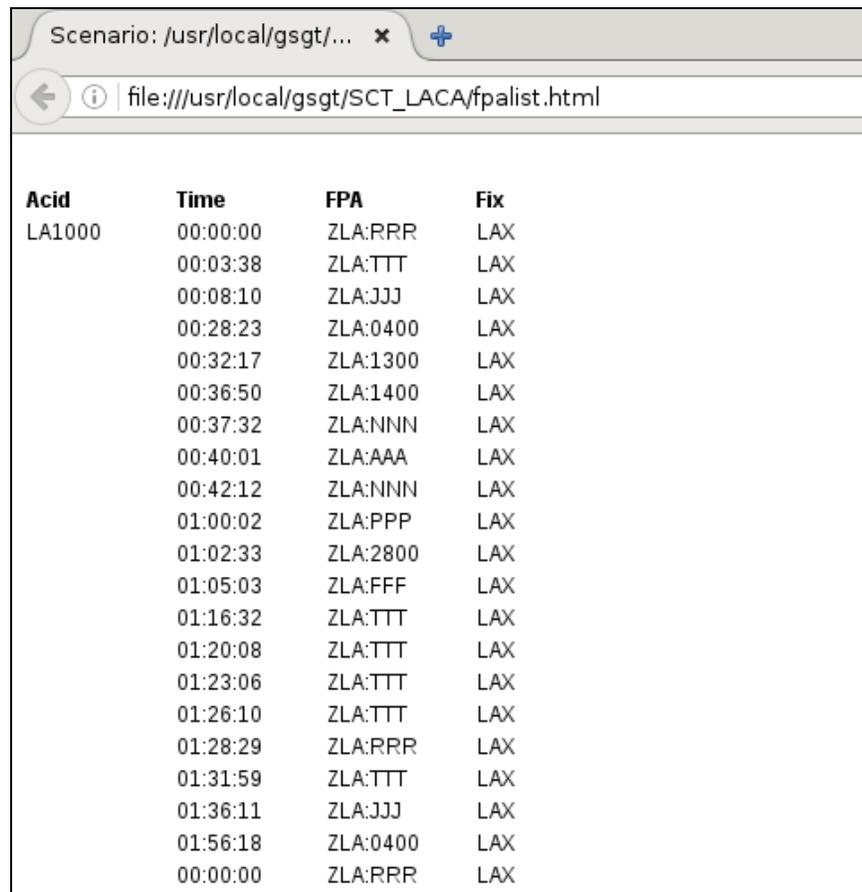


Acid	Time	FPA	Fix
LA1000	00:00:00	ZLA:RRR	LAX
	00:03:38	ZLA:TTT	LAX
	00:08:10	ZLA:JJJ	LAX
	00:28:23	ZLA:0400	LAX
	00:32:17	ZLA:1300	LAX
	00:36:50	ZLA:1400	LAX
	00:37:32	ZLA:NNN	LAX
	00:40:01	ZLA:AAA	LAX
	00:42:12	ZLA:NNN	LAX
	01:00:02	ZLA:PPP	LAX
	01:02:33	ZLA:2800	LAX
	01:05:03	ZLA:FFF	LAX
	01:16:32	ZLA:TTT	LAX
	01:20:08	ZLA:TTT	LAX
	01:23:06	ZLA:TTT	LAX
	01:26:10	ZLA:TTT	LAX
	01:28:29	ZLA:RRR	LAX
	01:31:59	ZLA:TTT	LAX
	01:36:11	ZLA:JJJ	LAX
	01:56:18	ZLA:0400	LAX
00:00:00	ZLA:RRR	LAX	

**Figure 106. FAV Traversal Report**

## 8.7. Simulated Radar Target Count

The GSGT Simulated Radar Target Count.

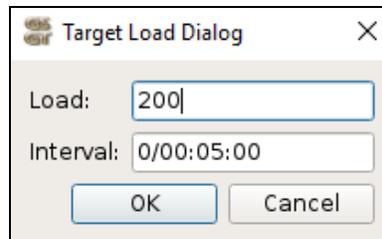

**Figure 107. Target Count Report Options**

To generate the report, select Reports->Simulated Radar Target Count from the GSGT Main Window.

### ***Load***

The aircraft load to report.

### ***Interval***


The time interval used in the report.

### ***OK***

Generates the report using the specified criteria.

### ***Cancel***

Closes the dialog and cancels the report.

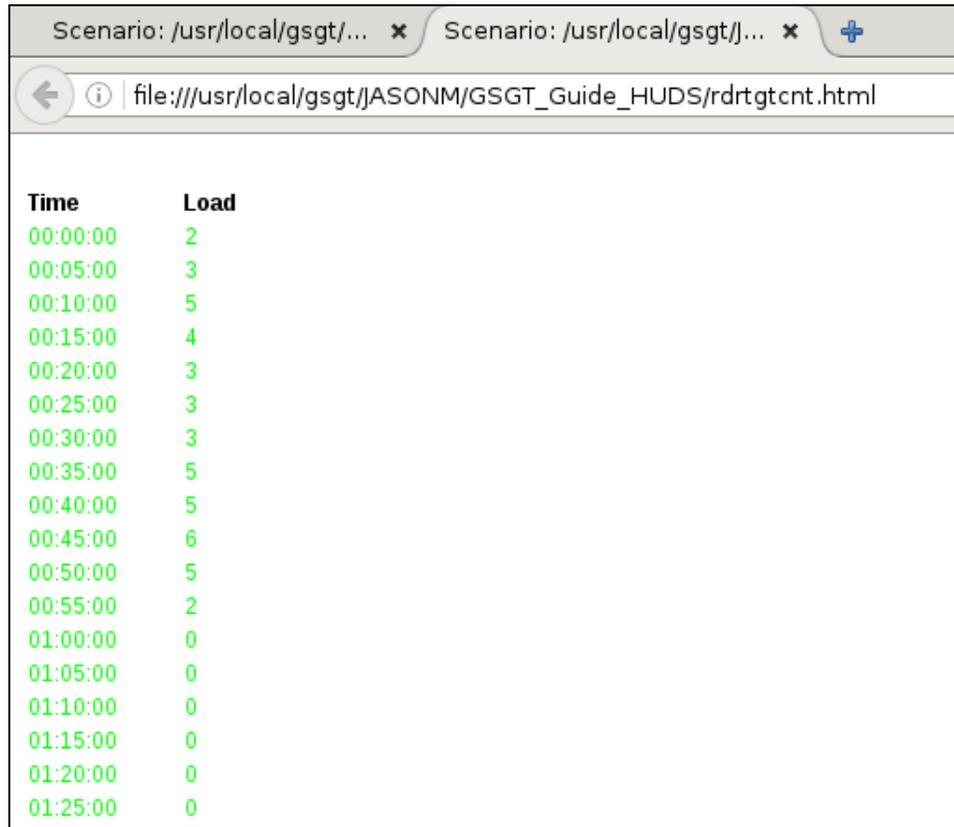


Time	Load
00:00:00	2
00:05:00	3
00:10:00	5
00:15:00	4
00:20:00	3
00:25:00	3
00:30:00	3
00:35:00	5
00:40:00	5
00:45:00	6
00:50:00	5
00:55:00	2
01:00:00	0
01:05:00	0
01:10:00	0
01:15:00	0
01:20:00	0
01:25:00	0

**Figure 108. Target Count Report**

## 9. Weather Editor

The weather scenarios can be included in GSGT scenarios to provide more realistic simulation. They are created using GSGT Weather Editor, which is a part of GSGT distribution. The Weather Editor closely resembles the Scenario Editor; however, it is only designed to create and edit weather scenarios. Weather scenarios and regular scenarios are saved in different paths, so they may have exactly the same names. However, it is recommended to use different names to be able to distinguish them easily.

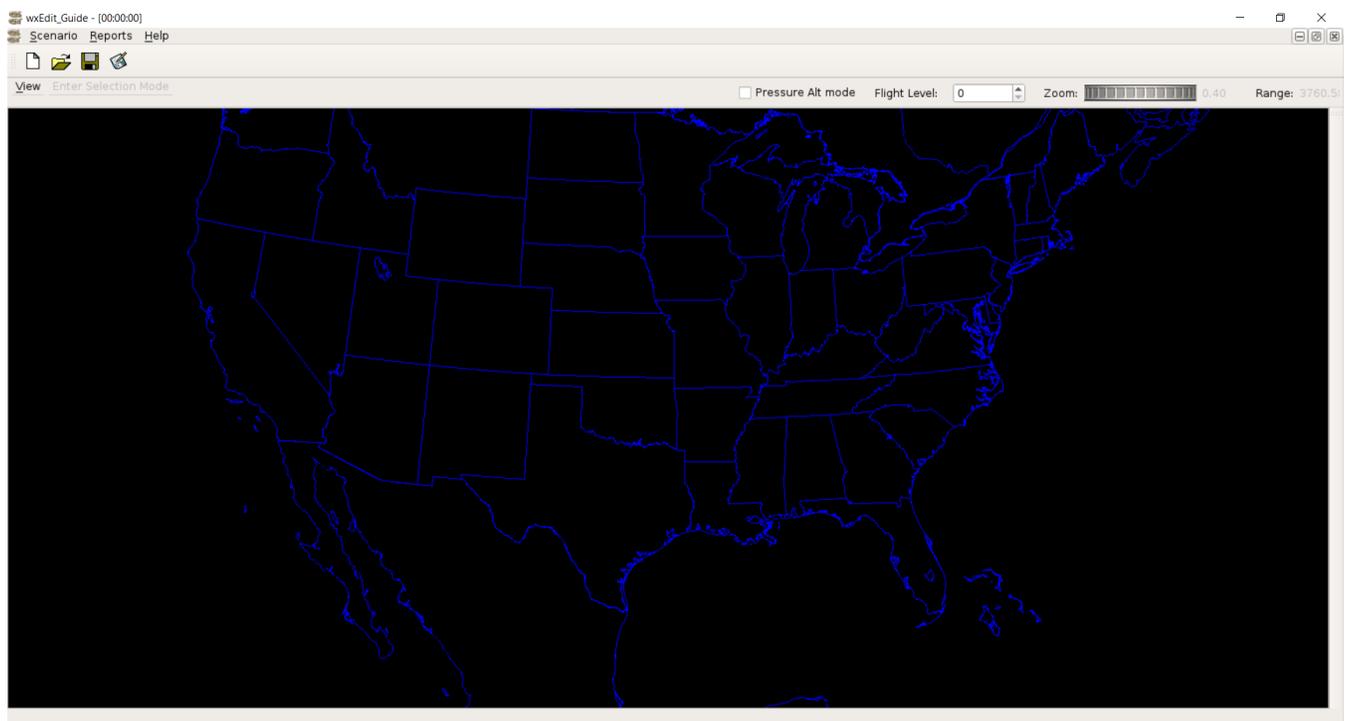

**Figure 109. Weather Editor**

Since weather scenarios can be included into multiple GSGT scenarios they are included as read-only and can't be modified from within a regular scenario. Also since they are shared, any change in the weather scenario will affect all scenarios that use that particular weather scenario.

## 9.1. Starting the Weather Editor

The GSGT Weather Editor is executed using the executable wxEdit.

To start the Weather Editor from the command line, enter:

```
> wxEdit
```

To launch a version of the Weather Editor that is not the default version, enter:

```
> /usr/local/jvn.x.x.x/bin/wxEdit
```

**NOTE:** Starting the Weather Editor from a command line while inside a weather scenario directory will automatically open that scenario.

### 9.1.1. Command Line Options

The Weather Editor can be started with options which control its operation.

**Table 10. Parameters for the Weather Editor**

Parameter	Description
--tbfmFormat	TBFM mode for generating GRIB2 formatted weather.
--native	Default mode. Same as no parameter. Native mode provides the ability to export the scenario to SDRR for execution with the ERAM system.
--opengl	Opens the GSGT Log
--proxy=server/port	Opens wxEdit with specific server/port
--version	Display the Weather Editor version.
--nofullscreen	Not full screen mode; the Weather Editor will be started in a window

Parameter	Description
	roughly half the size of the screen.
--help	Display application parameters.


For example, to start the Weather Editor in TBFM Mode, enter:

```
> wxEdit --tbfmFormat
```

### 9.1.2. Loading Adaptation


The weather editor, by default, does not display any adaptation information because it's not adaptation specific, meaning it does not require an adaptation for creating or editing weather patterns. However, it allows the user to load adaptation for a better visual reference but the adaptation is not saved with scenario.

To load adaptation select **Scenario->Load adaptation** from the Weather Editor Main Window.

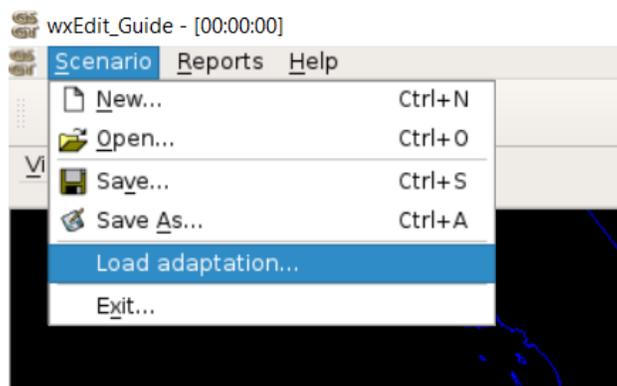


**Figure 110. Loading Adaptation**

The adaptation selection is performed in same manner as when selecting adaptation for regular scenario. Multiple adaptations can be selected to better aid creation of weather patterns. Once the adaptation is loaded it may not be changed to a different adaptation during the same session. To change adaptation, close the editor and restart to select a different adaptation.

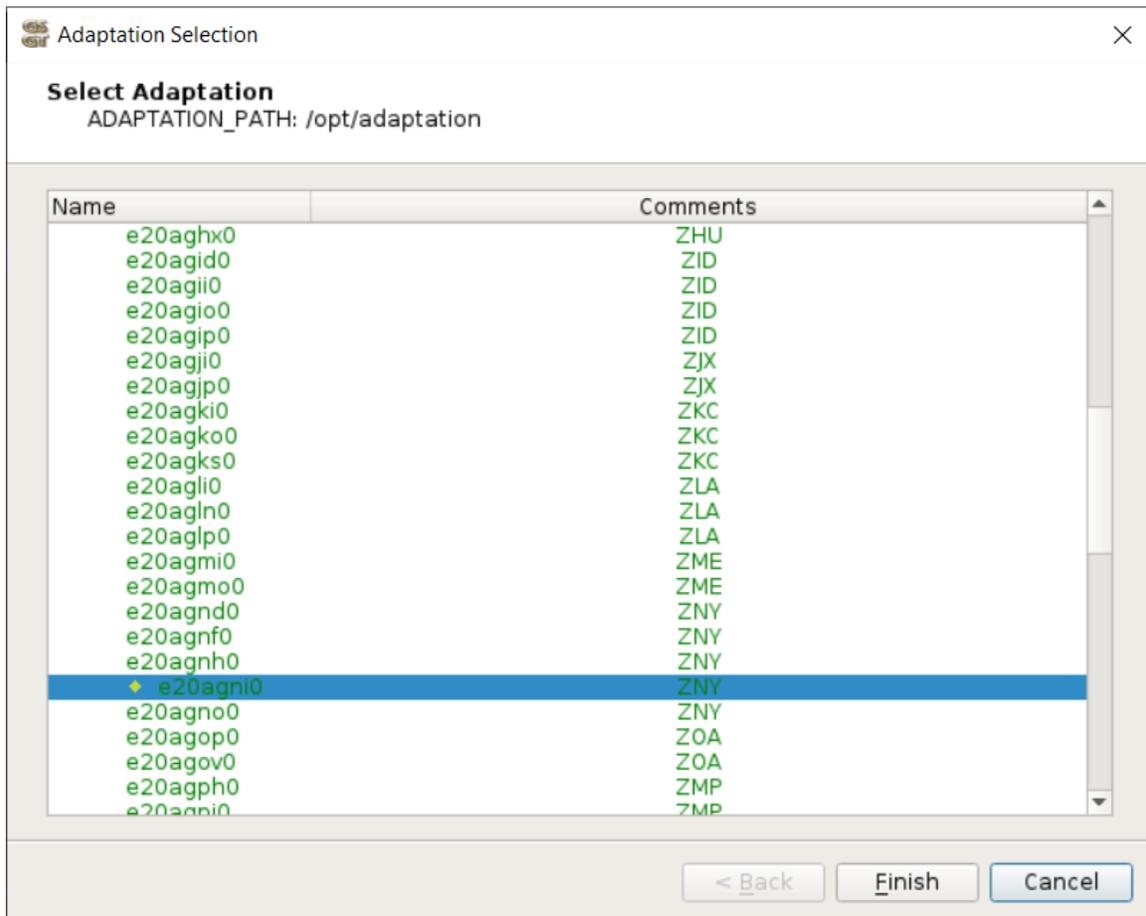

**Figure 111. Selecting an Adaptation**

**NOTE:** The weather scenario is defined on a national grid, in other words weather patterns are defined on a national scope. A single weather scenario can be used by many site specific scenarios that in turn will use only a specific sub grid of the national weather.

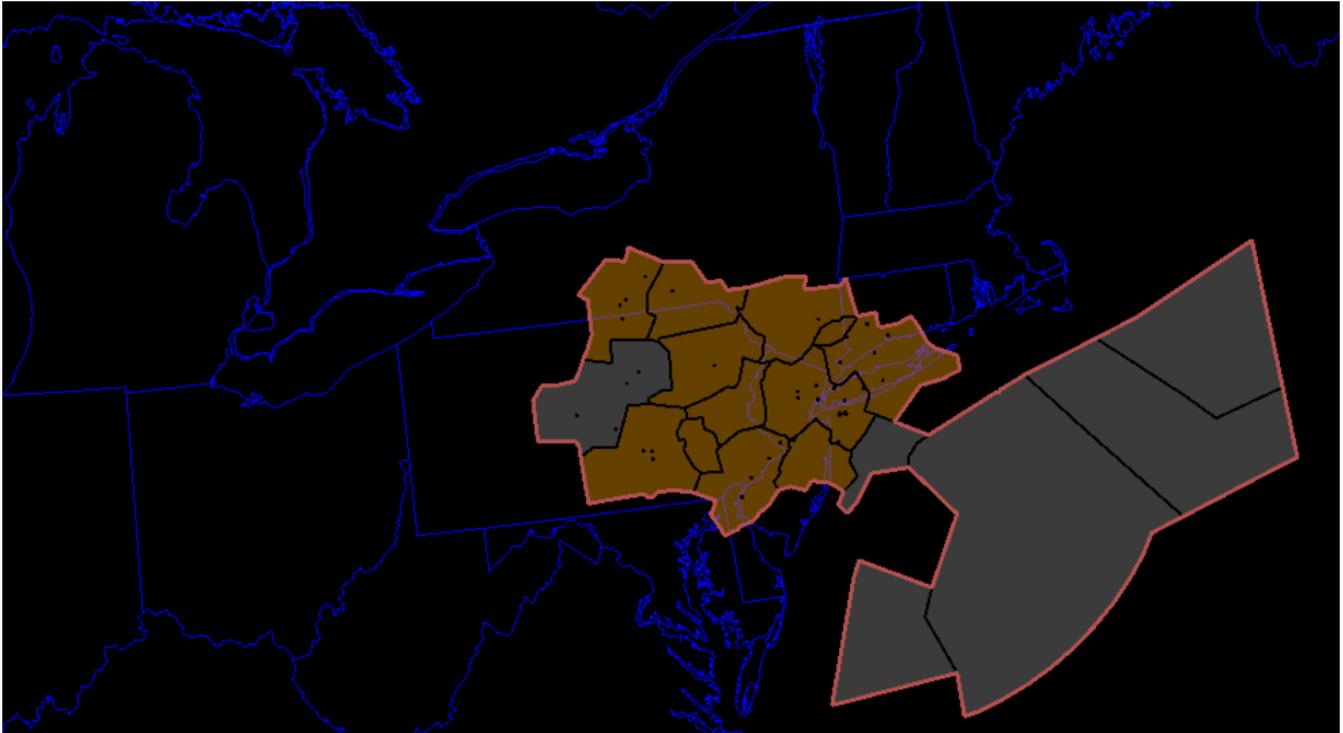

**Figure 112. Adaptation Display**

## 9.2. Weather Editor GUI

### 9.2.1. Weather Time Slice Windows

Weather scenarios can consist of multiple time slices. Time slices can only be defined during initial creation of a weather scenario. The beginning time of the time slice is displayed in the title bar of the window or in the main title bar if the window is maximized.


Every time slice in the weather scenario is contained in its own editor window. Each of these windows can be separately adjusted to view maps and different types of weather. Additionally, changing the stratum allows the user to view the different wind and temperature values for a particular level. Stratum can be specified in pressure altitude (millibars or mb) or by flight level (FL). Changing stratum does not affect the preview of pressure or precipitation. Only wind and temperature may have different values at different stratum levels.

**Table 11. Weather Types**

Event	Description
Wind	It's depicted by WHITE vectors indicating heading, and length indicating speed. Default speed and heading is 0
Temperature	It's depicted by gamma colors (blue being cold, red being hot) outlined every 10 degrees. Default temperatures vary by stratum. For example default temperature at 1000mb is 57.7 F and at 100mb it is -69.70 F.
Pressure	It's depicted by red and blue intensity colors, where red is high and blue is low pressure. The default pressure is 1013.25mb.
Precip	It's depicted by intensity in colors (blue, green, yellow, red, purple and white) ranging from light to most severe precipitation.

### 9.2.2. Weather Editor Menus

To preview weather, from the wxEdit window menu select **View->Wx**. This opens a list of weather views (Wind, Temperature, Pressure, and Precip). Select desired weather types to be viewed by repeating this step as necessary. To remove wx data from the display select **View->Wx** and deselect the appropriate weather types.

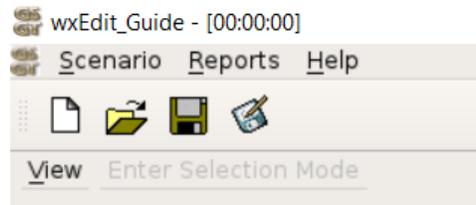


**Figure 113. Menu Bar**

**View**

The pull-down menu is used to select weather data and map data for background display. The background functions may be displayed individually or in combination.

**Maps**


- US Map (BLUE)
- Canada (BLUE)
- Mexico (BLUE)

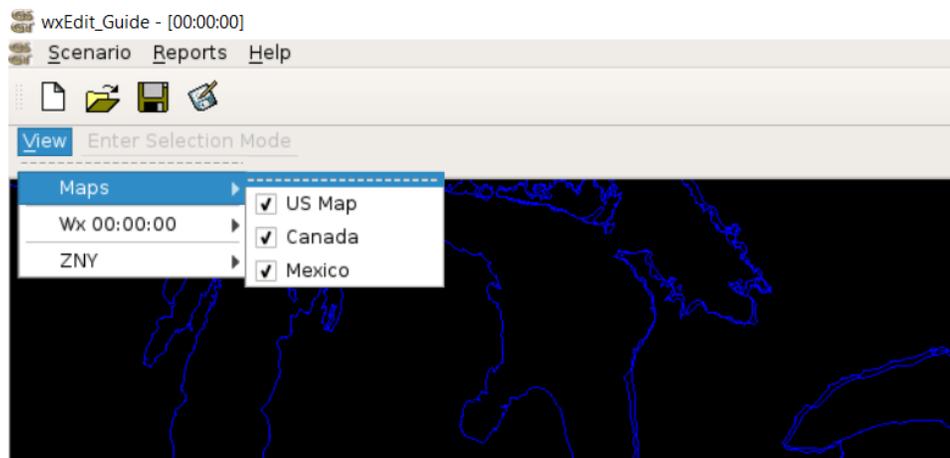

**Figure 114. Map Selection**


**Wx**

- Temperature – Display the temperature.
- Pressure – Display the air pressure.
- Wind – Display the wind.
- Precip – Display the precipitation.

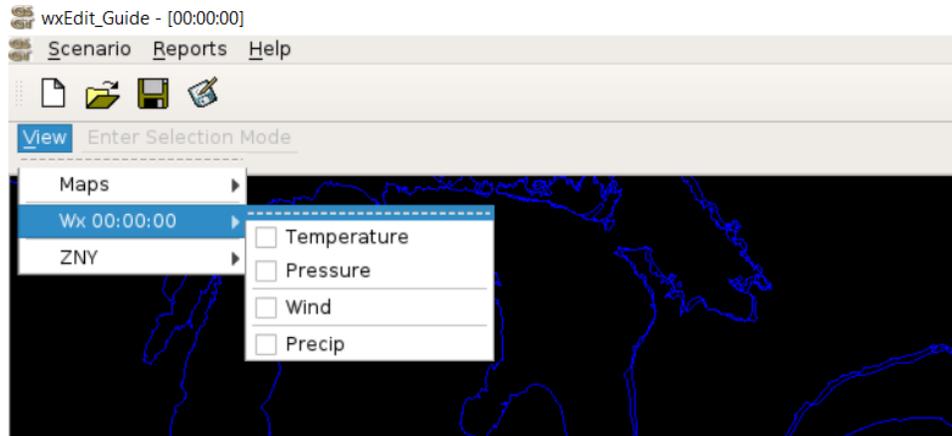

**Figure 115. Weather Data Selections**

**ARTCC**

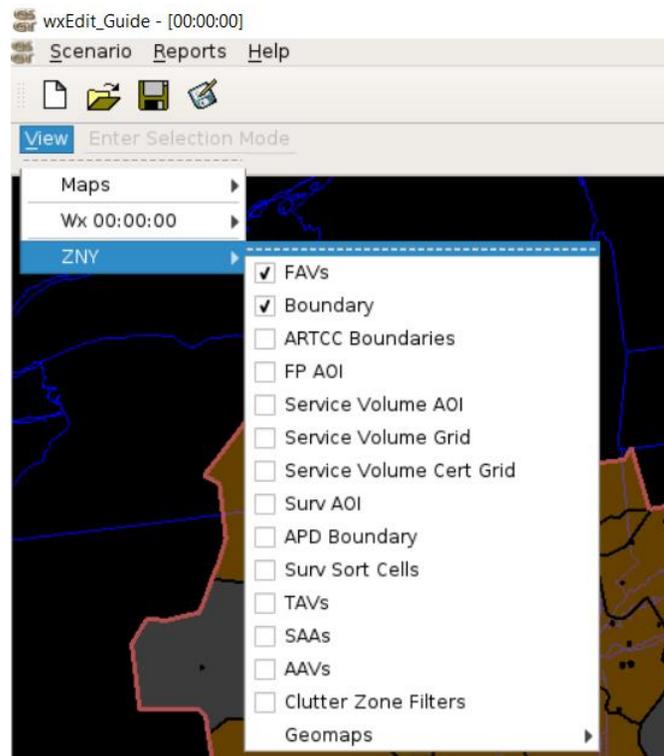

**Figure 116. ARTCC Options**

### **Enter Pointer Mode**

Enter Pointer Mode – Default mode that enables selecting and editing weather values. Disables adding weather.



View Enter Pointer Mode

**Figure 117. Enter Pointer Mode Menu Button**

Tool used for activities such as repositioning/centering map display, rubber band zoom, weather cell info.

**Moving map** - Use left mouse button click and drag to move the map display

**Centering map** - Use left mouse button click while holding **Ctrl** key. This will reposition display so that the point on the map where mouse click occurred will be positioned in the center of display.


**Rubber band zoom** - Use left mouse button click and drag while holding **Ctrl** and **Shift** keys. This will draw a rectangular area representing the zoom detail after the mouse button is released.

**Weather cell info** - Use right mouse click to display weather pattern information, such as temperature, pressure and winds in and particular point on the weather grid. The information is displayed in the status bar on the bottom of the display view.

**Adaptation info** - If the adaptation is loaded in the view, use right mouse click within the FAV to display adaptation specific information such as FAV. This works in same fashion as in general GSGT Editor.

### **Enter Selection Mode**

Enter Selection Mode – Enables modifying and adding weather.

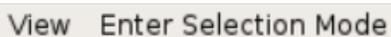

View Enter Selection Mode

**Figure 118. Enter Selection Mode Menu Button**

### **Pressure Alt Mode**

Pressure Altitude mode - Altitude in millibars of pressure. Each pressure level corresponds directly to one of 37 RUC layers. (1000 mb is sea level, lower values indicate higher elevations)



**Figure 119. Pressure Altitude Options**

### ***Flight Level***

Altitude in hundreds of feet.



**Figure 120. Flight Level**

### ***Zoom***


Provides a zoom function for the GSGT Adaptation Window. The zoom function is controlled three ways. The slide bar on the top right area of the window can be moved to set the zoom level. Clicking on the slide bar and then pressing the Page Down and Page Up keys will zoom the view in and out, respectively. The user may also use the scroll wheel on their mouse if applicable.



**Figure 121. Zoom**

### ***Range***

Provides range of the current view in nm. The measurement of the range is taken horizontally across the middle of the viewer.

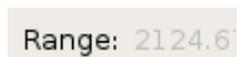

**Figure 122. Range**

### 9.2.3. Weather Information

Information for the existing RUC weather (Temperature, Pressure and Wind) is displayed in the status bar using a right mouse click on any specific point on the map. The information for each cell includes temperature, pressure, and wind speed and direction.

Cell: 66,39 Temperature: 57.70F Pressure: 1013.25mb Wind: 0.00,0.00 (U/V) 0.00,0.00 (X/Y) S0.00 H90.00 (true north) S0.00 H90.00 (RUC grid)

**Figure 123. Weather Information Bar**

### 9.2.4. Viewer Configuration

Weather scenarios are created with predetermined size of the viewer that covers continental US. To adjust zoom (Scale), location (Reference) and size (Width and Height) of the viewer select **Scenario -> Edit Viewer Config** from the Weather Editor Main Window.

**NOTE:** *The change is applied to all time slices and viewer is restarted. Make sure to save scenario changes before editing viewer configuration.*

#### **Width**

Width of the working size of the viewer in nautical miles centered at Reference point.

#### **Height**

Height of the working size of the viewer in nautical miles centered at Reference point.

#### **Scale**

Scale determines the maximum zoom-out of the display viewer. Working size of the viewer (Width/Height) is not affected. Increasing the Scale, zooms-in and decreasing Scale zooms-out the maximum view.

#### **Reference**

Reference point is the center of display viewer.

### 9.3. Creating a New Weather Scenario

A New Weather Scenario Wizard allows selection of scenario name and weather time slices to be defined in the new scenario. Newly created weather scenario includes standard temperature and pressure, zero wind and no precipitation.

To create a new scenario, select **Scenario->New** from the Weather Editor Main Window.

The wizard allows a back and forth navigation through pages of the wizard allowing the user to return to previous screen to modify any options before pressing **Finish** button.

**Back**

Goes to the previous screen.

**Next**

Goes to the next screen.

**Finish**

Completes scenario wizard and creates a new scenario according to selected options.

**Cancel**

Quits the scenario wizard without creating a new scenario.

### 9.3.1. Location and Name

The selection of a name and location for new a weather scenario is identical as in the new GSGT scenario with the difference that weather scenarios are saved in a different location. The location of weather scenarios is controlled by \$WX\_PATH environment variable.


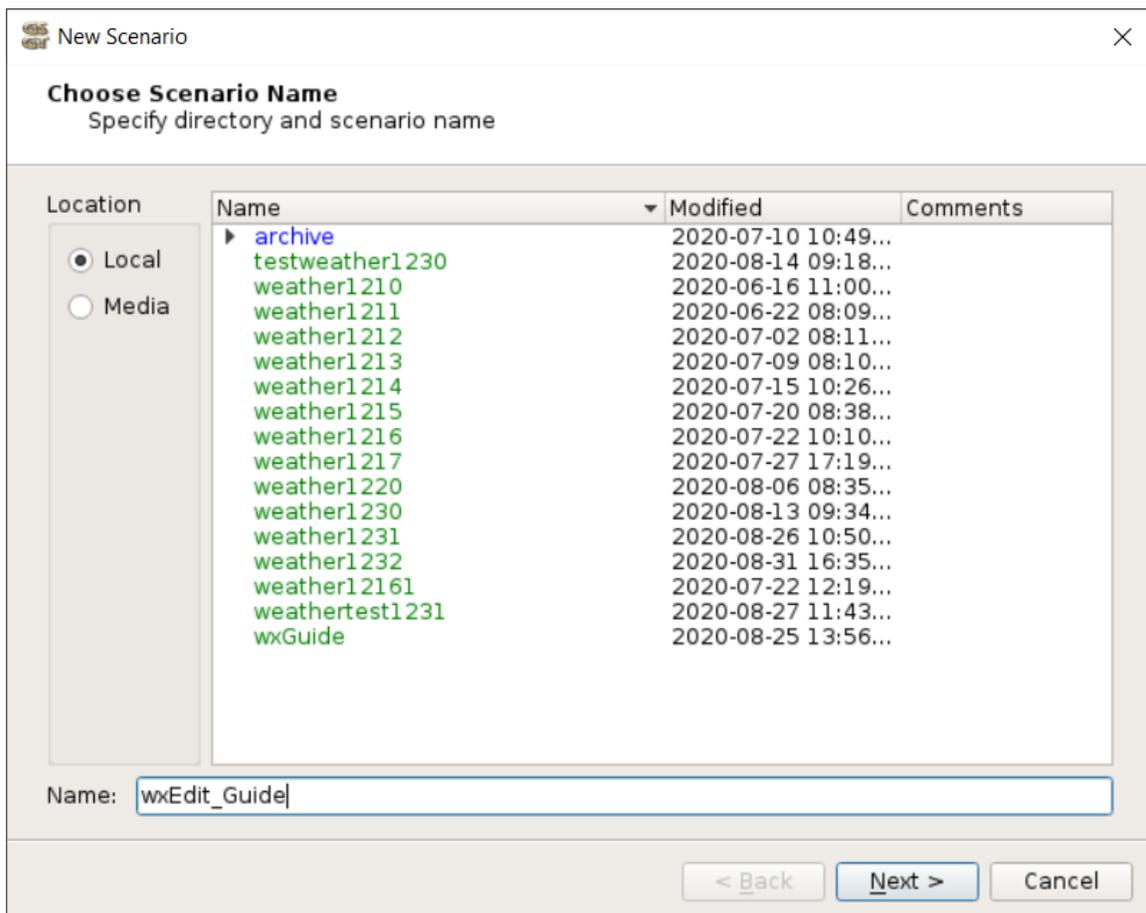


Figure 124. Weather Scenario Name and Location

### 9.3.2. Weather Time Slices

To add a time slice to a weather scenario, use the up/down arrows to select time slice hour, then click **Add Time**. Weather scenario may include multiple time slices. Add desired number of time slices for every hour before pressing **Finish** button. Time slices cannot be easily added after weather scenario is created.

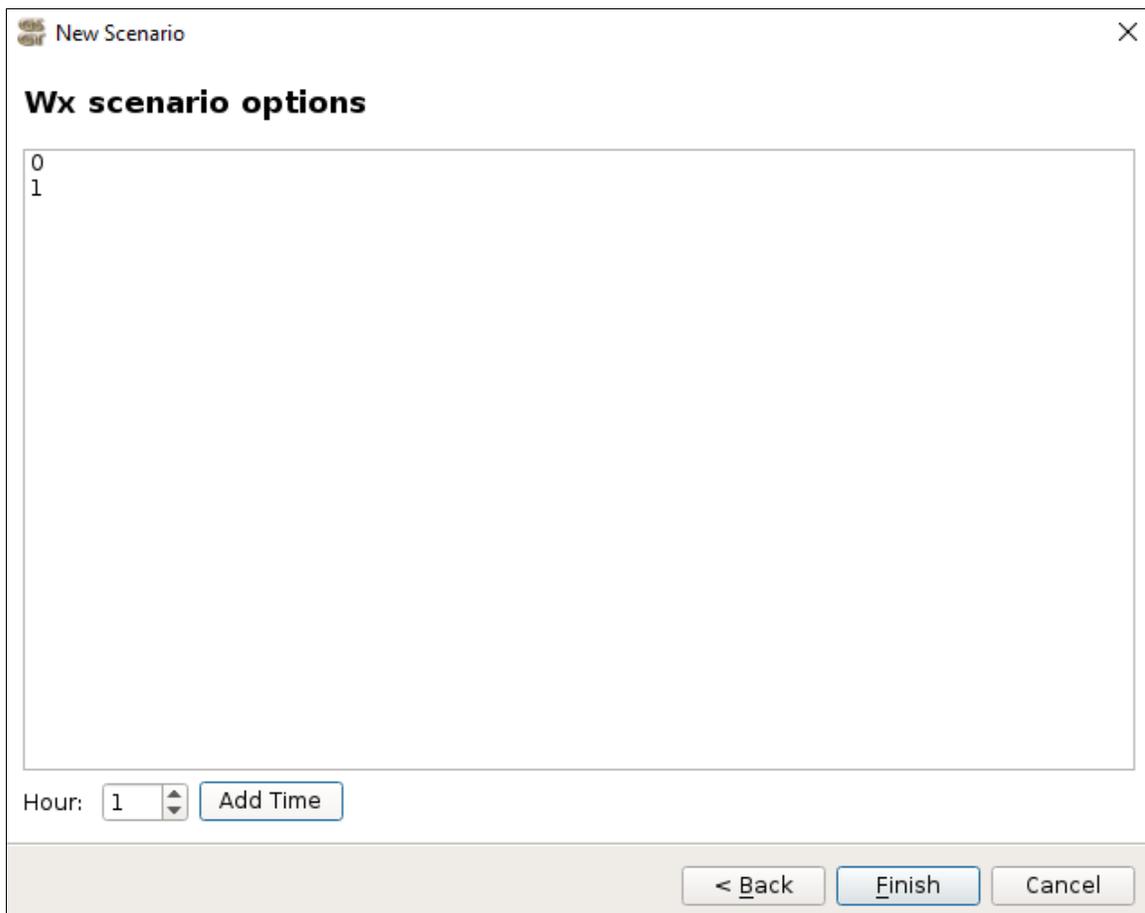

**Figure 125. WeatherTime Slices**


**Hour**

List of hourly time slices to include in the scenario.

**Add Time**

Adds desired time slice (as selected in Hour field) at which weather should be injected into the

scenario by setting time using up/down arrows. The only allowable time slices are in 1 hour increments. Defined time slices are displayed in the list. To delete unwanted time slice, right click on that particular time in the list and select **Delete**.

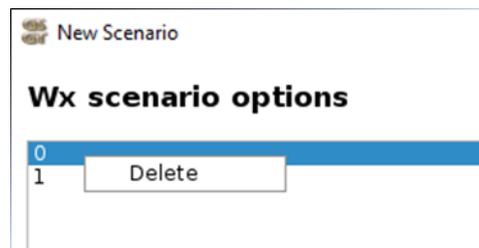

**Figure 126. Deleting a Time Slice**

Repeat this as many times as needed to create all time slices at which the weather should be injected, selecting a single time slice or multiple time slices for injection. Rethink how long weather scenario needs to be and include a time slice for each hour. Once the weather scenario is created, the additional time slice is difficult to add as it requires a manual edit of the scenario files.

## 9.4. Open an Existing Weather Scenario

Weather scenarios are opened in a similar matter as regular GSGT scenarios; however, wxEdit is used to open weather scenarios. To open an existing scenario, select **Scenario->Open** from the wxEdit Main Window.

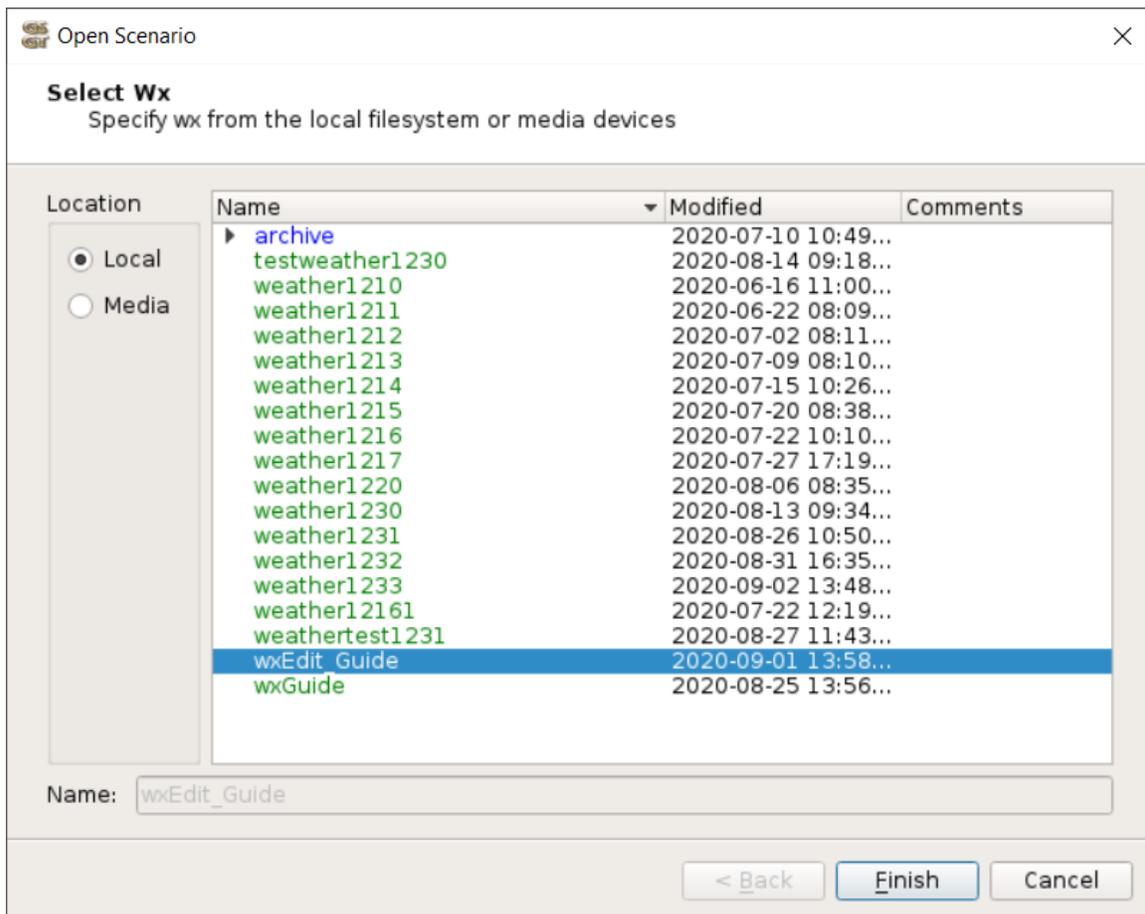


Figure 127. Select Existing Weather Scenario

## 9.5. Edit weather scenario

To edit weather attributes, preview the desired weather type from the **View** menu to aid selection and view changes. Also select desired Flight Level (or pressure altitude) from the menu bar, as temperature and wind may be different at different altitudes.

To make changes to any of the weather patterns, select the weather attribute and click **Enter Select Mode**. Temperature, pressure and wind are modified using RUC editor, while precipitation is modified using Precipitation Editor.


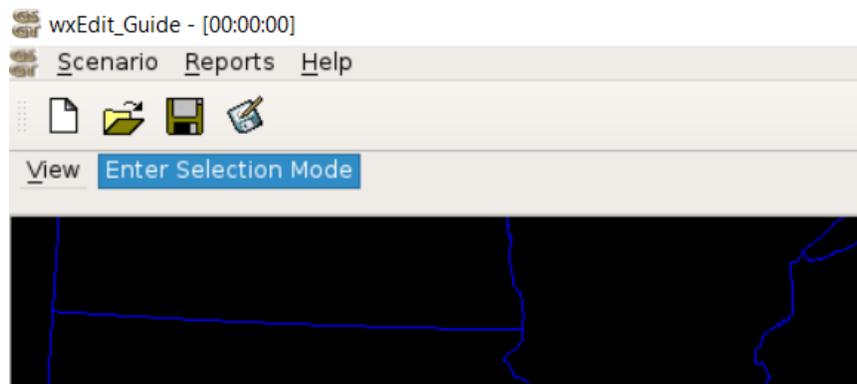


Figure 128. Enter Selection Mode

### 9.5.1. RUC Editor

To start editing RUC select one of the following weather attributes: Temperature, Pressure and Wind. The editor opens docked on the right side of the screen and may be repositioned on the screen if needed by grabbing its selection bar. To exit edit mode, use **Close** button on the editor dialog.

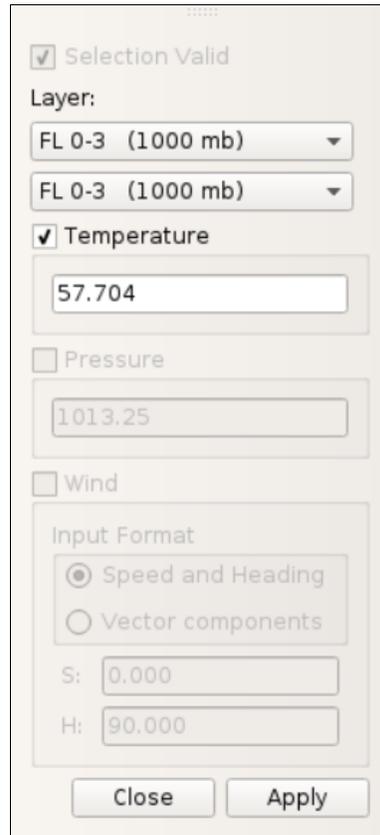

The screenshot shows the RUC Editor dialog box with the following settings:

- Selection Valid
- Layer:
  - FL 0-3 (1000 mb)
  - FL 0-3 (1000 mb)
- Temperature
  - 57.704
- Pressure
  - 1013.25
- Wind
  - Input Format:
    - Speed and Heading
    - Vector components
  - S: 0.000
  - H: 90.000

Buttons: Close, Apply

**Figure 129. RUC Editor**

### **Layer**

The Strata layers that the new Temperature and Wind values will be applied to in hundreds of feet.

Temperature and Wind have separate values for each RUC layer. The list displays 37 layers with corresponding range of altitudes. A single or multiple layers can be selected at once to apply a specific value.


### **Weather Types**

The values for each of the weather types can be applied individually or in combination by enabling or disabling individual weather types.

### **Add Weather**

While in Enter Selection Mode, hold the **Shift** or **Ctrl** button and use left mouse click and drag to draw a loop around the desired area to edit the weather values. Additional cells may be selected by holding **Ctrl** button and selecting additional area using left mouse click and drag or

by right mouse click on desired cell. A right mouse click on a cell clears previous selection and selects a single cell. Also a left mouse click clears current selection.

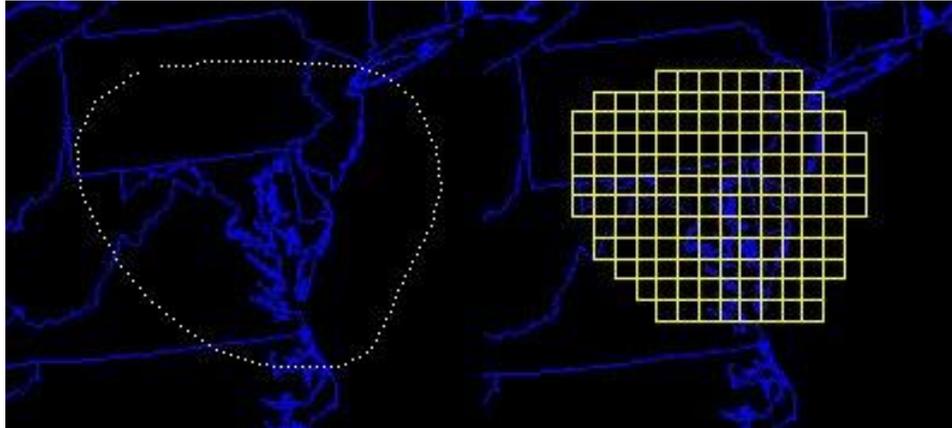

**Figure 130. Selecting Weather Cells**

One of the tools in RUC editor is ability to flood fill a contiguous area of the weather with the same value based on a single cell selection. To apply flood fill, select a single cell and fill in desired value for temperature or pressure, and press appropriate icon on the **Tools toolbar**, for either temperature or pressure. To aid selection and preview, enable appropriate weather type in the view.

#### **9.5.1.1. Temperature**

Temperature values can be specified in several temperature scales, such as Fahrenheit, Celsius or Kelvin. The default is Fahrenheit, to specify Celsius append C or for Kelvin append K after temperature value. Also different temperature values can be specified at a different stratum layers.

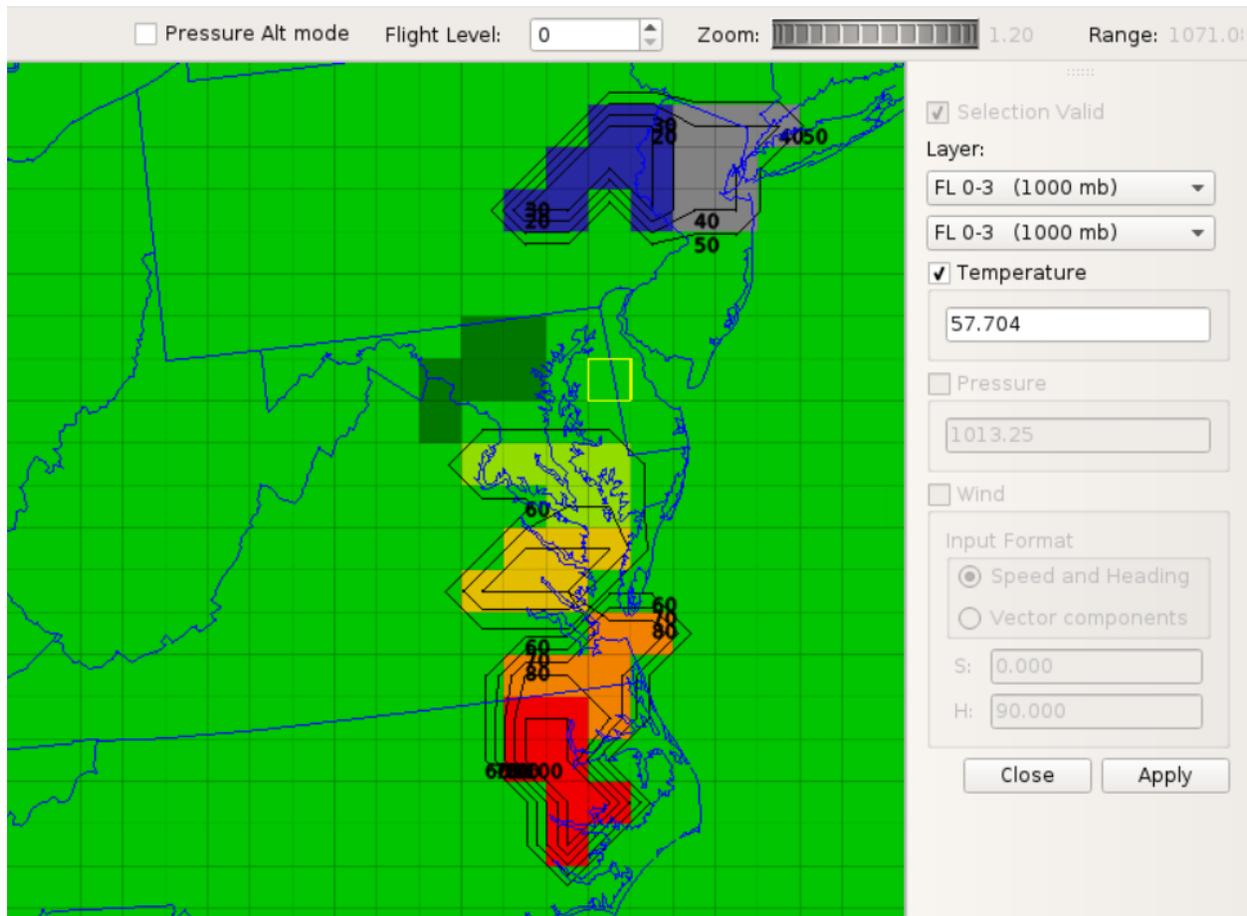


Figure 131. Defining Temperature

### 9.5.1.2. Pressure

Pressure values are specified in millibars (mb) units of pressure. The "standard" sea level pressure is 1013.25 mb. The range of pressure is 100 mb - 1100 mb. Only a single pressure value can be specified for all stratum levels.

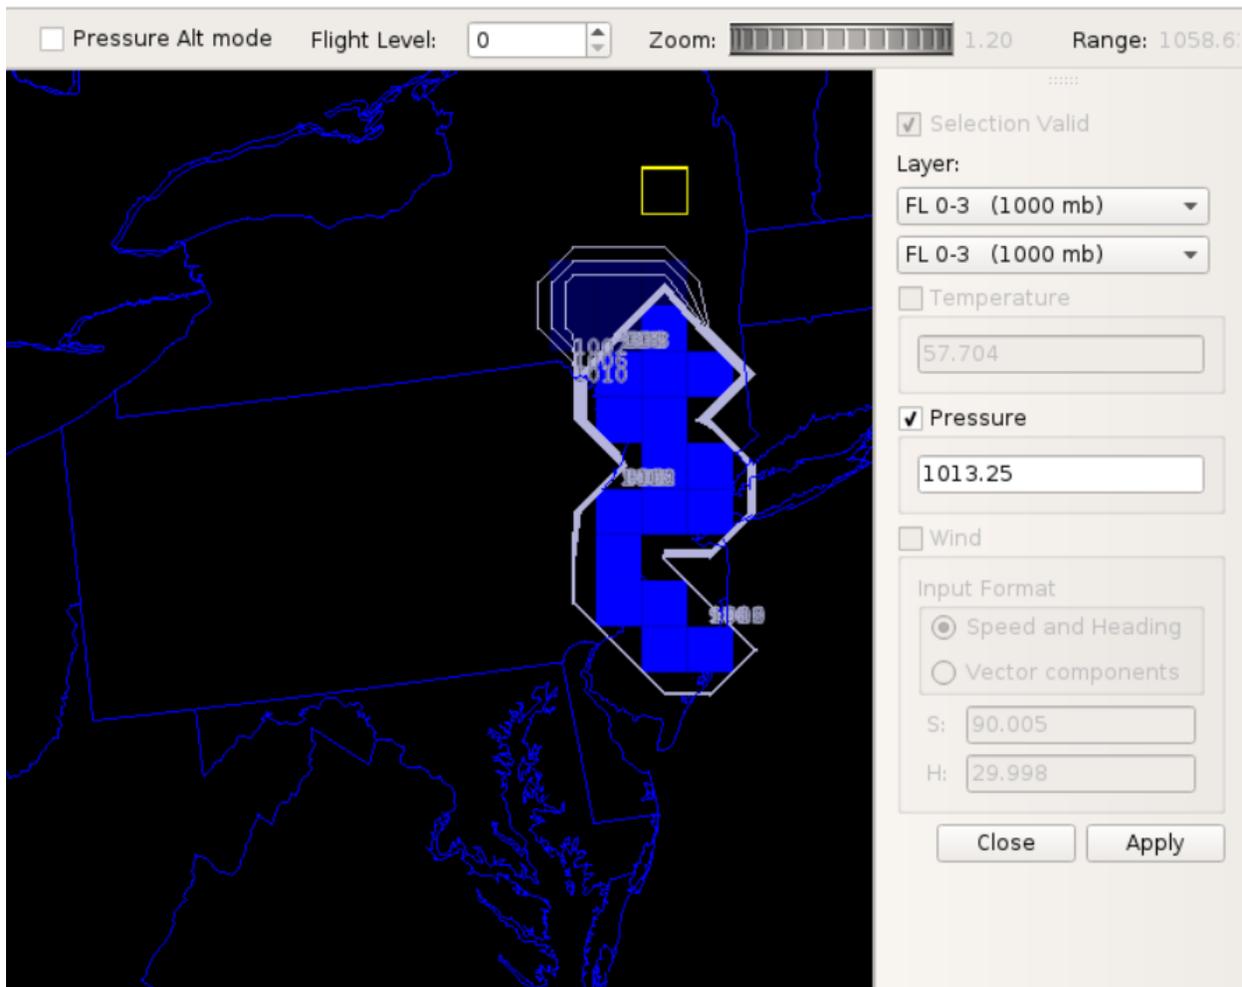


Figure 132. Defining Pressure

### 9.5.1.3. Wind

Wind values can be specified in several ways, such as speed and heading, U and V components, or X and Y components depending on type of the input format selected. Also different wind values can be specified at a different stratum levels.

The Speed and Heading input format defines wind speed in knots and heading in degrees. Depending on selected option **Use X/Y coords**, the wind values are aligned to true north (when turned on) or to RUC grid (when turned off).

The Vector component input format defines wind using X/Y or U/V vectors in meters/sec. Depending on selected option **Use X/Y coords**, the wind values are aligned to true north (when turned on) or to

RUC grid (when turned off). The X/Y vectors are aligned to the true north, where X is E/W component and Y is N/S component. The U/V components are aligned to RUC grid, where U corresponds x axis of the grid plane and V corresponds the y axis of the grid plane.

**NOTE:** When option **Use X/Y coords** is not set, the relative orientation of the axis does not correspond to true north orientation (North-South / East/West) due to the fact that RUC #236 grid is represented using lambert conformal projection with offset focal point. That is the projection focal point is not on an axis passing through the two geographic poles and grid plane axes do not follow constant latitude and longitude lines.

When option **Use X/Y coords** is set, the orientation values are converted from True North to RUC grid orientation specific to location on the grid. RUC #236 grid data is always represented using lambert conformal projection regardless of input orientation.

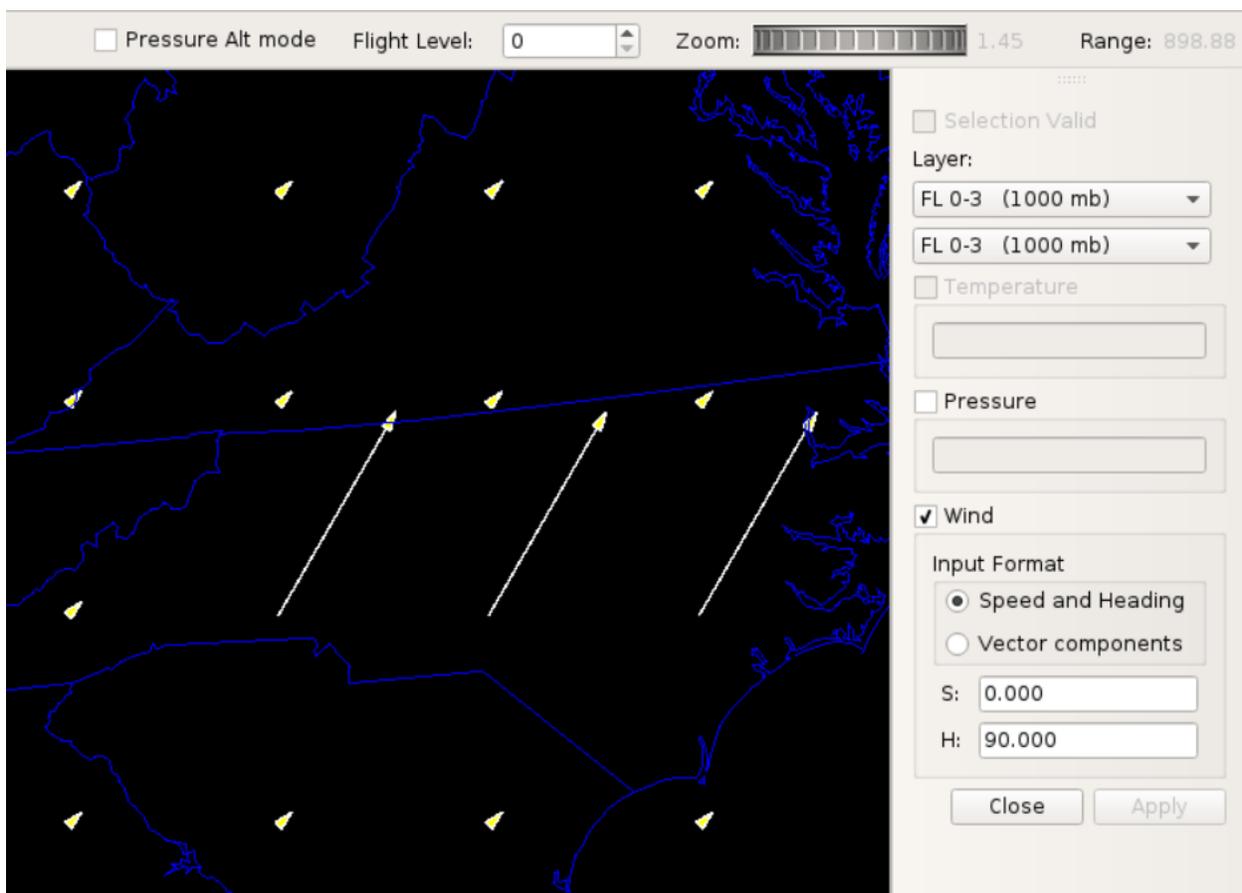



Figure 133. Defining Wind

Vector lines on the map represent wind direction and speed: longer lines representing higher wind speeds, shorter lines representing lower wind speeds.

Wind affects precipitation areas, causing them to drift and morph much as real weather is affected by winds aloft. Precipitation is only affected when winds are defined at the 1000mb layer. Adding wind values to specific layers also affect aircraft performance for targets at a particular level causing them to slow down in a head wind and speed up with a tail wind.

### 9.5.2. Precipitation Editor

To start editing precipitation select the Precip weather attribute. The editor opens docked on the right side of the screen and may be repositioned on the screen if needed by grabbing its selection bar. To exit edit mode, use **Close** button on the editor dialog.

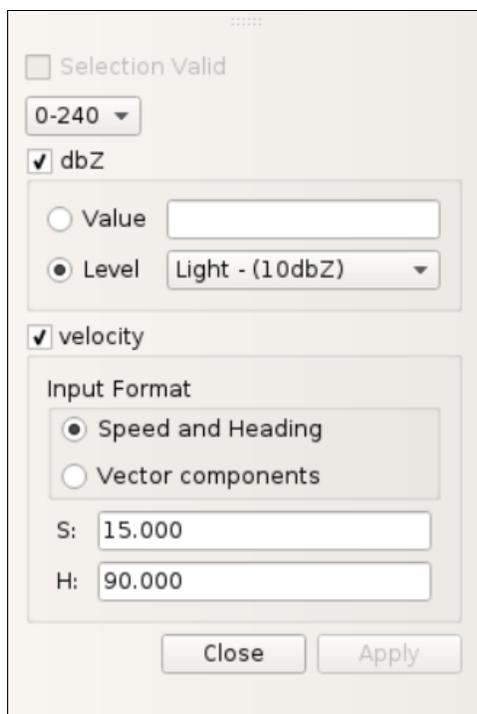

**Figure 134. Precipitation Editor**

#### ***Strata / Interval***

The Strata / Interval levels are in 5 increments (0-240, 240-600, 330-600, 600-0), that the new precipitation values can be applied to.

### ***dbZ***

The value of intensity of precipitation. A specific weather level value can be entered in the Value dialog or select Level and choose between Light, Moderate or Heavy.


### ***velocity***

The speed and direction of moving precipitation. The values can be input in several formats as well as relative to true north or precip grid. The orientation precip direction is based on the same projection as winds. The values applied here take precedence over RUC wind values for defining moving precipitation.

While in Enter Selection Mode, hold the **Shift** button and use left mouse click and drag to draw a loop around the desired area to edit the weather values. Additional cells may be selected by holding **Ctrl** button and selecting additional area using left mouse click and drag or by right mouse click on desired cell. A right mouse click on a cell clears previous selection and selects a single cell. Also, a left mouse click clears current selection.

### **9.5.2.1. Precipitation**

Precipitation value is specified in decibels (dbZ) units of precipitation and range from 0-99. This determines the intensity of the precipitation cell that was selected. The "default" precipitation in new scenario is 0 - no precipitation. Additionally, precipitation can be specified with a velocity using the same input format as Wind in RUC editor.

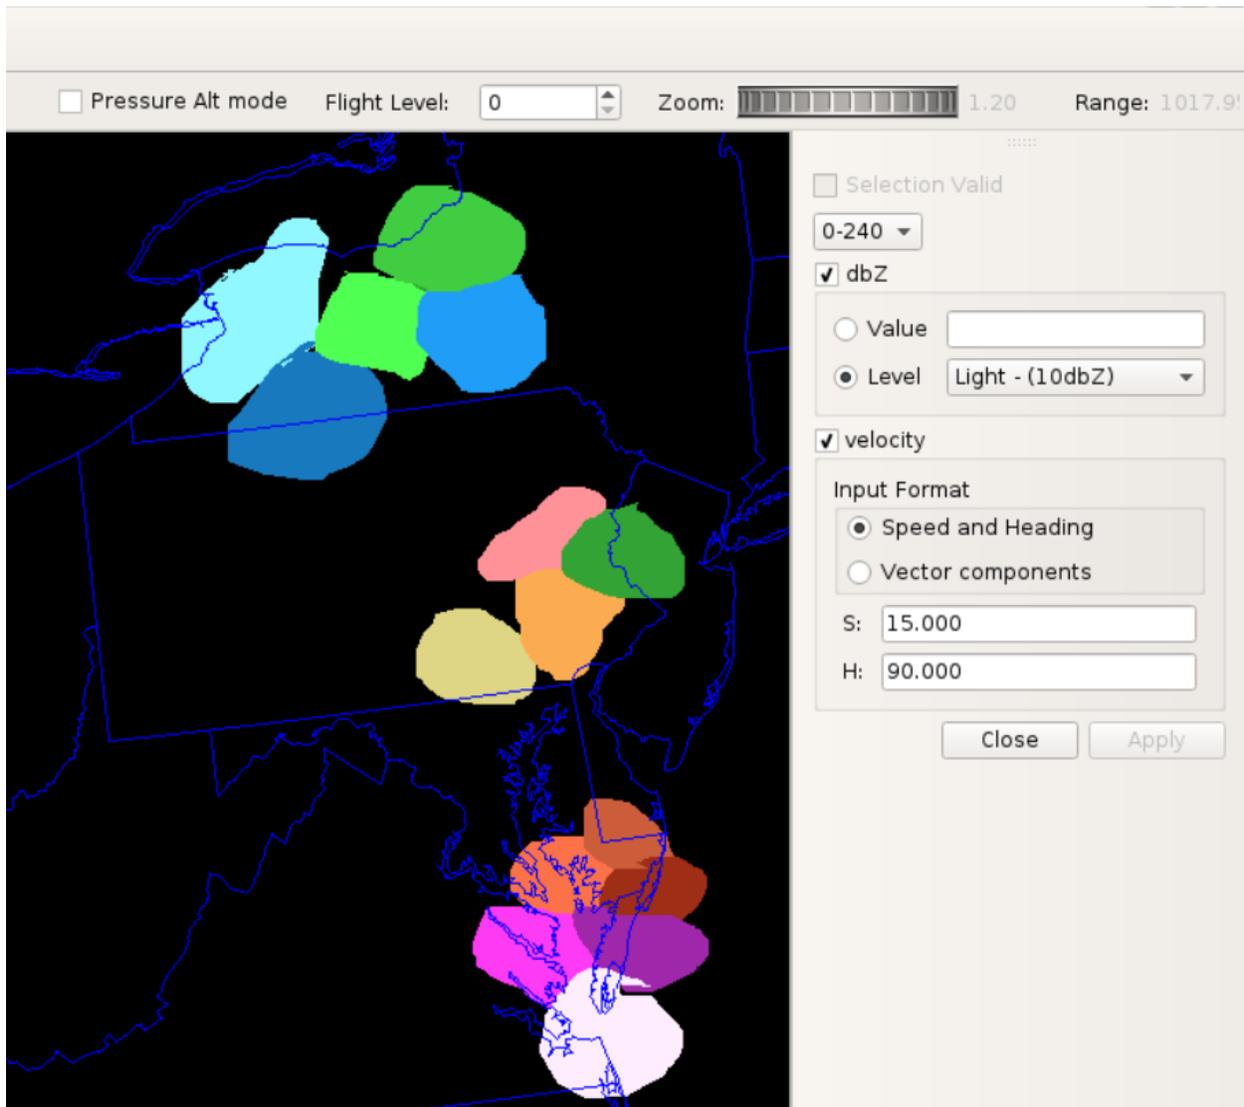

**Figure 135. Defining Precipitation**

Precipitation level can also be specified by one of the preset levels Low, Moderate or High. For additional reference below tables can be used to specify precipitation intensity for specific radar type.

**Table 12. ASR Precipitation Levels**

<b>Level</b>	<b>Description</b>
9 – 29	level 1
30 – 40	level 2
41 - 45	level 3
46 - 49	level 4
50 - 56	level 5
57 +	level 6

**Table 13. ARSR Precipitation Levels**

<b>Level</b>	<b>Description</b>
10 – 29	Light precipitation
30 – 49	Moderate precipitation
50 +	Heavy precipitation

## 10. Source Scenario Files

When a scenario is created, a directory is made with the name of the scenario in the location that is specified. All aspects of the scenario are written to a set of files within the scenario directory.

### 10.1. Scenario Components

The scenario.xml file defines all of the components of the scenario. All of the adaptation and customization that is selected when the scenario is created are listed in this file. The scenario.xml file lists each of the files that contain scenario targets, system commands, preferences, record select indicators, script definitions, active runways, restrictions, pilot controls, and device controls. This file also lists the name of the weather scenario if one was selected when the scenario was created.

```
<scenario version="11.2.9.1">
  <airspace>
    <eadp dir="ERAM/ZNY">
      <atcoach file="STARS/ph1/ph1_r2703_y6_40_01b_ph1.st_b38" name="PPP"/>
    </eadp>
  </airspace>
  <facility>
    <eadp dir="ERAM/ZNY">
      <atcoach file="STARS/ph1/ph1_r2703_y6_40_01b_ph1.st_b38" name="PPP"/>
    </eadp>
  </facility>
  <targets>tgts.xml</targets>
  <syscmds>syscmds.xml</syscmds>
  <prefs>prefs.xml</prefs>
  <rsi>rsi.xml</rsi>
  <scriptDefinitions>scriptDefinitions.xml</scriptDefinitions>
  <activeRunways>activeRunways.xml</activeRunways>
  <restrictions>restrictions.xml</restrictions>
  <pilotControls>pilotControls.xml</pilotControls>
  <devctl>devctl.xml</devctl>
</scenario>
```

## 10.2. Targets

The tgts.xml file contains all of the targets that have been created or imported into the scenario. It includes all of the attributes of each target, such as name, start time, aircraft type, route, dynamics, and any target specific messages that have been scripted or frozen.

```
<tgtslist>
  <target autogen="0" bcn="0353" icaoAddress="0x111111" name="CA03" nasEquip="A"
time="00:22:04" transponderType="modes">
  <dynamics achar="B737" flevel="080" speed="200tas">
    <route>ACY..PHL</route>
    <macro>-&gt;200tas@8000ft +39:35:27.73, -074:17:41.88 PHL -&gt;drop</macro>
  </dynamics>
  <events>
    <macro delta="00:00:00">-&gt;hold{turnDir:R}{legs:1}</macro>
  </events>
</target>
  <target autogen="0" bcn="0354" icaoAddress="0x111112" name="CA04" nasEquip="A"
time="00:22:04" transponderType="modes">
  <dynamics achar="B737" flevel="080" speed="200tas">
    <route>ACY..PHL</route>
    <macro>-&gt;200tas@8000ft +39:34:16.99, -074:13:36.38 +39:34:14.31, -074:13:26.67 -
&gt;drop</macro>
  </dynamics>
  <events>
    <macro delta="00:00:00">-&gt;hold{turnDir:L}{legs:1}</macro>
  </events>
</target>
  <target autogen="0" bcn="0357" icaoAddress="0x111113" name="CA07" nasEquip="A"
time="00:23:01" transponderType="modes">
  <dynamics achar="B737" flevel="080" speed="200tas">
    <route>ACY..PHL</route>
    <macro>-&gt;200tas@8000ft +40:05:03.34, -075:02:53.22 -&gt;090 +40:05:03.44, -
075:02:53.22 -&gt;drop</macro>
  </dynamics>
  <events>
    <macro delta="00:00:00">-&gt;hold{turnDir:R}{legs:1}</macro>
    <ssrBlipScanChange delta="00:03:49" value="0"/>
    <psrBlipScanChange delta="00:03:49" value="0"/>
    <psrBlipScanChange delta="00:06:58" value="1"/>
    <ssrBlipScanChange delta="00:06:58" value="1"/>
  </events>
</target>
```

```
</tgtlist>
```

### 10.3. System Commands

The syscmds.xml file contains messages not related to a particular target. Messages such as combine sector, switch activity, and inhibit auto handoff can be scripted as general set-up messages.

```
<syscmdlist>  
  <ssrvmsg device="d02" injectorName="zla" time="00:00:00">CS  
18/01+02+03+04+05+06+07+08</ssrvmsg>  
  <ssrvmsg device="d02" injectorName="zla" time="00:00:00">CS  
18/10+11+12+13+14+15+16+17</ssrvmsg>  
</syscmdlist>
```

### 10.4. Preferences

The prefs.xml file lists global scenario preferences such as scenario run time, system setup time, and flight plan lead time.

```
<Prefs>  
  <comments>Default prefs</comments>  
  <runtime>03:00:00</runtime>  
  <syssetuptime>00:00:05</syssetuptime>  
  <tgtintermsgtime>00:00:03</tgtintermsgtime>  
  <fpleadtime>00:05:00</fpleadtime>  
  <trackStartOffset>00:00:24</trackStartOffset>  
  <qnleadtime>00:00:20</qnleadtime>  
  <tileadtime>00:02:00</tileadtime>  
  <hoacceptdelta>00:00:05</hoacceptdelta>  
  <noiseseed>-1</noiseseed>  
  <deriveFPLsSource/>  
  <allTargetsCpdlc>1</allTargetsCpdlc>  
</Prefs>
```

## 10.5. Record Select Indicators

The rsi.xml file lists all of the record select indicators including the number and description of each RSI.

```
<rsilist>
  <rsi description="SOUTHERN APPROACH">2</rsi>
  <rsi description="NORTHERN APPROACH">1</rsi>
  <rsi description="MSAW TARGETS">3</rsi>
</rsilist>
```

## 10.6. Script Definitions

The scriptDefinitions.xml file is the place where scenario developers can create sets of messages such as DataComm logon scripts or TTP flight updates. The DataComm logon scripts can be edited using the Script Definitions tab of the Scenario Editor. However, the XML formatted TTP messages must be manually edited with a text editor such as **vi**.

```
<scripts>
  <script name="AMD1">
    <actions processor="avionics" trigger="D3*">
      <ssrvmsg delay="00:00:30.00" device="R02" host="zbw" injectorName="zbw">AM @{aid} ALT
250 /U</ssrvmsg>
    </actions>
    <actions processor="avionics" trigger="D3*">
      <ssrvmsg delay="00:01:00.00" device="R02" host="zbw" injectorName="">QU /U KB75G KBOS
\D @{aid}</ssrvmsg>
    </actions>
  </script>
  <script name="KBOS-04R-22L">
    <triggerable processor="kbos" trigger="FH">
      <ttpMsg id="@{aid}" injectorName="kbos" delay="00:00:05" >
        <nas:NasMessage xmlns:fb="http://www.fixm.aero/base/4.0"
xmlns:fixm="http://www.fixm.aero/fixm/4.0" xmlns:fx="http://www.fixm.aero/flight/4.0"
xmlns:mesg="http://www.fixm.aero/messaging/4.0" xmlns:nas="http://www.faa.aero/nas/4.1">
          <nas:flight xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
xsi:type="nas:TfdmFlightType">
            <fx:departure departurePointText="KBOS"
departureReadinessIndicator="DEPARTURE_READY" xsi:type="nas:TfdmDepartureType">
              <nas:acceptableRunway>04R 22L</nas:acceptableRunway>
```

```

        <nas:offBlockTime>
            <nas:initial timeReference="UTC">%DATETIME/yyyy-MM-
ddThh:mm:ss.00Z/01:29:55%</nas:initial>
        </nas:offBlockTime>
        </fx:departure>
    </nas:flight>
    <nas:metadata messageType="FlightUpdate"/>
</nas:NasMessage>
</ttpMsg>
</triggerable>
</script>
</scripts>

```

## 10.7. Active Runways

The activeRunways.xml file is where scenario developers can define the default runway for each airport that is listed. This file must be manually edited with a text editor such as **vi**.

```

<activeRunways>
  <activeRunway>
    <airport>LAX</airport>
    <departureRunway>06L</departureRunway>
    <arrivalRunway>06R</arrivalRunway>
  </activeRunway>
</activeRunways>

```

## 10.8. Restrictions

The restrictions.xml file is where restrictions can be defined for each fix and airport pair that is listed. This file must be manually edited with a text editor such as **vi**.

```

<restrictions>
  <restriction>
    <key>ESS0</key>
    <restriction>&lt;250cas@&lt;10000ft</restriction>
    <arpt>KPHL</arpt>
    <arpt>KPNE</arpt>
  </restriction>
</restrictions>

```

```
<arpt>KTTN</arpt>
</restriction>
</restrictions>
```

## 10.9. Pilot Controls

The pilotControls.xml file is where sector positions can be mapped to simulation pilot positions. When a handoff is accepted by a sector position controller in a dynamic simulation, the scenario target will be handed off to the simulation pilot mapped to that sector. This file must be manually edited with a text editor such as **vi**.

```
<pilotControls>
  <pilotControl controller="ZNY:PPP/1F" pilot="10" />
  <pilotControl controller="ZNY:PPP/1S" pilot="20" />
  <pilotControl controller="ZNY:PPP/1N" pilot="30" />
  <pilotControl controller="ZNY:PPP/1W" pilot="40" />
  <pilotControl controller="ZNY:PPP/1Y" pilot="50" />
</pilotControls>
```

## 10.10. Device Control

The devctl.xml file allows scenario developers to create events that modify the behavior of a simulated device. This file must be manually edited with a text editor such as **vi**.

When running a scenario with a simulated Terminal Flight Data Manager (TFDM) interface, devctl lines can inject events for their TFDM Consumers. An example line would be as follows with the facility being the TFDM Consumer initiating the event and the time being relative to the scenario start time:

```
<devctl devType="rtcs" facility="klax" time="00:01:30">
  <hbPeriod>7</hbPeriod>
</devctl>
```

**Table 14. Parameters for Dev Control**

Parameter	Description
<code>&lt;hbPeriod/&gt;</code>	The time (seconds) that the consumer injects heartbeat messages.
<code>&lt;disableHBs/&gt;</code>	The number of iterations that a heartbeat will not be sent. If a value < 0 or a value of 'true' is set, heartbeats will be disabled.
<code>&lt;retransmitTimeout/&gt;</code>	The time (seconds) that the consumer will wait before re-injecting an RTCS message, that requires a response.
<code>&lt;maxRetries/&gt;</code>	The number of times that a consumer will resend an RTCS message that requires a response.
<code>&lt;delayReceiptAck/&gt;</code>	The time (seconds) that the consumer will wait before sending a receipt acknowledgement message.
<code>&lt;disableReceiptAck/&gt;</code>	Boolean, if a value of 'true' is set consumer will not send receipt acknowledgement messages.
<code>&lt;unsolicitedReconWaitTime/&gt;</code>	The time (seconds) that the consumer will wait for a solicited recon from the producer before issuing a recon request.
<code>&lt;reconRequest/&gt;</code>	Sends a recon request message to the producer.

## Appendix A. Acronyms

AAR	Adapted Arrival Routes
AAV	Aircraft Alert Volumes
ACID	Aircraft Identification
ADAR	Adapted Departure/Arrival Routes
ADR	Adapted Departure Routes
ADS-B	Automatic Dependent Surveillance – Broadcast
AIG	Application Interface Gateway
AOI	Area of Interest
API	Application Program Interface
ARSR	Air Route Surveillance Radar
ARTCC	Air Route Traffic Control Center
ARTS	Automated Radar Terminal System
ASDI	Aircraft Situation Display to Industry
ASR	Airport Surveillance Radar
ASR-9	Airport Surveillance Radar Model-9
ASTERIX	All Purpose Structured Eurocontrol Radar Information Exchange
ATC	Air Traffic Control
AViD	Airspace Visualization Display
BRTQC	Beacon Real Time Quality Control
CAS	Commercially Available Software
CD	Common Digitizer
CDR	Continuous Data Recording
CMS	Common Message Set
DASI	Digital Altimeter Setting Indication System
DASR	Digital Airport Surveillance Radar

---

DataComm	Data Communications
DME	Distance Measuring Equipment
DP	Departure Procedure
DYSIM	Dynamic Simulation
ECG	External Communications Gateway
ECGP	External Communications Gateway Protocol
EDDS	En Route Data Distribution System
ERAM	En Route Automation Modernization
ETMS	Enhanced Traffic Management System
FAA	Federal Aviation Administration
FAV	Fixed Airspace Volumes
FDIO	Flight Data Input/Output
GIM-S	Groundbased Interval Management-Spacing
GSGT	Graphic Simulation Generation Tool
GUI	Graphical User Interface
IFDT	Interfacility Flight Data Transfer
JMS	JAVA Messaging Service
JRE	Java Runtime Environment
MIS	Metering Information Service
Mode 3/A	Identification Reporting Mode of Secondary Radar
Mode C	Altitude Reporting Mode of Secondary Radar
Mode S	Mode Select Beacon System
MLAT	Multilateration
NAS	National Air Space
NDB	Non-directional (radio) Beacon
NEMS	NAS Enterprise Messaging System
RAPPI	Random Access Plan Position Indicator
RF	Radius-to-fix
RSI	Record Select Indicator

RTCS	Release Time Coordination Service
RTQC	Real Time Quality Control
SAA	Special Activities Airspace
SAC	System Area Code
SDRR	Simulation Driver Radar Recorder
SIC	System Identity Code
SIRS	STARS Interfacility and Radar Simulator
SMIF	Simulation Interface Support
SSRV	Simulation Services
STAR	Standard Terminal Arrival Route
STARS	Standard Terminal Automation Replacement System
SWIM	System-Wide Information Management
TACAN	Tactical Air Navigation System
TARP	Time-based Archive Recording Player
TAV	Terrain Alert Volume
TBFM	Time Based Flow Management
TFDM	Terminal Flight Data Manager
TFMS	Traffic Flow Management System
TRACON	Terminal Radar Approach Control
TSIM	TBFM Simulation
TTP	TFDM Terminal Publication
VOR	Very High Frequency (VHF) Omni-Directional Range
WAM	Wide Area Multilateration
WJHTC	William J. Hughes Technical Center